8. Exploded Views and Parts List

8.1 Main Exploded View ..... page(8-2)
8.2 Top Cover Exploded View ..... page(8-5)
8.3 OPE Ass'y Exploded View ..... page(8-6)
8.4 Scan Upper Ass'y Exploded View ..... page(8-8)
8.5 Main Frame Exploded View ..... page(8-10)
8.6 Fuser Unit Exploded View ..... page(8-13)
8.7 Exit Cover Exploded View..... page(8-15)
8.8 Scan Lower Ass'y Exploded View..... page(8-17)
8.9 Cassette Unit Exploded View ..... page(8-18)
8.10 SCF Frame Ass'y Exploded View ..... page(8-21)

- Deal drawings and service parts are declared for the items with higher rate of inferiority and replaceable in the level of service description only.
- If inferiority occurs, you can replace the parts by the unit declared in deal drawings and service items.

Way to observe Part Code & Description

Part code and Description is quoted and controlled by determined standard. Refer to this determined standard, it will help with ordering Part.

• **There are two kinds of Part code inscription type.**

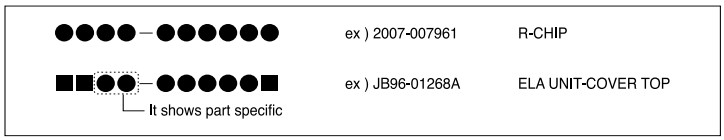

(● : figure, ■ : character (alphabet))

Type 1 : Controlled by Company : It can be commonly used for all kinds of product SEC produce. Mostly, electronics Parts.

Type 2 : Controlled by Division : It is used or one produce. Mostly, Mostly, mechanical Parts.

• **A/S privately used part :** It is only used for A/S .

• **Ass'y part :** Assembled by more than 2 Parts. If necessary part is not A/S Part, Ass'y part including necessary par can be used. It is shown in the diagram and drawing of SVC manual.

• Ass'y part and A/S privately used Part is distinguished by part Code and Description.
The are inscription type 2. It is recognized by Part character and front side of description.

DIVISION	PART CODE	DESCRIPTION
A/S Private	**81-****** (JB81-00039A)	AS-***** (AS-USE)
ASS'Y Part	**75-****** (JB75-00068A)	MEC-***** (MEC-CHUTE)
ASS'Y Part	**92-****** (JB92-01131A)	PBA ****** (PBA MAIN-CONTROLLER)
ASS'Y Part	**97-****** (JB97-01089A)	MEA ****** (MEA UNIT-PULLEY IDLE)

8.1 Main Exploded View

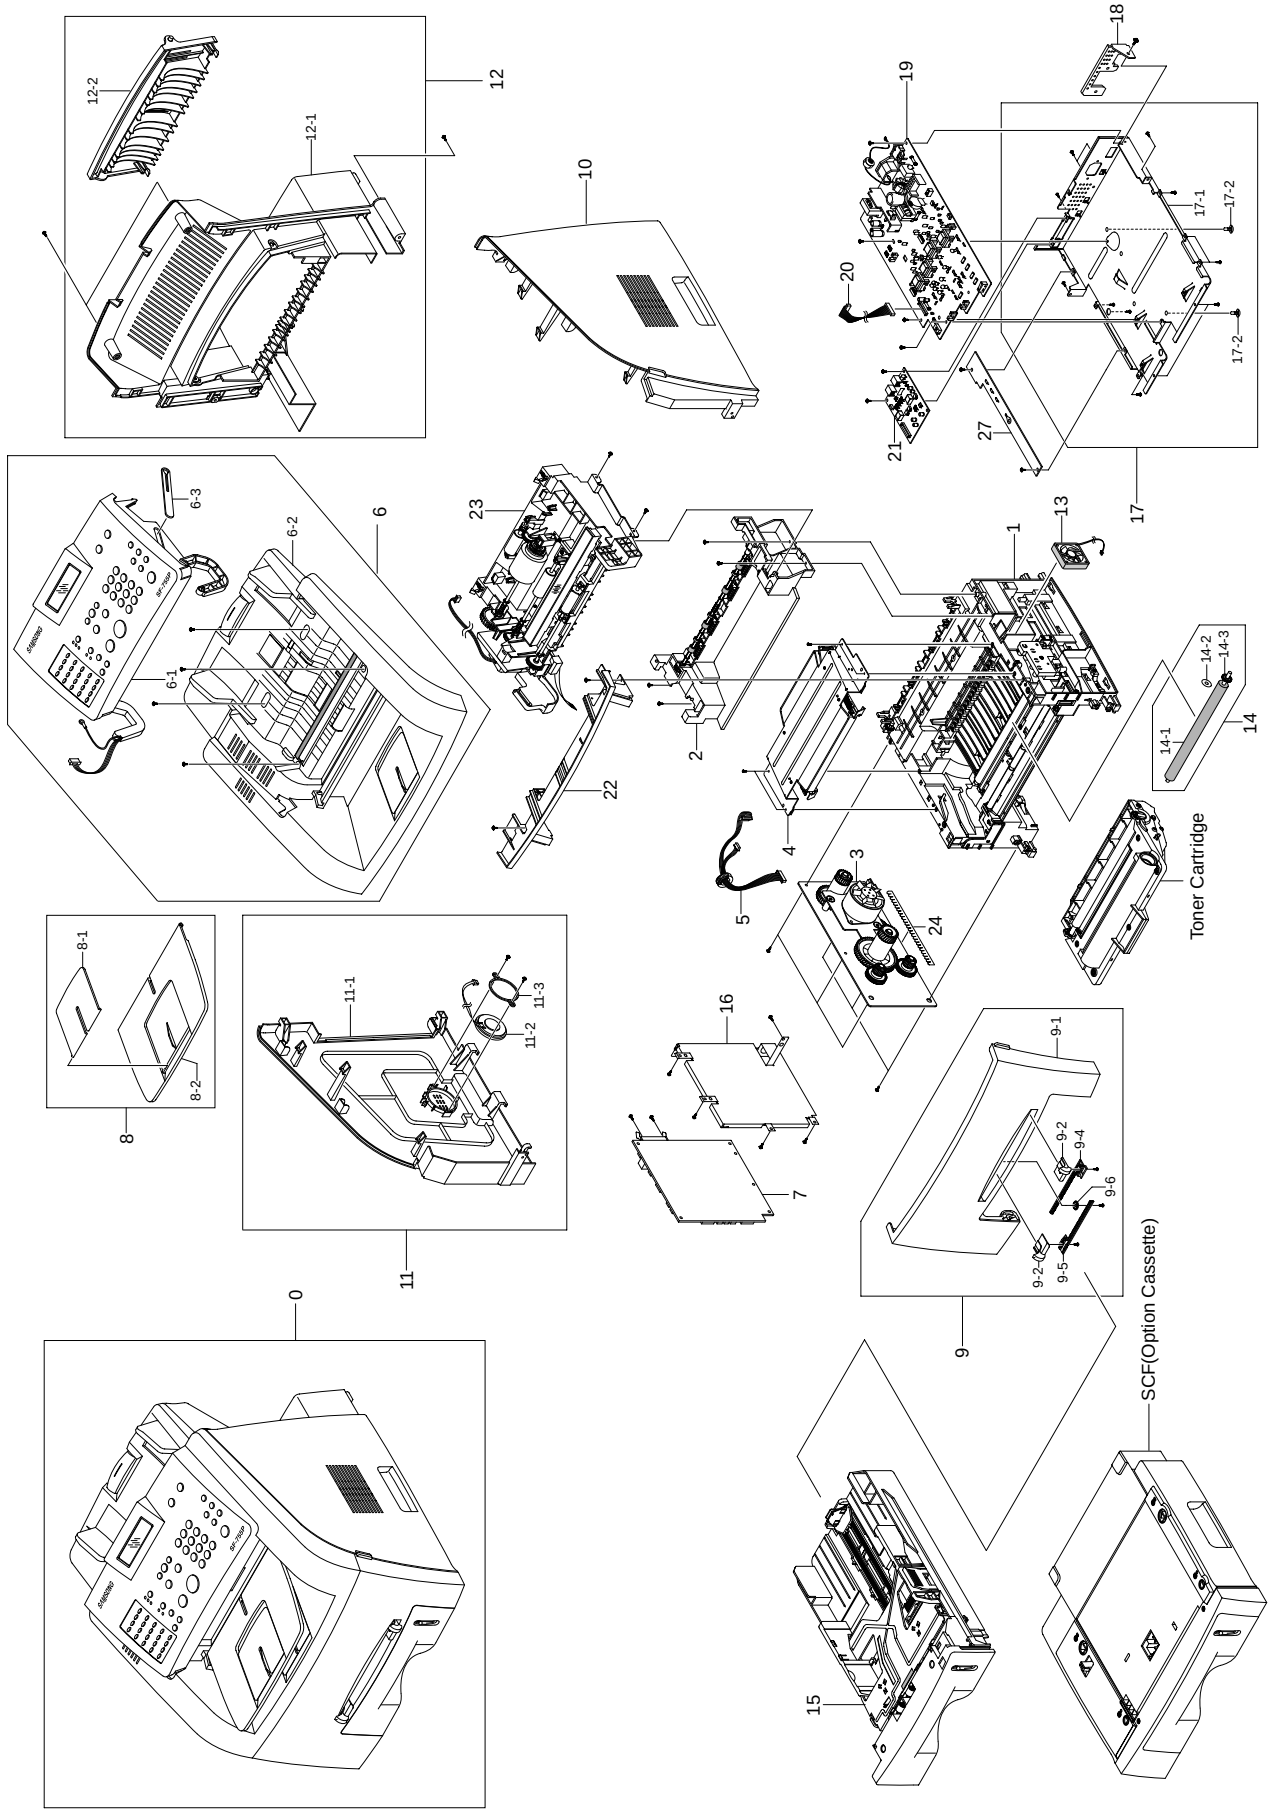

Main Exploded View Parts List

SA : Service Available
O : Service available **X** : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	SET	SF-755P/XEU			
1	ELA HOU-UNIT FRAME_22OV	JC96-02983A	1	O	
	ELA HOU-UNIT FRAME_11OV	JC96-02982A	1	X	
2	MEA UNIT-COVER EXIT	JC97-01854A	1	O	
3	ELA UNIT-RX DRIVE	JC96-02984A	1	O	
4	UNIT-HUMMINGBIRD LSU	JC59-00018A	1	O	
5	CBF HARNESS-LSU	JC39-00324A	1	O	
6	ELA HOU-SCAN	JC96-02981A	1	X	SF-755P
	ELA HOU-SCAN	JC96-03036A	1	X	SF-750
6-1	ELA HOU-OPE	JC96-02967A	1	O	SF-755P
	ELA HOU-OPE	JC96-03031A	1	O	SF-750P
6-2	MEA HOU-SCAN LOWER	JC96-02969A	1	O	
6-3	PMO-TRAY LINK, MP	JC72-00857A	1	O	
7	PBA MAIN-NIKE2_HIGH	JC92-01577A	1	O	SF-755P
	PBA MAIN-HIGH_FAX	JC92-01591A	1	O	SF-750
8	MEA UNIT-STACKER	JC97-01856A	1	X	
8-1	TRAY-M STACKER TX A	JC63-00325A	1	X	
8-2	TRAY-M STACKER TX B	JC63-00324A	1	X	
9	MEA UNIT-COVER FRONT	JC97-01746K	1	O	
9-1	COVER-M_FRONT	JC63-00103K	1	O	
9-2	ADJUST-M_MANUAL L	JC70-00302F	1	X	
9-3	ADJUST-M_MANUAL R	JC70-00303F	1	X	
9-4	ADJUST RACK-M-MANUAL	JC70-00304A	1	X	
9-5	GEAR-RACK_PINION	JC66-00387A	1	X	
10	COVER-M_SIDE R	JC63-00320A	1	O	
11	ELA HOU-COVER SIDE L	JC96-02974A	1	O	
11-1	COVER-M_SIDE L	JC63-00319A	1	O	
11-2	SPEAKER	3001-001494	1	O	
11-3	IPR-UNIT FIXING BRAC	GB70-10500A	1	X	
12	MEA UNIT-COVER REAR	JC97-01859A	1	O	
12-1	COVER-M_REAR	JC63-00336A	1	X	
12-2	COVER-M_FACE UP	JC63-00142D	1	X	
13	FAN-DC_HUMMINGBIRD	JC31-00027A	1	O	
14	MEA ETC-TR	JC97-01793A	1	X	
14-1	ROLLER-TRANSFER ROLLER	JC66-00528A	1	O	
14-2	PPR-SPACER_TR	JC72-00851A	1	X	
14-3	GEAR-TRANSFER	JC66-00395A	1	O	
15	MEA UNIT-CASSETTE	JC97-01861A	1	O	
16	SHIELD-MAIN BOARD	JC63-00339A	1	X	

Main Exploded View Parts List

SA : Service Available
O : Service available **X** : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
17	MEA UNIT-SHIELD ENGINE	JC97-01794A	1	O	
17-1	SHIELD-ENGINE, ROCKY	JC63-00144A	1	X	
17-2	SUPPORTER	6103-001056	2	X	
18	BRACKET-P-INLET, ROCKY	JC61-00693A	1	O	
19	SMPS(V1), 110V	JC44-00044A	1	O	⚠ 110V
	SMPS(V2), 220V	JC44-00045A	1	O	⚠ 220V
20	CBF HARNESS-ENGINE	JC39-00313A	1	O	
21	PBA SUB-LIU_USA	JC92-01575A	1	O	SF-755P
	PBA SUB-LIU_RUSSIA	JC92-01575C	1	O	SF-755P
	PBA SUB-LIU_SERIAL	JC92-01575D	1	O	SF-755P
22	COVER-M-DUMMY FRONT	JC63-00338A	1	O	
23	ELA HOU-SCAN LOWER	JC96-02969A	1	O	
24	GASKET	6302-001056	1	X	

8.2 Top Cover Exploded View

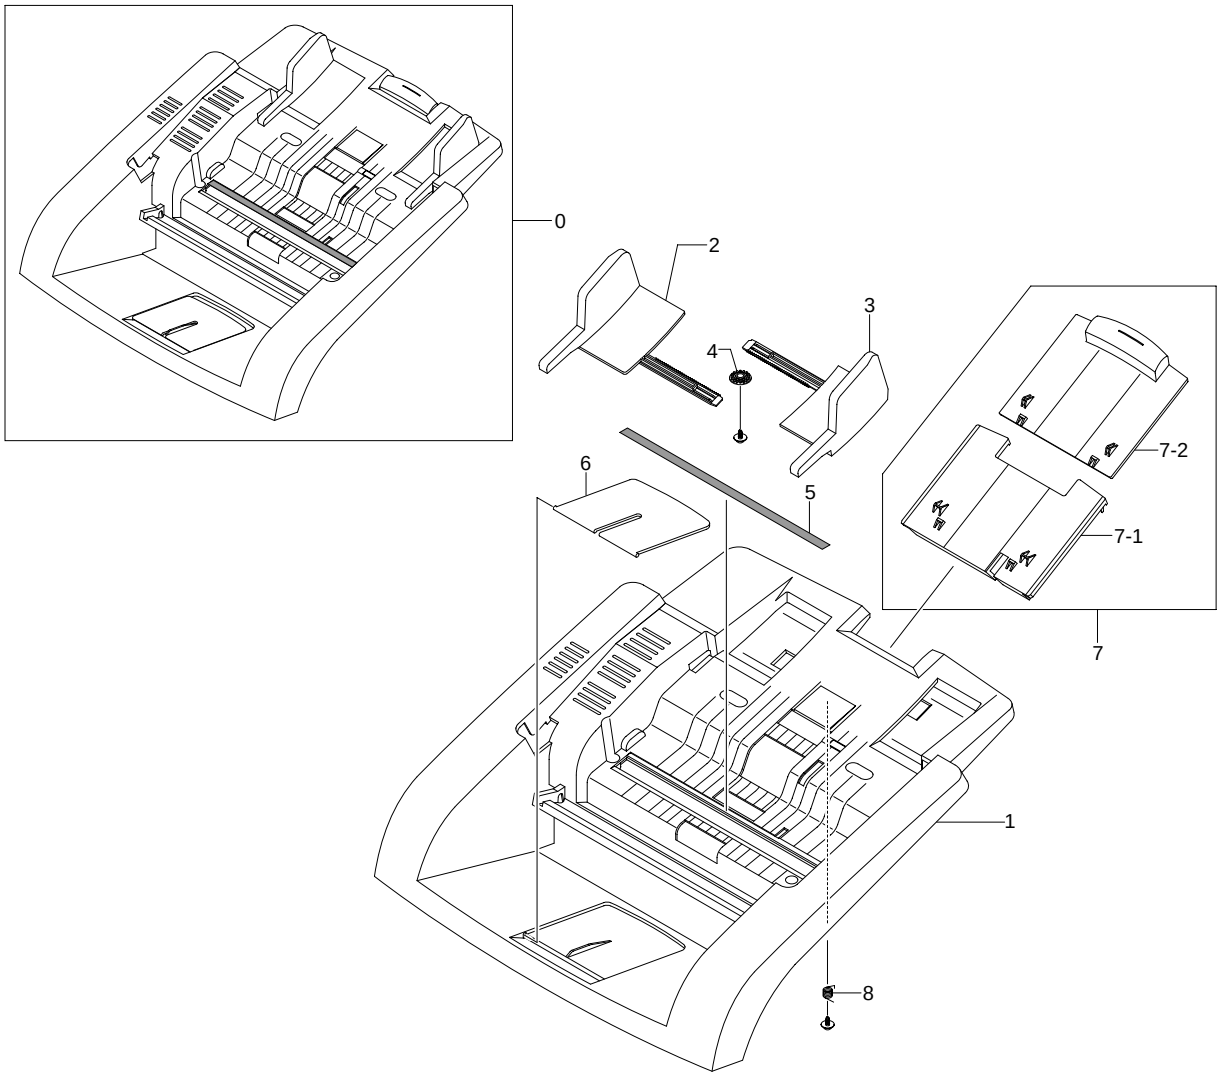

Top Cover Exploded View Parts List

SA : Service Available
O : Service available **X** : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	MEA-COVER_M_TOP	JC97-01852A	1	O	
1	COVER-M_TOP	JC63-00340A	1	O	
2	GUIDE-M_DOC L	JC61-00872A	1	O	
3	GUIDE-M_DOC R	JC61-00873A	1	O	
4	GEAR-PINION SSI	JB66-00126A	1	O	
5	SHEET-CIS	JC63-00342A	1	O	
6	TRAY-M_STACKER TX B	JC63-00325B	1	O	
7	MEA UNIT-CHUTE	JC97-01865A	1	O	
7-1	CHUTE-M_A	JC61-00860A	1	X	
7-2	CHUTE-M_B	JC61-00861A	1	X	
8	IPR-WASHER SPRING CU	JF70-10616A	1	O	

8.3 OPE Ass'y Exploded View

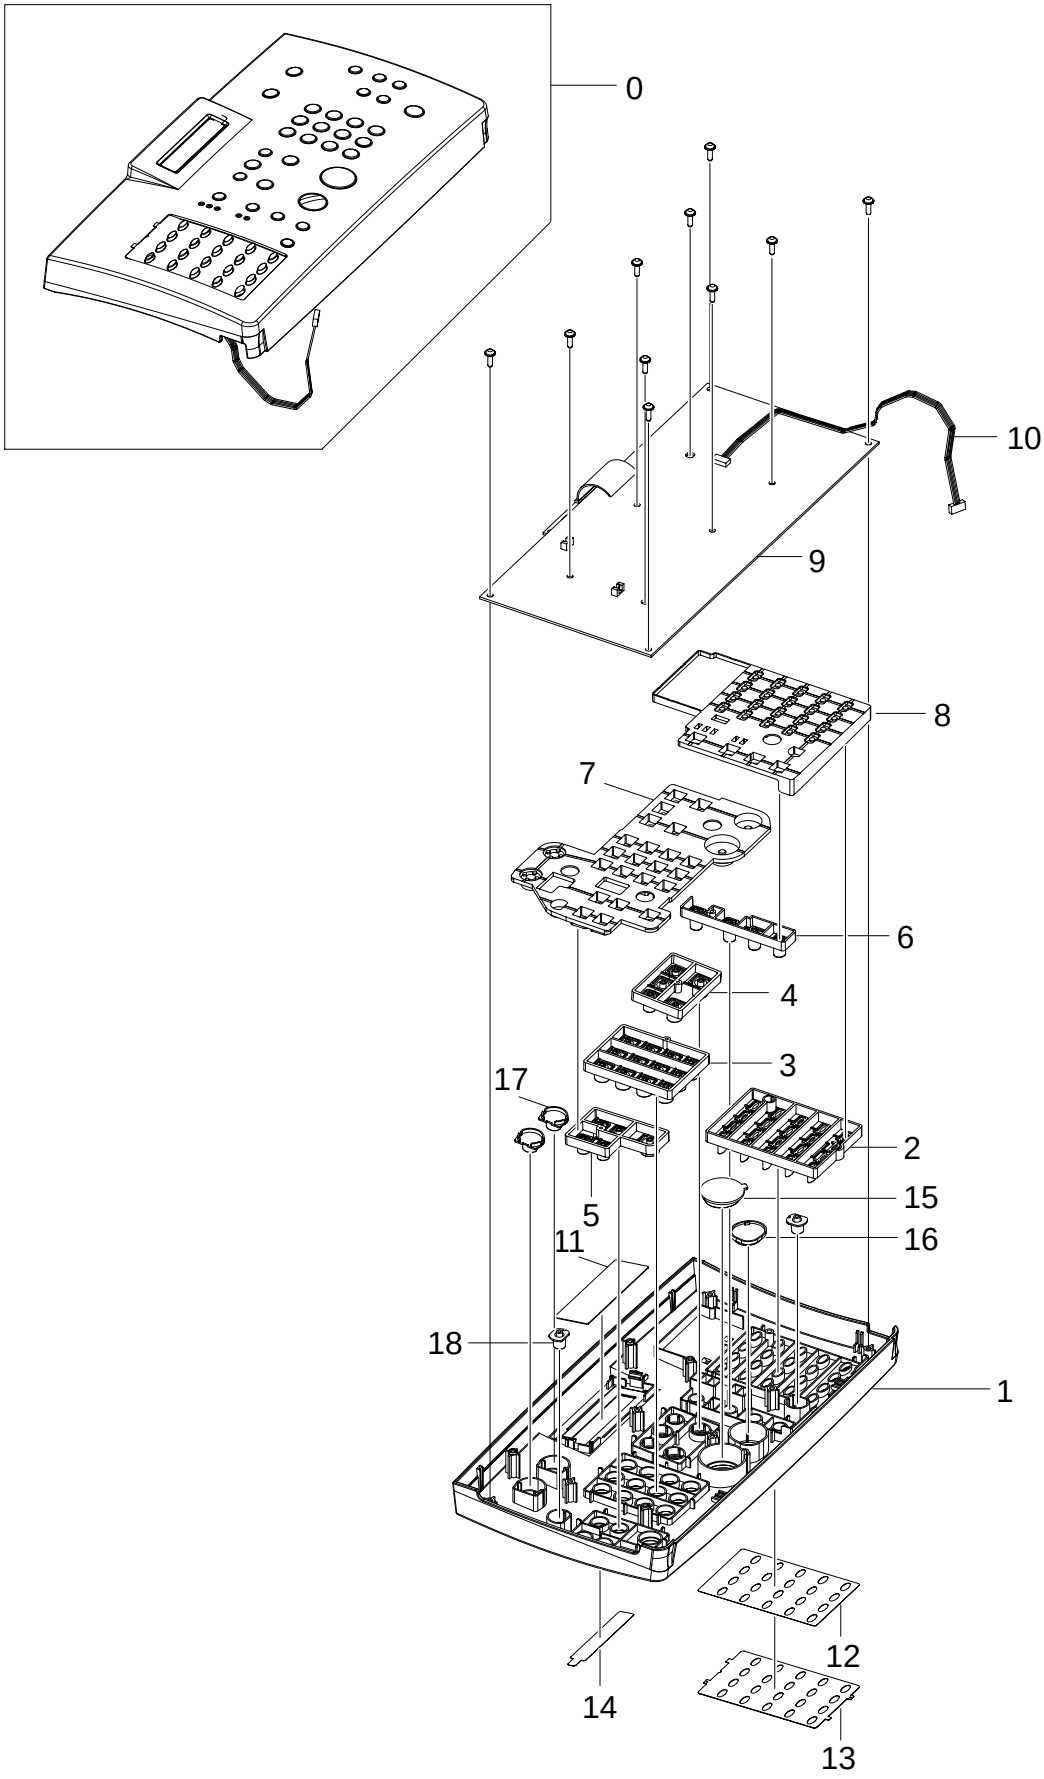

OPE Ass'y Exploded View Parts List

SA : Service Available
O : Service available **X** : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	ELA HOU-OPE	JC96-03031A	1	X	SF-750
	ELA HOU-OPE	JC96-02967A	1	X	SF-755P
1	COVER-M_OPE	JC63-00423A	1	O	SF-750
	COVER-M_OPE	JC63-00351A	1	O	SF-755P
2	KEY-M_ONE TOUCH	JC64-00113A	1	O	
3	KEY-M-TEL	JC64-00053A	1	O	
4	KEY-M-SCROLL	JC64-00056A	1	O	
5	KEY-M-FAX	JC64-00060A	1	O	
6	KEY-M_COPY	JC64-00112A	1	O	
7	RUBBER-TEL	JC73-00173A	1	O	
8	RUBBER-ONE TOUCH	JC73-00175A	1	O	
9	PBA SUB-HIGH_OPE	JC92-01549A	1	O	
10	CBF HARNESS-OPE	JC39-00314A	1	O	
11	PCT-LCD WINDOW	JC72-00672A	1	O	
12	LABEL(P)-ONE TOUCH	JC68-01221B	1	O	
13	SHEET-ONE TOUCH	JC63-00328A	1	O	
14	COVER-WINDOW SF-530	JC63-00076A	1	O	
15	KEY-M_START	JC64-00114A	1	O	
16	PMO-KEY STOP	JB72-00107B	1	O	
17	KEY-M-TONER SAVE	JC64-00058A	2	O	
18	KEY-M_SHIFT	JC64-00115A	1	O	

8.4 Scan Upper Ass'y Exploded View

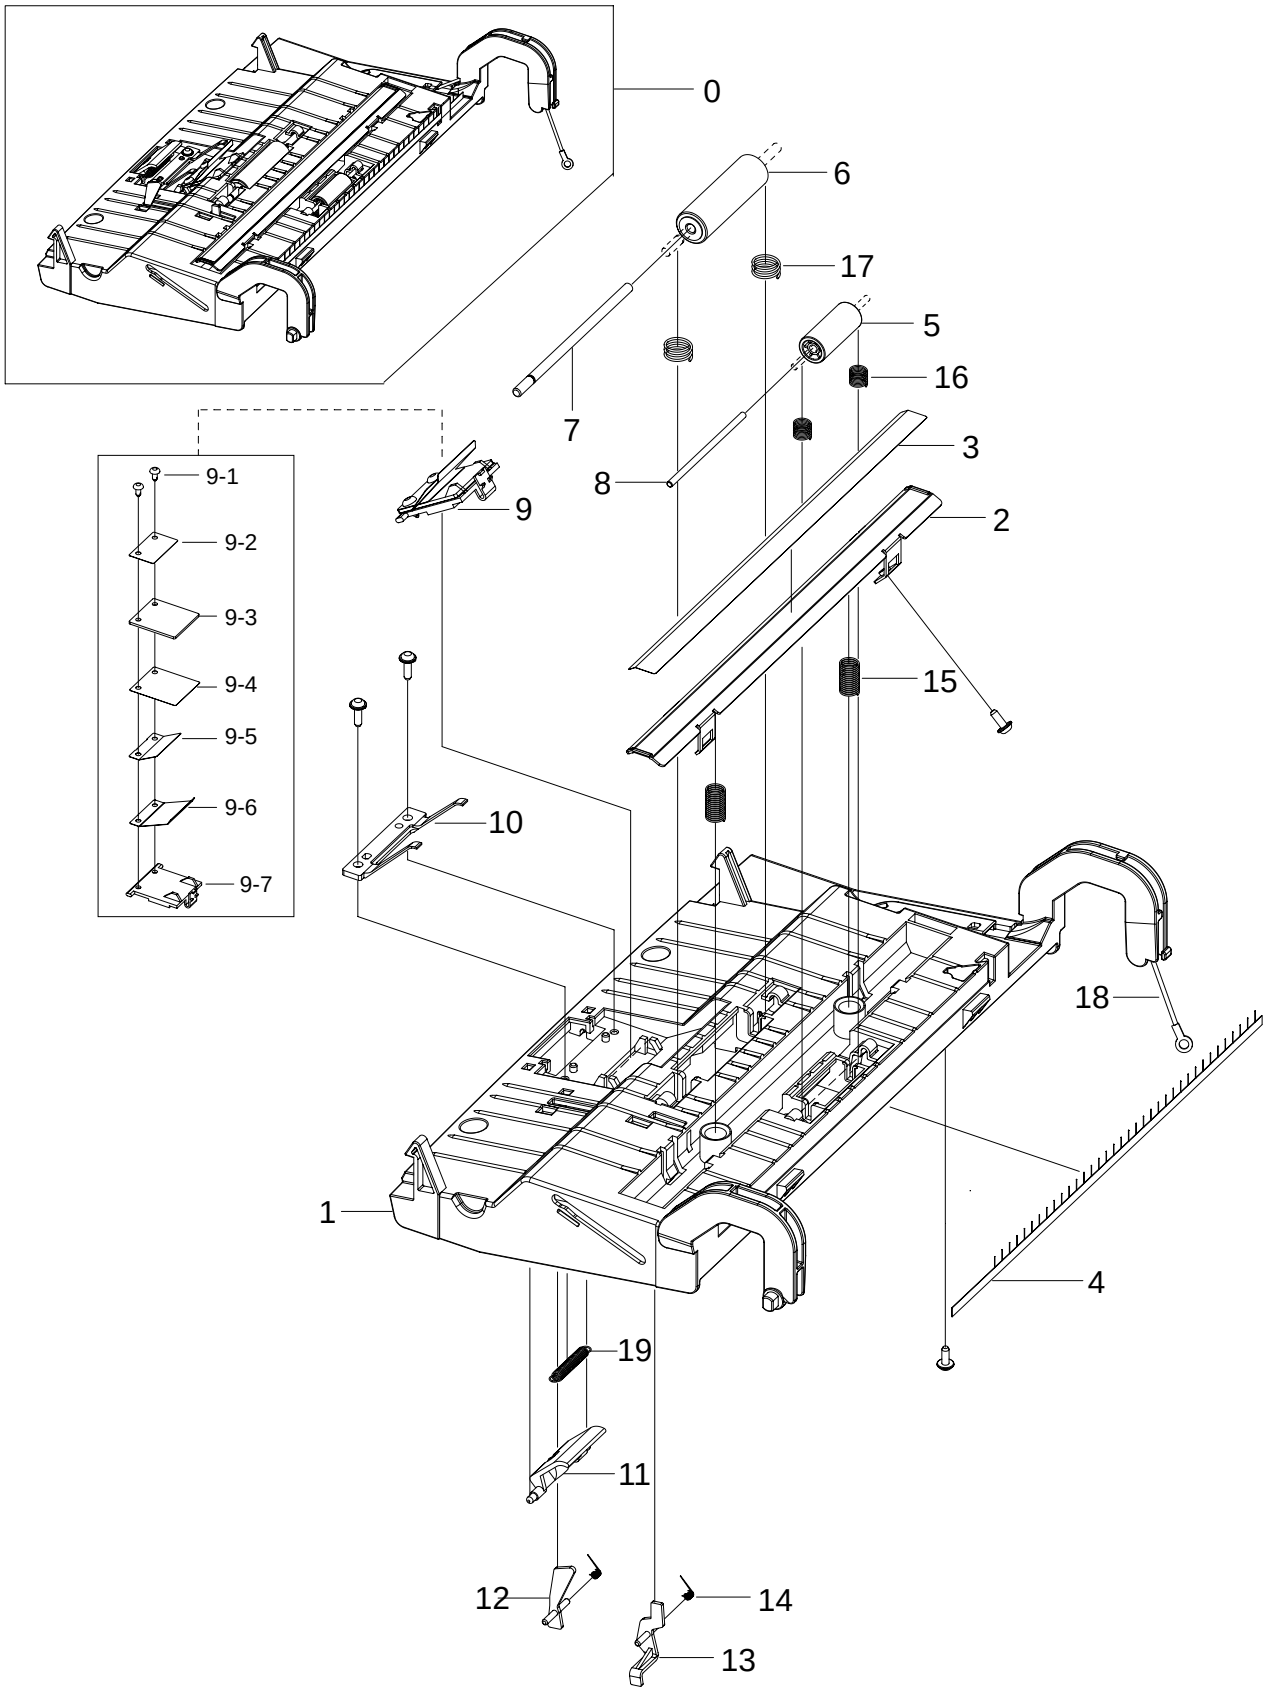

Scan Upper Ass'y Exploded View Parts List

SA : Service Available
O : Service available **X** : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	MEA-SCAN UPPER	JC97-01853A	1	O	
1	FRAME-M_SCAN UPPER	JC61-00875A	1	O	
2	IPR-BRKT WHITE BAR	JC70-00225A	1	O	
3	PPR-WHITE BAR SHEET	JC72-00752A	1	O	
4	BRUSH-ANTISTATIC 531P	JC67-00055A	1	O	
5	PMO-ROLL PINCH	JG72-40663A	1	O	
6	MEC-ROLLER IDLE	JC75-00160A	1	O	
7	SHAFT-IDLE SCAN	JC66-00692A	1	O	
8	SHAFT-IDLE FEED	JC66-00558A	1	O	
9	MEA HOU-PRESSER ADF ASS'Y	JC97-01664A	1	O	
9-1	RIVET-SNAP	6041-001028	2	X	
9-2	PPR-FILM ADF1	JC72-00930A	1	X	
9-3	SILICON/RUBBER-PAD ADF	JC73-00113A	1	X	
9-4	PPR-FILM ADF2	JC72-00929A	1	X	
9-5	IPR-SPRING ADF2	JC70-00286A	1	X	
9-6	IPR-SPRING ADF1	JC70-00285A	1	X	
9-7	PMO-HOLDER ADF	JC72-00905A	1	X	
10	PMO-SPRING ADF SET	JC72-00922A	1	O	
11	PMO-HOLDER PICK UP	JC72-00926A	1	O	
12	LEVER-M_SENSOR DOC	JC66-00686A	1	O	
13	LEVER-M_SENSOR SCAN	JC66-00687A	1	O	
14	SPRING ETC-LEVER SENSOR	JB61-00107A	2	O	
15	SPRING ETC-PICK UP MP	JC61-00041A	2	O	
16	SPRING ETC-FEED	JC61-00011A	2	O	
17	SPRING ETC-CIS	JB61-00083A	2	O	
18	CBF HARNESS-SCAN GND	JC39-00322A	1	O	
19	SPRING ETC-PAPER OUT	JB61-00070A	1	O	
S	SCREW-TAPTITE	6003-000269	1	X	
S	SCREW-TAPTITE	6003-000267	3	X	

8.5 Main Frame Exploded View

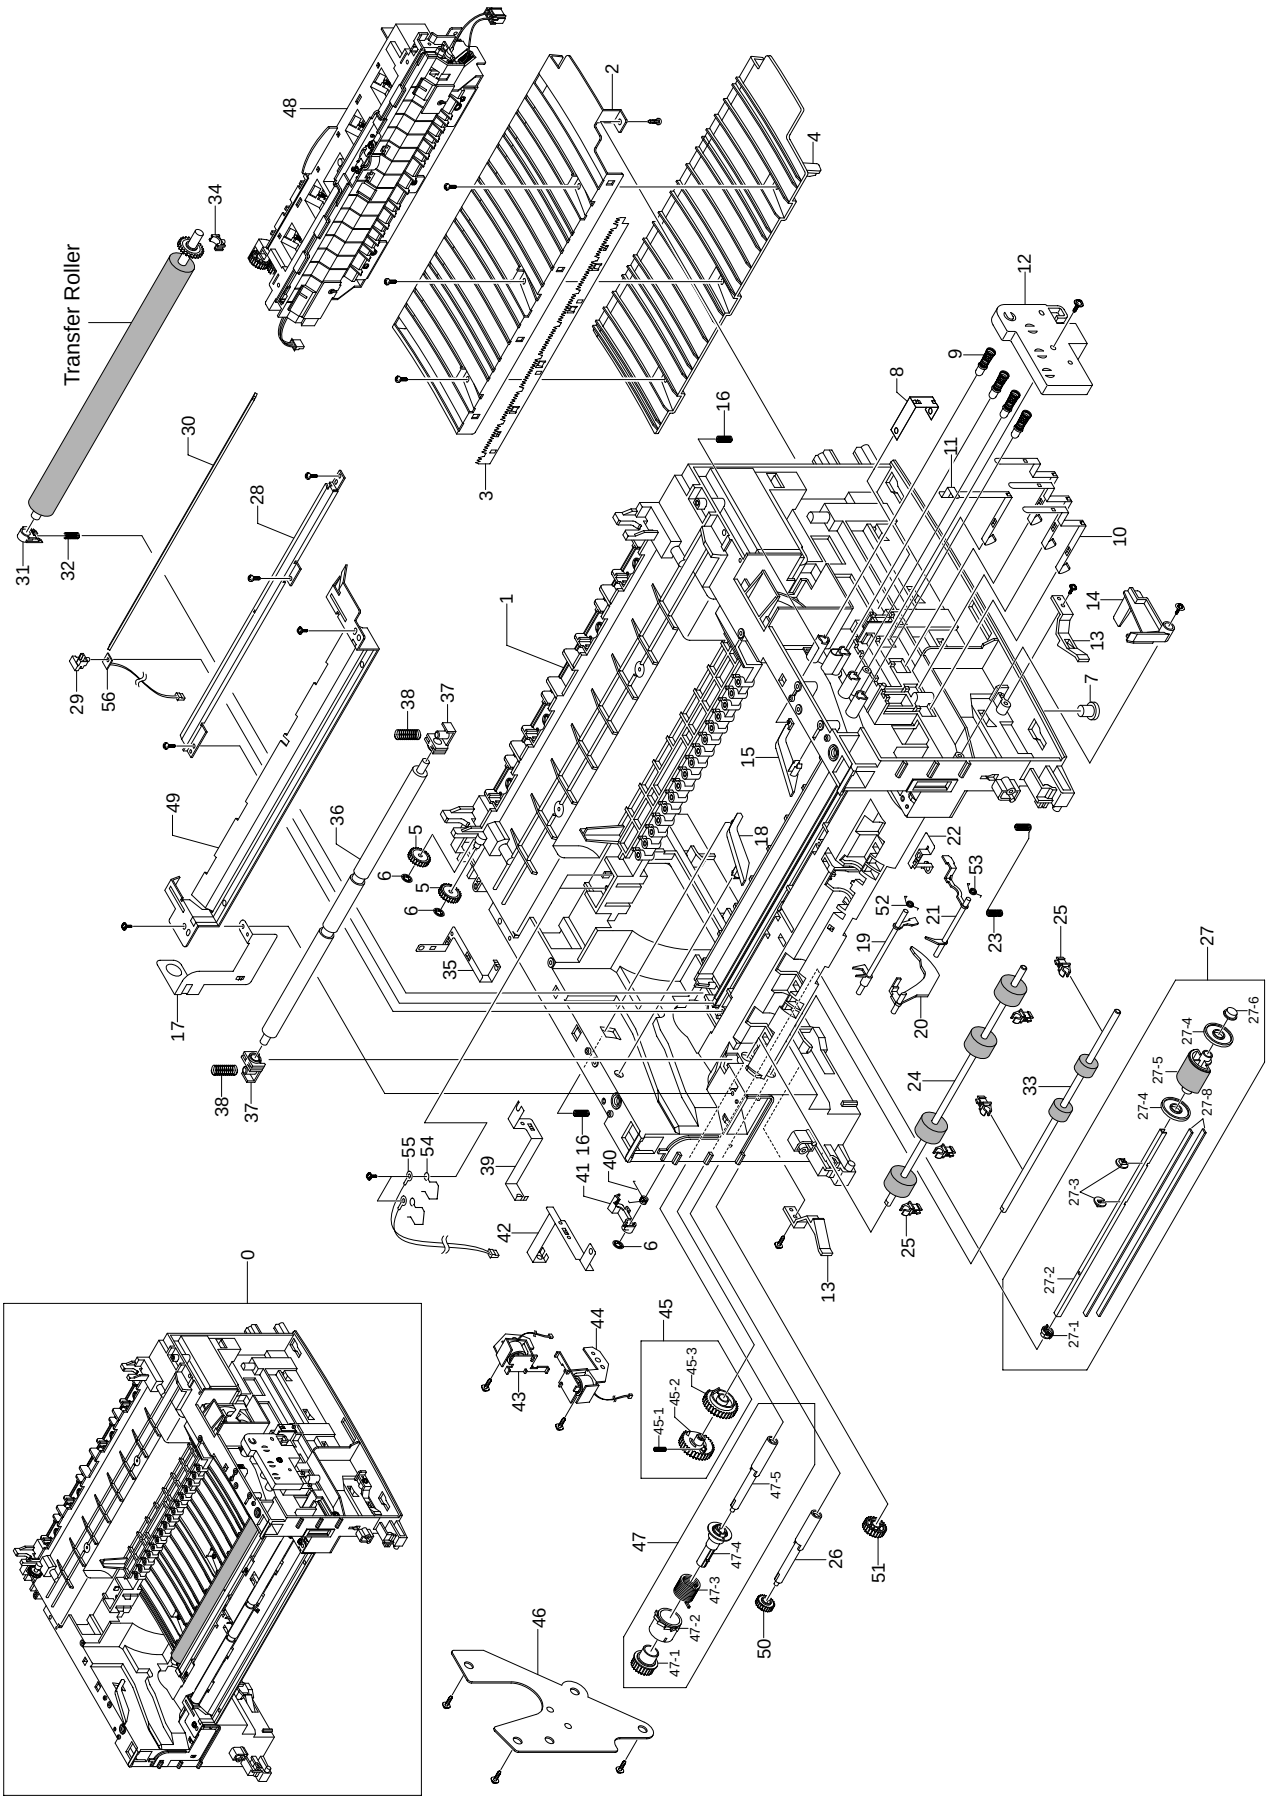

Main Frame Exploded View Parts List

SA : Service Available
O : Service available **X** : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	ELA HOU-UNIT FRAME_220V	JC96-02983A	1	O	⚠ 220V
	ELA HOU-UNIT FRAME_110V	JC96-02982A	1	O	⚠ 110V
1	FRAME-M-BASE	JC61-00579A	1	O	
2	GUIDE-P-TR	JC61-00607A	1	O	
3	PLATE-P-SAW	JC61-00604A	1	O	
4	GUIDE-M-TR RIB	JC61-00594A	1	O	
5	PMO-GEAR_EXIT_DRV16	JC72-00143A	2	X	
6	RING-CS	6044-000001	3	X	
7	FOOT-FRONT	JC61-00836A	2	X	
8	IPR-P-GROUND_TR	JC70-00311A	1	X	
9	MEC-TERMINAL	JC75-00049A	4	O	
10	IPR-P-TERMINAL CON	JC70-00312A	3	O	
11	IPR-P-TERMINAL CR	JC70-00313A	1	O	
12	HOUSING-TERMINAL	JC61-00592A	1	O	
13	PMO-LOCKER CST	JC72-00983A	2	O	
14	PMO-ACTUATOR CVR OPEN	JC72-00974A	1	O	
15	PMO-PLATE GUIDE DEVE_R	JC72-00985A	1	O	
16	SPRING ETC-GUIDE DEVE	JC61-70932A	2	X	
17	IPR-P-GROUND_GUIDE PAPER	JC70-00458A	1	O	
18	PMO-PLATE GUIDE DEVE_L	JC72-00984A	1	O	
19	PMO-ACTUATOR FEED	JC72-00976A	1	O	
20	PMO-ACTUATOR EMPTY	JC72-00975A	1	O	
21	PMO-ACTUATOR MANUAL	JC72-00977A	1	O	
22	IPR-P-GROUND_EARTH TR	JC70-00307A	1	X	
23	SPRING-ETC	6107-001162	1	O	
24	ROLLER-FEED ROLLER 1	JC66-00526A	1	X	
25	PMO-BUSHING FEED	JC72-00382B	5	X	
26	SHAFT-FEED	JC66-00398A	1	X	
27	AS-PICK UP	JC81-01693A	1	O	
27-1	BUSH-M-PICK_UP L	JC61-00586A	1	X	
27-2	SHAFT-P-PICK_UP	JC66-00399A	1	X	
27-3	STOPPER-PICK_UP	JC61-00593A	2	X	
27-4	PMO-IDLE PICK_UP	JC72-00982A	2	O	
27-5	SPONGE-ROLLER PICK_UP	JC72-01231A	1	O	
27-6	BUSH-M-PICK_UP R	JC61-00587A	1	O	
27-7	HOUSING-M-PICK_UP	JC61-00591A	1	O	
27-8	SHAFT-P-CORE	JC66-00720A	2	X	
28	IPR-P-EARTH TRANSFER	JC70-00307A	1	O	
29	HOLDER-PTL	JC61-00583A	1	O	
30	LENS-PTL	JC67-00027A	1	O	

Main Frame Exploded View Parts List

SA : Service Available
O : Service available **X** : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
31	BUSH-M-TR L	JC61-00588A	1	O	
32	SPRING ETC-TR L HAWK	JC61-00047A	1	X	
33	ROLLER-FEED	JC66-00598A	1	O	
34	PMO-BUSHING_TR(L)	JC72-00102A	1	O	
35	IPR-P-GROUND_FUSER	JC70-00310A	1	O	
36	SHAFT-FEED IDLE	JC66-00527A	1	O	
37	BUSH-M-FEED IDLE	JC61-00585A	2	X	
38	SPRING ETC-TR	JC61-70958A	2	X	
39	IPR-P_GROUND_DRIVE2	JC70-00335A	1	O	
40	SPRING-TS	6107-001170	1	O	
41	CAM-M-PICK_UP	JC66-00377A	1	O	
42	IPR-P-GROUND_DRIVE	JC70-00308A	1	O	
43	SOLENOID-HB (PICK-UP)	JC33-00009A	1	O	
44	SOLENOID-HB (MANUAL)	JC33-00010A	1	O	
45	AS-GEAR PICK_UP	JC81-01692A	1	O	
45-1	PMO-GEAR PICK_UP B	JC72-00980A	1	O	
45-2	PMO-GEAR PICK_UP A	JC72-00979A	1	O	
45-3	SPRING-CS	6107-001167	1	X	
46	BRACKET-P-FEED	JC61-00602A	1	O	
47	MEA UNIT-CLUTCH	JC97-01788A	1	O	
47-1	GEAR-FEED 1	JC66-00393A	1	O	
47-2	PMO-COLLAR_SPRING	JC72-00978A	1	O	
47-3	SPRING-TS	6107-001170	1	X	
47-4	PMO-HUB CLUTCH	JC72-00981A	1	O	
47-5	SHAFT-FEED	JC66-00398A	1	X	
48	ELA HOU-FUSER 220V, ROCKY	JC96-02661E	1	O	⚠ 220V
	ELA HOU-FUSER 110V, ROCKY	JC96-02660C	1	O	⚠ 110V
49	GUIDE-P-PAPER	JC61-00718A	1	O	
50	GEAR-FEED 2	JC66-00394A	1	O	
51	GEAR-IDLE 23	JC66-00396A	1	O	
52	SPRING-TS	6107-001164	1	X	
53	SPRING-TS	6107-001165	1	X	
54	IPR-P-TERMINAL DEVE KEY	JC7000340A	2	X	
55	CBF HARNESS-OPC_FUSE	JC39-00315A	1	X	
56	PBA MAIN-PTL	JC92-01440B	1	O	
S	SCREW-TAPTITE	6003-000119	9	O	
S	SCREW-TAPTITE	6003-000196	12	O	
S	SCREW-ASS'Y TAPT	6006-001078	3	O	

8.6 Fuser Unit Exploded View

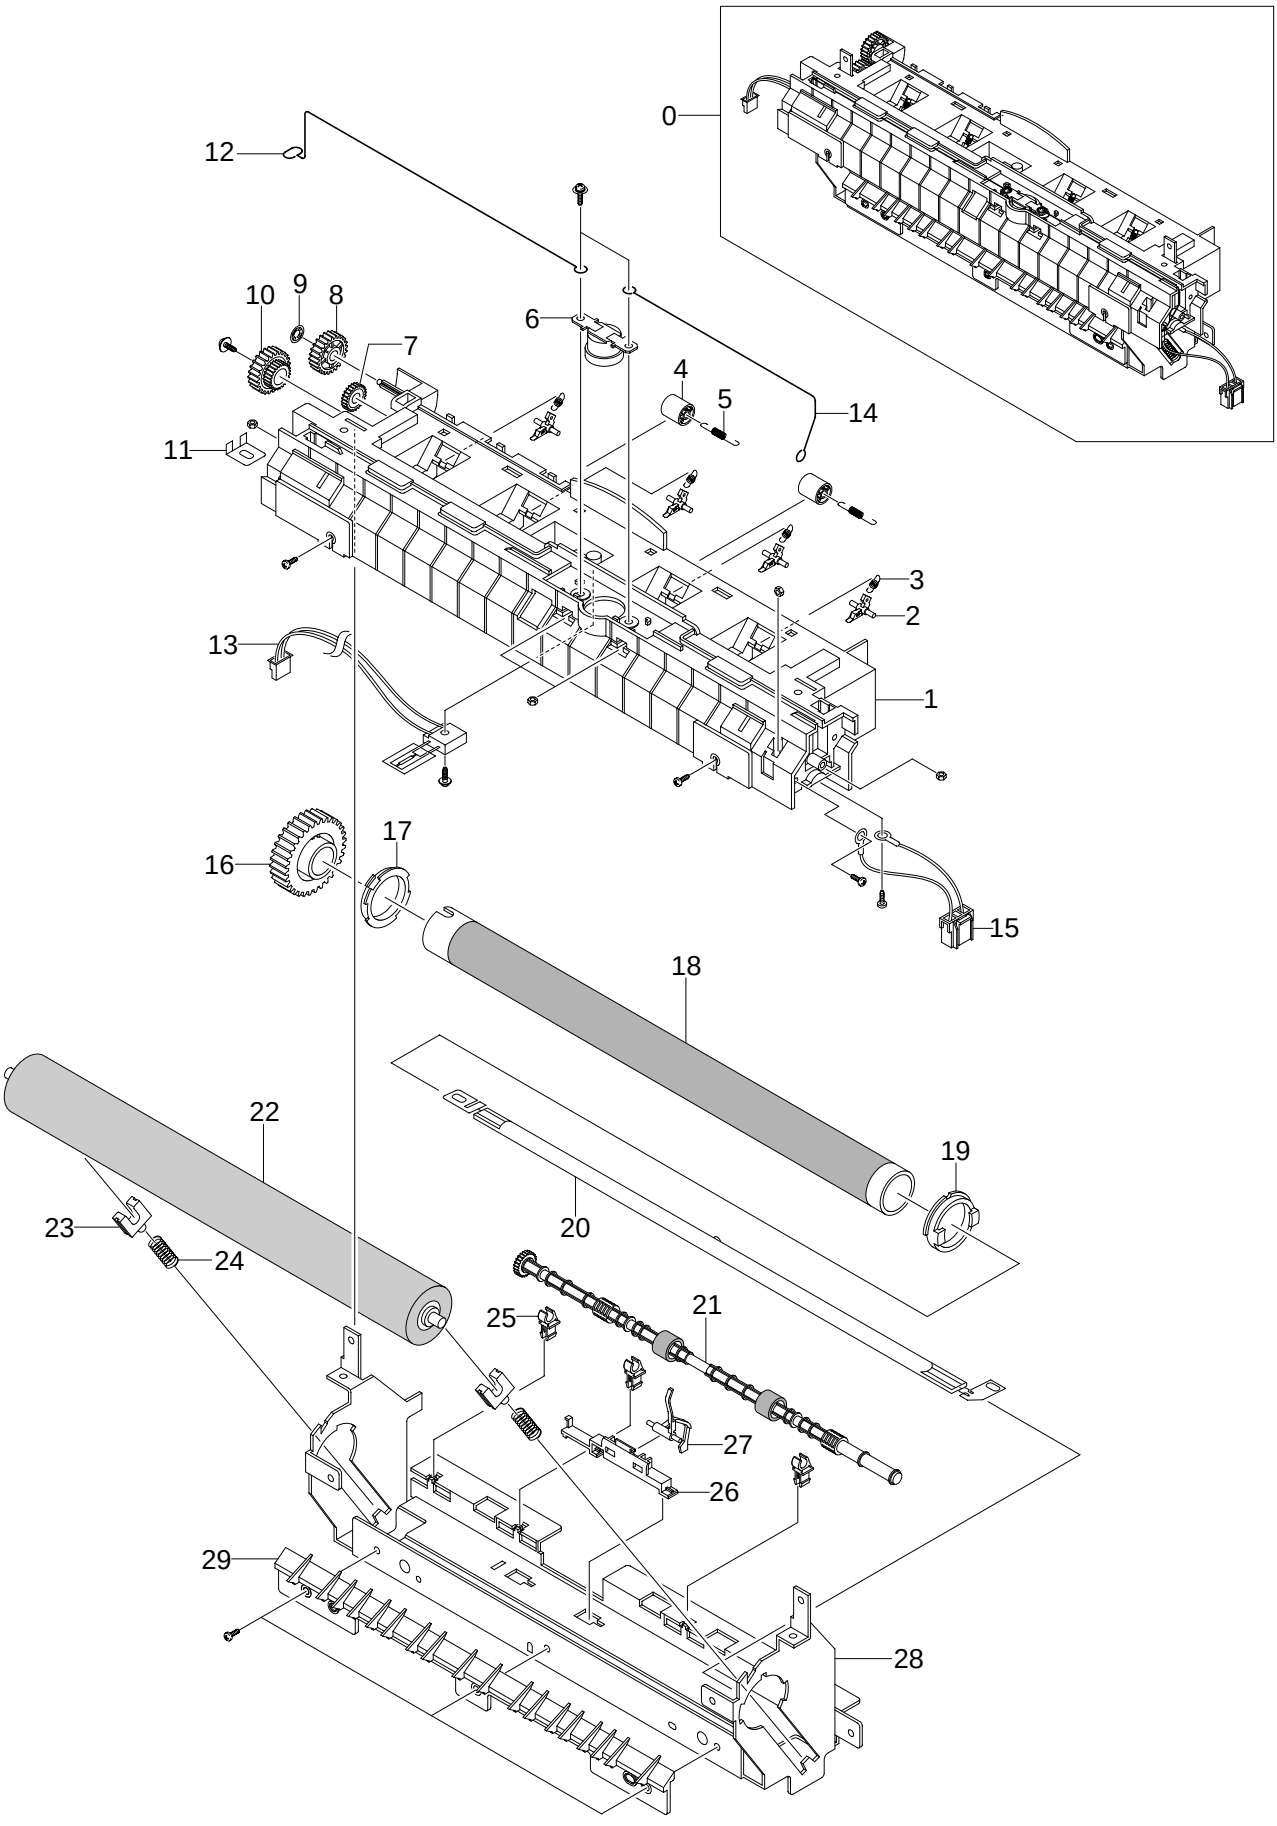

Fuser Unit Exploded View Parts List

SA : Service Available
O : Service available **X** : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	ELA HOU-FUSER 220V	JC96-02661E	1	O	⚠ 220V
	ELA HOU-FUSER 110V	JC96-02660C	1	O	⚠ 110V
1	COVER-M-FUSER	JC63-00105A	1	X	
2	HOLDER-M-PLATE CLAW	JC61-00584A	4	X	
3	SPRING ETC-CLAW	JC61-00064A	4	X	
4	PMO-ROLLER EXIT	JC72-40361A	2	X	
5	SPRING ETC-FUSER EXIT	JC61-70976A	2	X	
6	THERMOSTAT-150	JC47-00005A	1	O	
7	PMO-GEAR_EXIT_DRV16	JC72-00143A	1	X	
8	GEAR-IDLE 23	JC66-00396A	1	X	
9	RING-CS	6044-000001	1	X	
10	GEAR-RDCN 25/15	JC66-00397A	1	O	
11	ELECTRODE_LAMP2	JC70-00466A	1	X	
12	ELECTRODE-WIRE_L	JC70-00450A	1	X	
13	THERMISTOR-NTC	1404-001298	1	O	
14	ELECTRODE-WIRE_R	JC70-00449A	1	X	
15	CBF HARNESS-FUSER 220V	JC39-00238A	1	O	⚠ 220V
	CBF HARNESS-FUSER 110V	JC39-00239A	1	O	⚠ 110V
16	GEAR-FUSER, Z37	JC66-00564A	1	O	
17	BUSH-M-HR L	JC61-00589A	1	X	
18	ROLLER-HEAT	JC66-00601A	1	O	
19	BUSH-M-HR R	JC61-00590A	1	O	
20	LAMP-HALOGEN	4713-001183	1	O	⚠ 220V
	LAMP-HALOGEN	4713-001182	1	O	⚠ 110V
21	ROLLER-M-EXIT F/UP	JC66-00380A	1	X	
22	ROLLER-PRESSURE	JC66-00600A	1	O	
23	BEARING-PRESSURE/R	JC66-10901A	2	X	
24	SPRING-CS	6107-001168	2	X	
25	PMO-BUSHING TX	JC72-00382A	3	X	
26	HOLDER-ACTUATOR	JC61-00581A	1	X	
27	PMO-ACTUATOR_EXIT	JC72-00987A	1	O	
28	IPR-P-FRAME_FUSER	JC70-00317A	1	X	
29	GUIDE-M-INPUT	JC61-00595A	1	X	
30	SPRING-TS	6107-001165	1	X	
31	RMO-RUBBER_EXIT	JC73-00017A	2	X	
32	NUT-HEXAGON	6021-000222	5	X	
33	LABEL(P)-CAUTION, HOT_FUSER	JC68-30928D	1	X	
34	COVER-M-EXIT LOWER	JC63-00244A	1	X	
35	PLATE-P-CLAW	JC61-00605A	4	X	

8.7 Exit Cover Exploded View

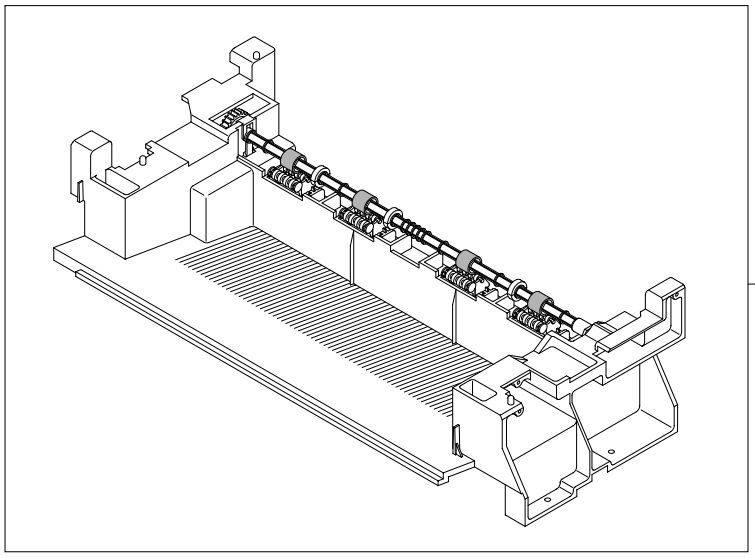

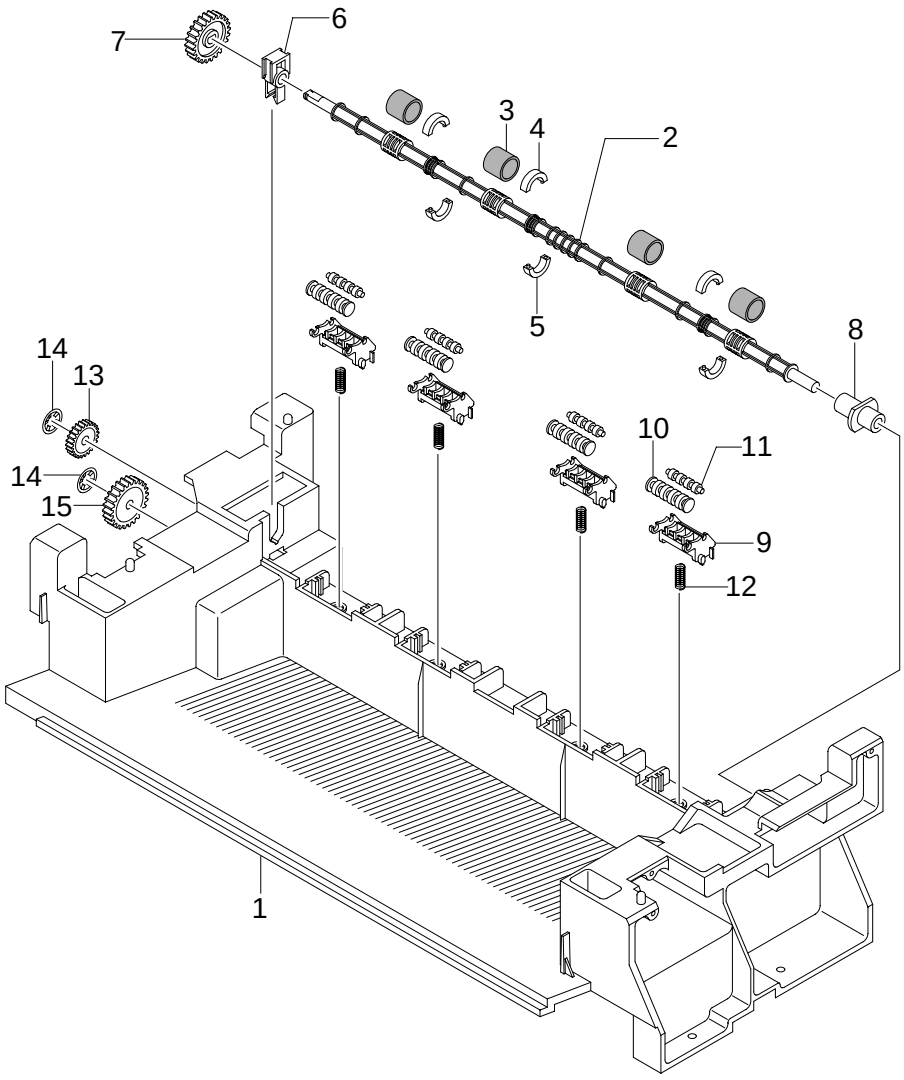

Exit Cover Exploded View Parts List

SA : Service Available
O : Service available **X** : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	MEA UNIT-COVER EXIT	JC97-01854A	1	O	
1	COVER-M_EXIT	JC63-00322A	1	X	
2	ROLLER-EXIT_EXIT F/DOWN	JC66-00378A	1	X	
3	RMO-RUBBER EXIT	JC73-40915A	4	X	
4	ROLLER-M_DECURL	JC66-00626A	6	X	
6	MEC-BEARING, EXIT	JC75-10529A	1	X	
7	GEAR-EXIT F/DOWN	JC66-00028A	1	X	
8	BEARING-EXIT FU	JC66-10201A	1	X	
9	HOLDER-M-EXIT F/DOWN	JC61-00582A	4	X	
10	ROLLER_EXIT, MAIN	JC72-41801A	4	X	
11	ROLLER_EXIT, FR	JC72-41802A	4	X	
12	SPRING-EXIT F/DOWN	6107-001163	4	X	
13	PMO-GEAR_EXIT_DRV 16	JC72-00143A	1	X	
14	RING-CS	6044-000001	2	X	
15	GEAR-IDLE 23	JC66-00396A	1	X	
16	HOOK PBA	JC92-01570A	1	O	
17	HOOK HANESS	JC39-00311A	1	X	

8.8 Scan Lower Ass'y Exploded View

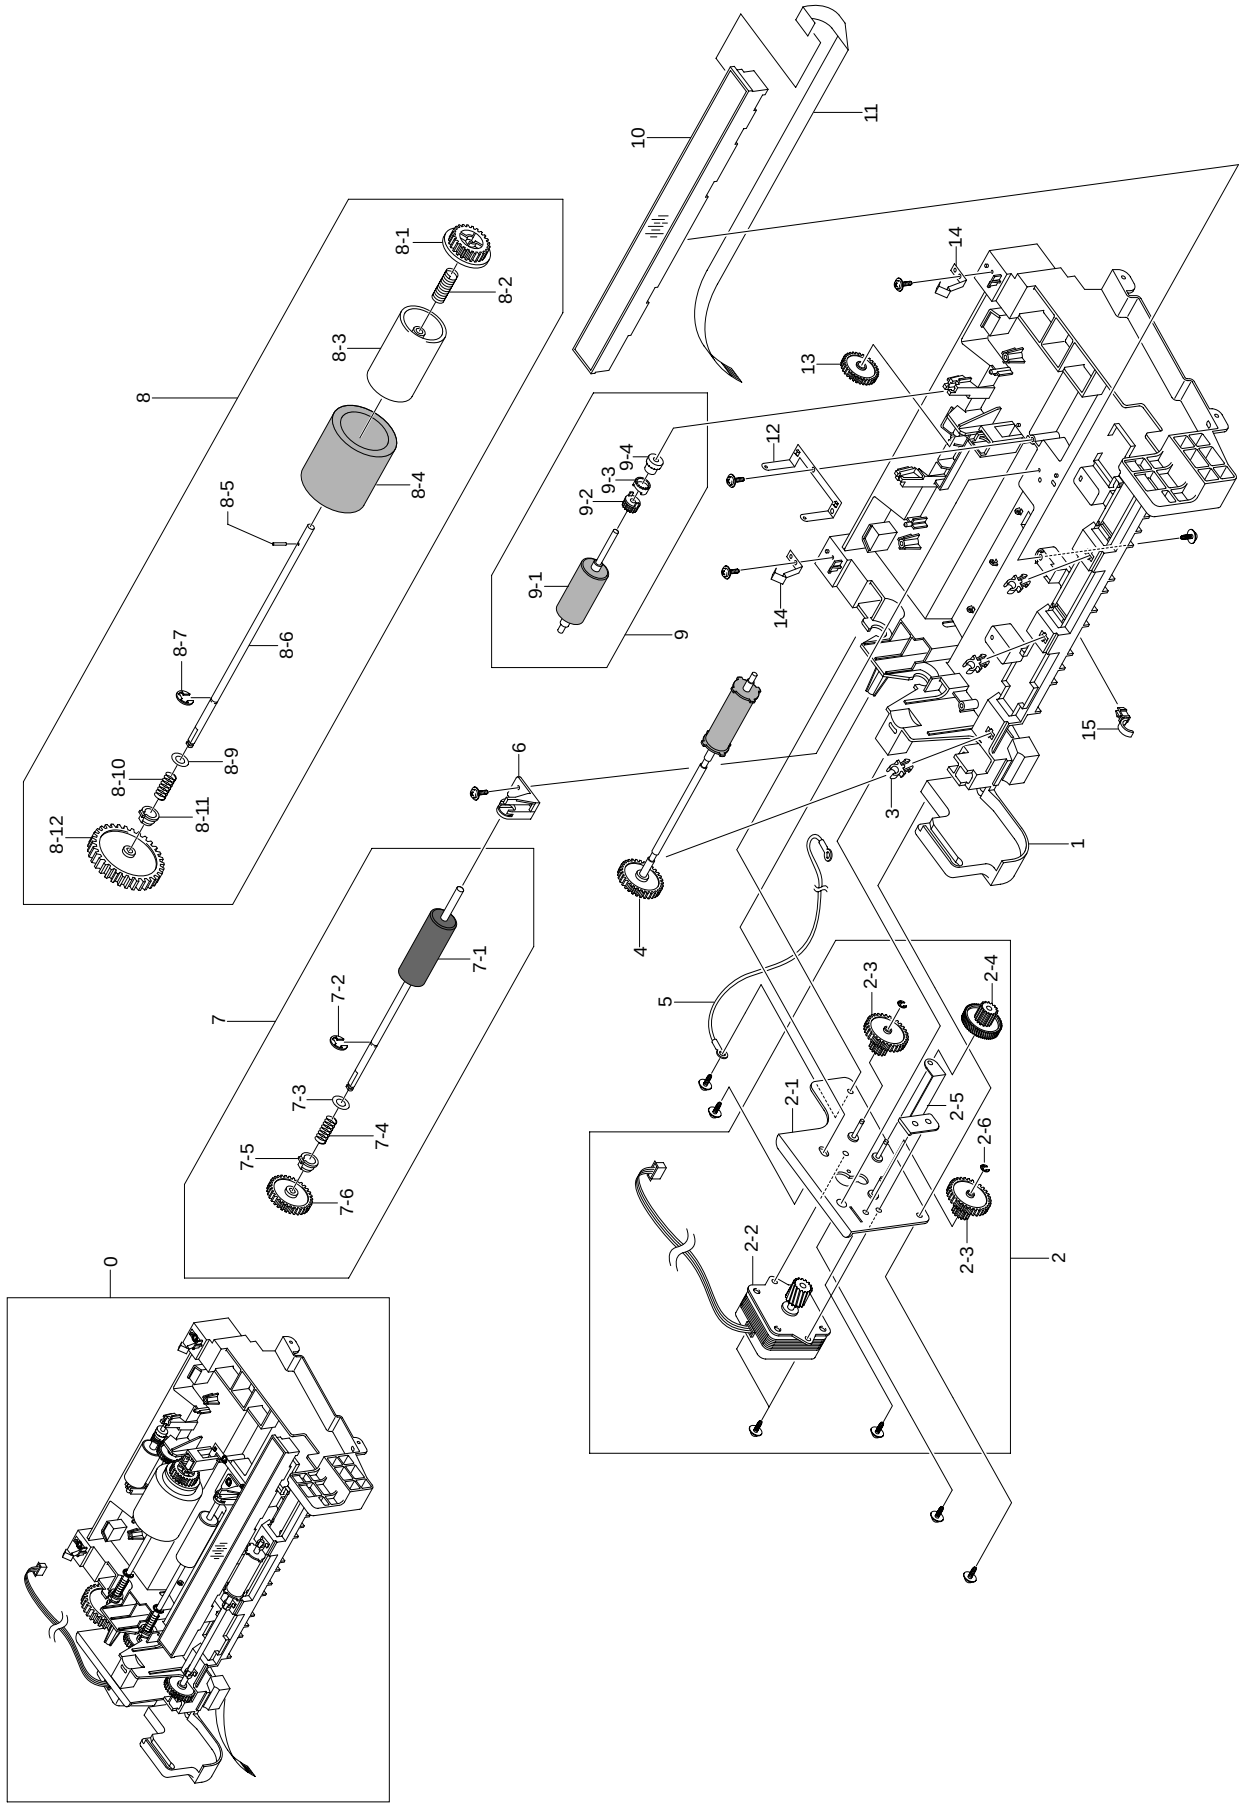

Scan Lower Exploded View Parts List

SA : Service Available
O : Service available **X** : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	ELA HOU-SCAN LOWER	JC96-02969A	1	O	
1	COVER-M_SCAN LOWER	JC63-00341A	1	O	
2	ELA HOU-SCAN MOTOR	JC96-02968A	1	O	
2-1	BRACKET-P_GEAR	JC61-00874A	1	X	
2-2	MOTOR STEP-HELICAL	JB31-00006B	1	X	
2-3	GEAR-REDUCTION 45/19	JC66-00324A	2	X	
2-4	GEAR-RDCN 4316	JC66-00362A	1	X	
2-5	GROUNG-ROLLER	JC70-10467A	1	X	
2-6	RING-C	6044-000159	2	X	
3	PMO-BUSHING TX(B4)	JG72-40744A	3	O	
4	ROLLER-EXIT	JC66-00717A	1	O	
5	CBF HARNESS-SCAN GND	JC39-00320A	1	O	
6	PMO-HOLDER SHAFT	JC72-00913A	1	O	
7	MEA HOU-ROLLER SCAN ASSY	JC97-01658A	1	O	
7-1	MEC-ROLLER SCAN	JC75-00154A	1	X	
7-2	RING-E	6044-000125	1	X	
7-3	WASHER-PLAIN	6031-000019	3	X	
7-4	SPRING ETC-SHAFT	JC61-00555A	1	X	
7-5	PMO-BUSHING SHAFT	JC72-00912A	1	X	
7-6	GEAR-AGITATOR_1	JC66-40951A	1	X	
8	MEA HOU-ROLLER ADF ASSY	JC97-01613A	1	O	
8-1	GEAR-ADF ROLL	JC66-00361A	1	X	
8-2	SPRING ETC-CLUTCH	JC61-00554A	1	X	
8-3	PMO-SLEEVE ADF	JC72-00911A	1	X	
8-4	MEC-ROLLER ADF	JC75-00153A	1	X	
8-5	ICT-PIN ADF	JB70-00168A	1	X	
8-6	ICT-SHAFT ADF	JC70-00292A	1	X	
8-7	RING-E	6044-000125	2	X	
8-8	WASHER-PLAIN	6031-000019	3	X	
8-9	SPRING ETC-SHAFT	JC61-00555A	1	X	
8-10	PMO-BUSHING SHAFT	JC72-00912A	1	X	
8-11	GEAR-ADF	JC66-00363A	1	X	
9	MEA HOU-PICK UP ASSY	JC97-01661A	1	X	
9-1	MEC-ROLLER PICK UP	JC75-00152A	1	X	
9-2	GEAR-PICK UP	JC66-00360A	1	X	
9-3	PMO-PICK UP CLUTCH SUB	JB72-00845A	1	X	
9-4	PMO-BUSHING PICK UP	JC72-00910A	1	X	
10	CONTACK IMAGE SENSOR	0609-001206	1	X	
11	CBF SIGNAL-CIS FFC	JC39-00318A	1	X	
12	GROUND-P_SHAFT	JC63-00343A	1	X	
13	GEAR-PICK UP IDEL 38	JB66-00102A	1	X	
14	IPR-LOKER TX	JB70-10958A	2	X	
15	PMO-BUSHING_F/DOWN	JC72-00387A	1	X	

8.9 Cassette Unit Exploded View

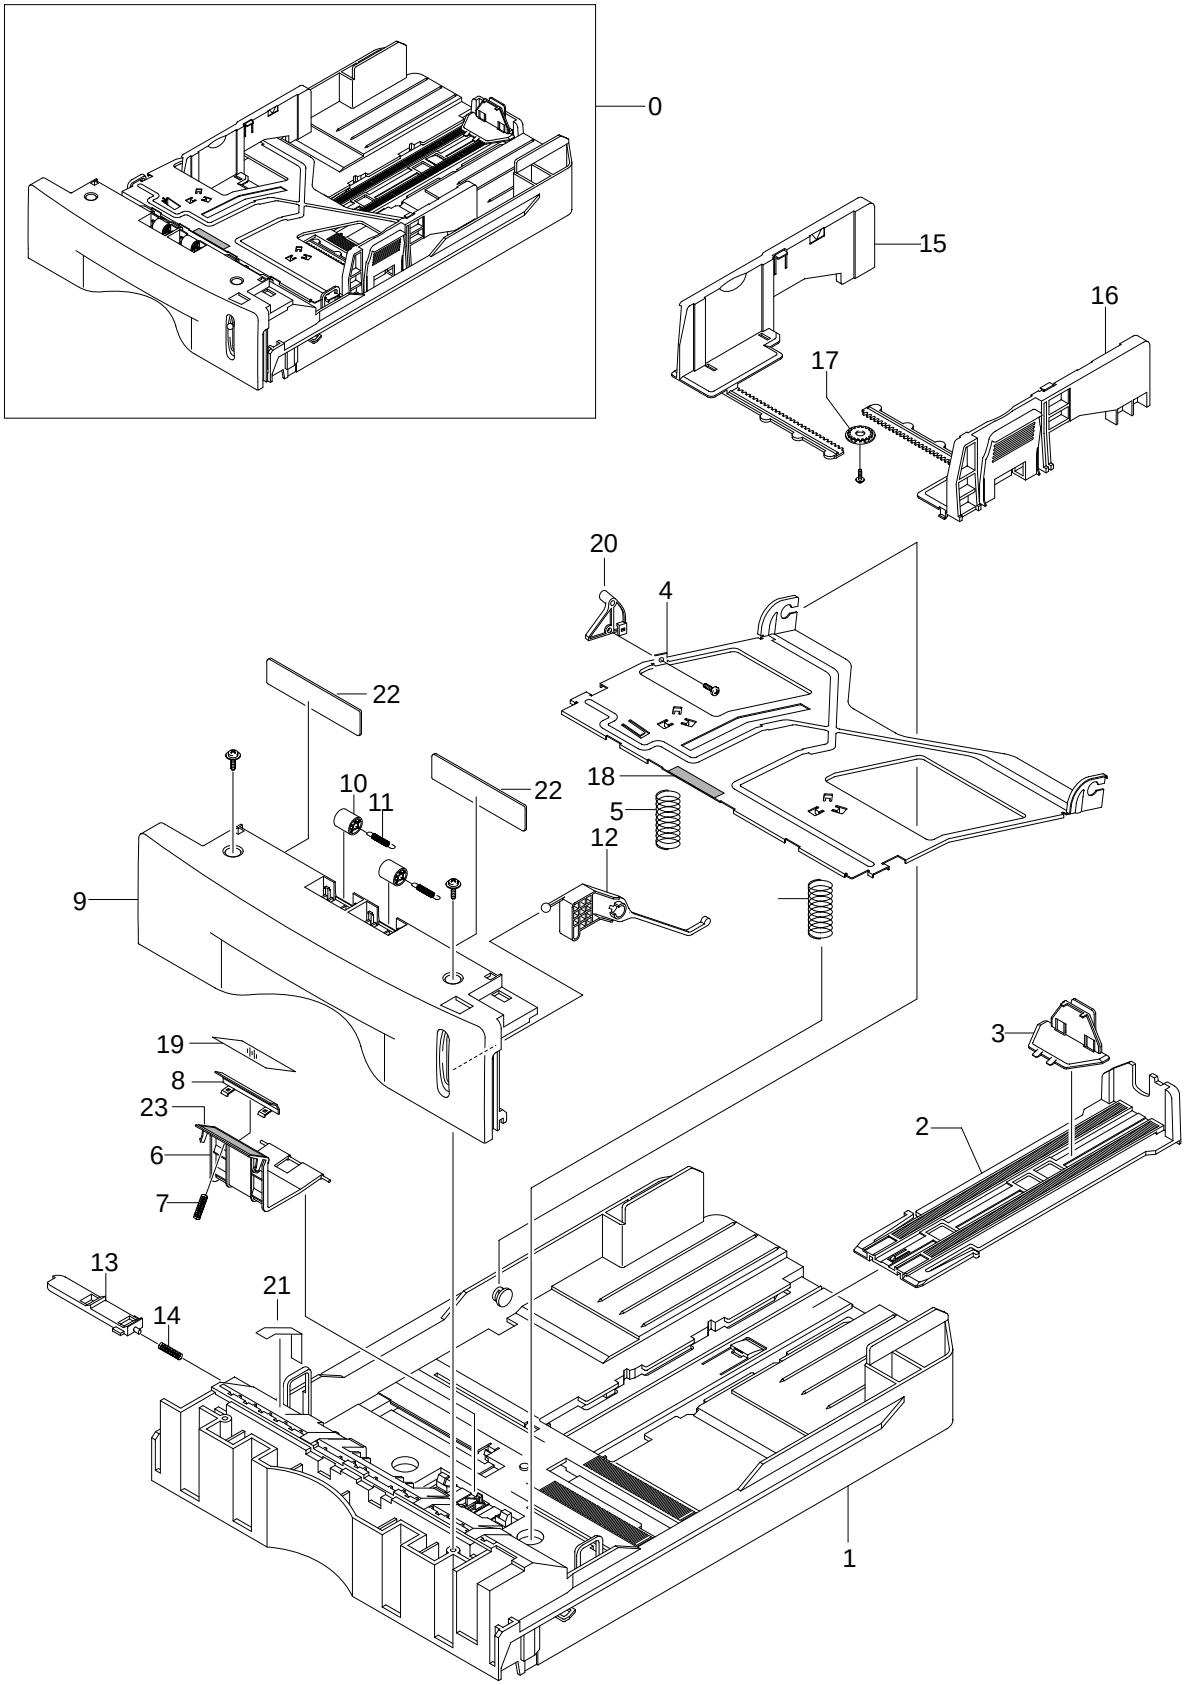

Cassette Unit Exploded View Parts List

SA : Service Available
O : Service available **X** : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	MEA UNIT-CASSETTE	JC97-01861A	1	O	
1	FRAME-M_CASSETTE	JC61-00876A	1	X	
2	GUIDE-M-EXTENSION L2	JC61-00918B	1	O	
3	PMO-EXTENSION SMALL	JC72-00971A	1	O	
4	PLATE-P-KNOCK_UP	JC61-00603A	1	X	
5	SPRING-CS	6107-001166	2	X	Spring-Knock_up
6	HOLDER-M-PAD	JC61-00580A	1	X	
7	SPRING ETC-LOCKER,PLATE	JG61-70531A	1	X	
8	IPR-PLATE PAD	JC70-00314A	1	X	
9	FRAME-M-SUB CASSETTE	JC61-00883A	1	X	
10	ROLLER-M-IDLE FEED	JC66-00529A	2	X	
11	SPRING-ES	6107-001047	2	X	Spring-Feed
12	INDICATOR-M-LEVER INDICATOR	JC64-00040A	1	O	
13	PMO-PLATE_LOCKER	JC72-00972A	1	X	
14	SPRING ETC-EXIT ROLL FD	JC61-70911A	1	X	
15	ADJUST-M-CASSETTE_R	JC70-00301A	1	O	
16	ADJUST-M-CASSETTE_L	JC70-00300A	1	O	
17	GEAR-PINION	JG66-40003A	1	X	
18	RPR-PAD CASSETTE	JC73-00141A	3	X	
19	SHEET-HOLDER PAD	JC63-00290A	1	X	
20	CAM-M-KNOCK UP	JC66-00719A	1	X	
21	SHEET-GUIDE PAPER	JC63-00482A	4	X	
22	SHEET-SUB CASSETTE	JC63-00483A	2	X	

8.10 SCF Frame Ass'y Exploded View

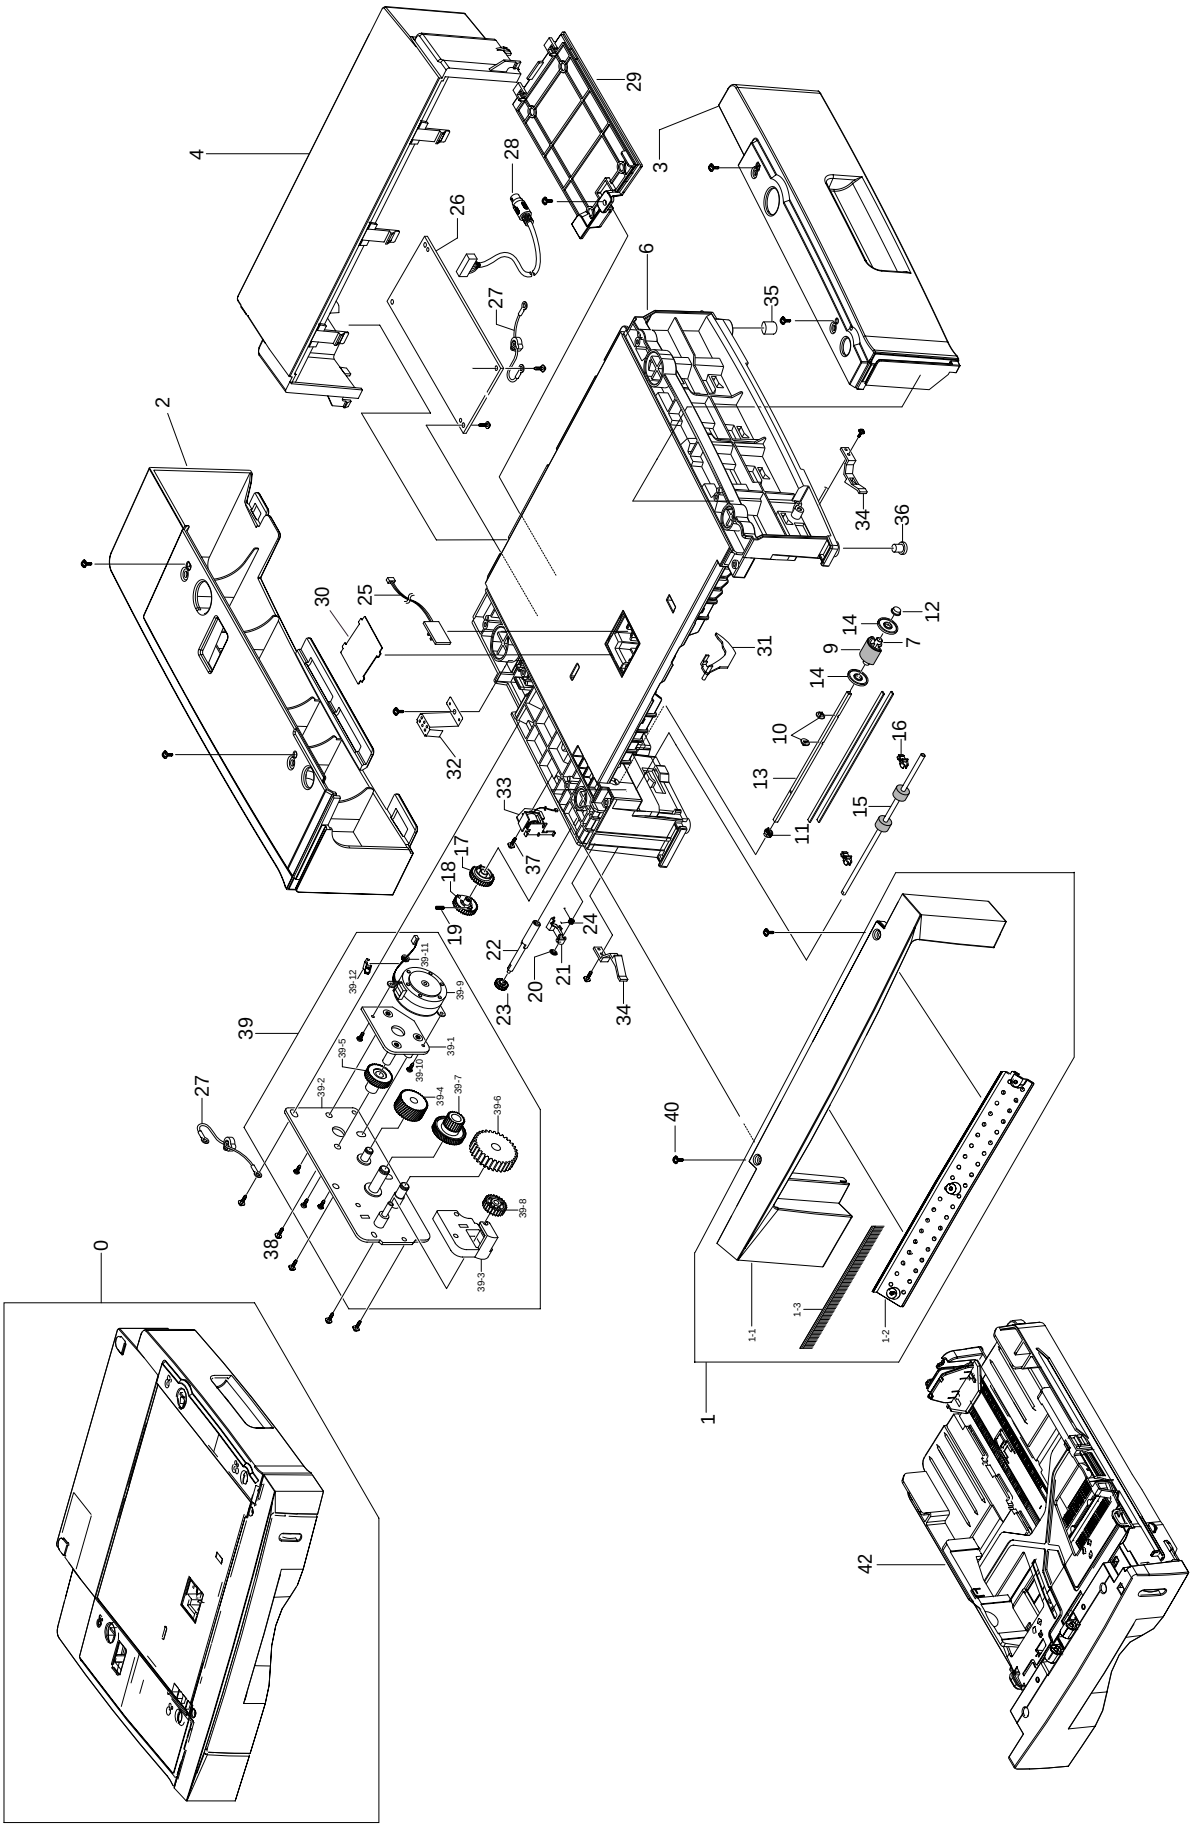

SCF Frame Ass'y Assembly Parts List

SA : Service Available
O : Service available **X** : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
0	ELA HOU-SCF ASS'Y	JC96-03010A	1	X	
1	MEA UNIT-FRONT SCF	JC97-01889A	1	X	
1-1	COVER-M-FRONT SCF	JC63-00346A	1	X	
1-2	ICT-BRKT REAR COVER	JC70-00007A	1	X	
1-3	BRUSH ANTISTATIC	JC67-00055A	1	O	
2	COVER-M-LEFT SCF	JC63-00348A	1	O	
3	COVER-M-RIGHT SCF	JC63-00349A	1	O	
4	COVER-M-REAR SCF	JC63-00350A	1	O	
5	ELA HOU-MAINFRAME SCF	JC96-03012A	1	O	
6	FRAME-M-SCF	JC61-00877A	1	X	
7	HOUSING-M-PICK_UP	JC61-00591A	1	X	
8	SHAFT-P-CORE	JC66-00720A	2	X	
9	SPONGE-ROLLER PICK_UP	JC72-01231A	1	X	
10	BUSHING-PICK_UP	JC61-00593A	2	X	
11	BUSH-M-PICK_UP L	JC61-00586A	1	X	
12	BUSH-M-PICK_UP R	JC61-00587A	1	X	
13	SHAFT-P-PICK_UP	JC66-00399A	1	X	
14	PMO-IDLE PICK_UP	JC72-00982A	2	X	
15	ROLLER-FEED	JC66-00598A	1	X	
16	PMO-BUSHING TX	JC72-00382A	2	X	
17	PMO-GEAR PICK_UP A	JC72-00979A	1	X	
18	PMO-GEAR PICK_UP B	JC72-00980A	1	X	
19	SPRING-CS	6107-001167	1	X	
20	RING-CS	6044-000001	1	X	
21	CAM-M-PICK_UP	JC66-00377A	1	X	
22	SHAFT-FEED	JC66-00527A	1	X	
23	GEAR-FEED 2	JC66-00394A	1	X	
24	SPRING-TS	6107-001170	1	X	
25	PCB-SENSOR?	JC92-01364B	1	X	
26	PBA SUB-SCF	JC92-01614A	1	O	
27	CBF HARNESS-SCF GND	JC39-00366A	1	X	
28	CBF HARNESS-SCF	JC39-00357A	1	O	
29	COVER-M-SIMM R2	JC63-00492A	1	X	
30	SHEET-COVER SENSOR	JC63-00369A	1	X	
31	PMO-ACTUATOR EMPTY	JC72-00975A	1	X	
32	IPR-GND TOP	JC70-11028A	1	X	
33	SOLENOID-HB (MANUAL)	JC33-00010A	1	X	
34	PMO-LOCKER CST	JC72-00983A	2	X	
35	FOOT-BACK	JC61-00835A	2	X	

SCF Cassette Ass'y Assembly Parts List

SA : Service Available
O : Service available **X** : Service not available

No.	Description	SEC.Code	Q'ty	SA	Remark
36	FOOT-FRONT	JC61-00836A	2	X	
37	SCREW-ASS'Y TAPT	6006-001078	1	X	
38	SCREW-TAPTITE	6003-000196	10	X	
39	ELA HOU-MOTOR SCF	JC96-03003A	1	O	
39-1	BRKT-P-MOTOR SCF	JC61-00879A	1	X	
39-2	BRKT-P-GEAR SCF	JC61-00881A	1	X	
39-3	BRKT-M-FEED SCF	JC61-00878A	1	X	
39-4	GEAR 61/47 IDLE	JC66-00688A	1	X	
39-5	GEAR 59 IDLE	JC66-00689A	1	X	
39-6	GEAR 35 IDLE	JC66-00690A	1	X	
39-7	GEAR-RDCN 57/18	JC66-00389A	1	X	
39-8	GEAR-IDLE 23	JC66-00396A	1	X	
39-9	MOTOR STEP(SCF)	JC31-00009A	1	O	
39-10	SCREW-MACHINE	6001-000131	5	X	
39-11	CORE-FERRITE	3301-001635	1	X	
39-12	CABLE TIE	6501-000004	1	X	
40	BUSH CABLE	JC61-00804A	1	X	
41	SCREW-TAPTITE	6003-000196	1	X	
42	MEA UNIT-CASSETTE	JC97-01861A	1	X	