8 Parts and Diagrams

Overview

External Covers and Panels - - - - - - - - - - - - - - - - 254

Internal Components - 257

Printer Drive Assembly - - - - - - - - - - - - - - - - - - 265

Paper Feeder Drive Assembly - - - - - - - - - - - - - - 267

Paper Tray - 269

Hardware Table - 277

Alphabetical Parts List - - - - - - - - - - - - - - - - - - 279

Numerical Parts List - - - - - - - - - - - - - - - - - - - 286

External Covers and Panels

Figure 8-1 Printer External Covers and Panels

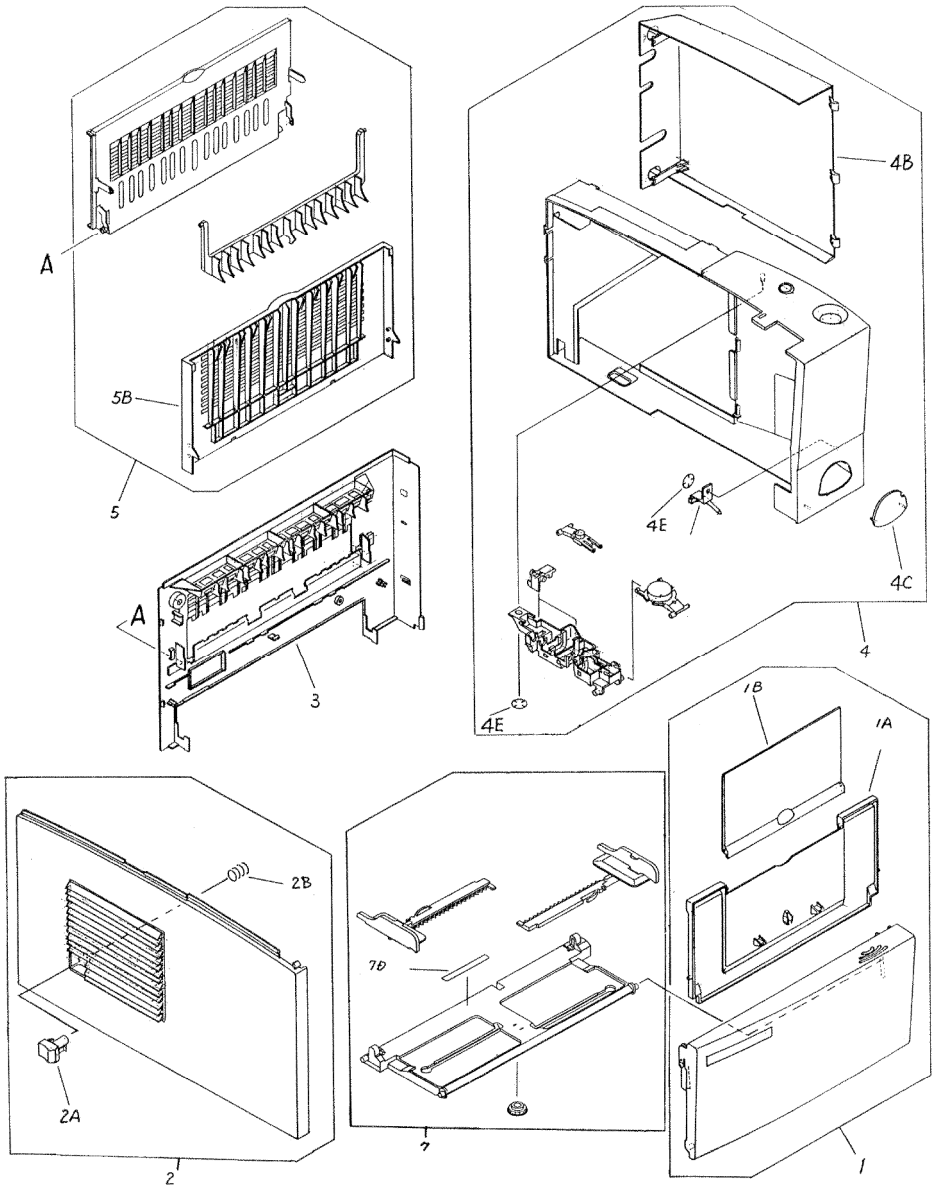

Table 8-1. Printer External Covers and Panels

Ref	Description	Part Number	Qty
	FORMATTER PCB	C4132-67901	
1	MP COVER ASSY	RG5-4121-000CN	1
1A	TRAY, EXPANSION 1	RB2-3036-000CN	1
1B	TRAY, EXPANSION 1	RB2-3037-000CN	1
2	LEFT COVER ASSY	RG5-4139-000CN	1
2A	BUTTON, POWERSWITCH	RB2-2859-000CN	1
2B	SPRING, COMPRESSION	RB2-2860-000CN	1
3	COVER, REAR	RB2-2857-000CN	1
4	DIMM COVER ASSY	RG5-4123-000CN	1
?	COVER, DIMM	RB2-2861-000CN	1
4B	COVER, I/O	RB2-2862-000CN	1
4C	IR WINDOW`	RB2-2866-000CN	1
4D	PIPE	RB2-2867-000CN	1
4F	LIGHT PIPE ASSY	RG5-4152-000CN	1
5	FACE-UP TRAY ASSY	RG5-4124-000CN	1
5B	TRAY, FACE-UP	RB2-2876-000CN	1
7	MP TRAY ASSY	RG5-4126-000CN	1
7D	SHEET, SEPARATION MP	RB2-2886-000CN	1
7D	PLATE, GROUNDING	RB2-2812-000CN	
ns	GUIDE, CABLE	RB2-2818-000CN	
ns	BLOCK, LIGHT PIPE	RB2-2863-000CN	
ns	GEAR, 18T	RB2-2885-000CN	
ns	GUIDE, DELIVERY, UPPER	RB2-2976-000CN	
ns	PLATE, GROUNDING	RB2-3051-000CN	
ns	COVER, GEAR	RB2-3072-000CN	
ns	GUIDE, DELIVERY, LOWER	RF5-2602-000CN	
ns	CABLE, FLAT	RH2-5348-000CN	
ns	GEAR, 23T/46T	RS6-0453-000CN	
ns	GEAR, 17T	RS6-0459-000CN	

Top Cover Assembly

Figure 8-2 Top Cover Assembly

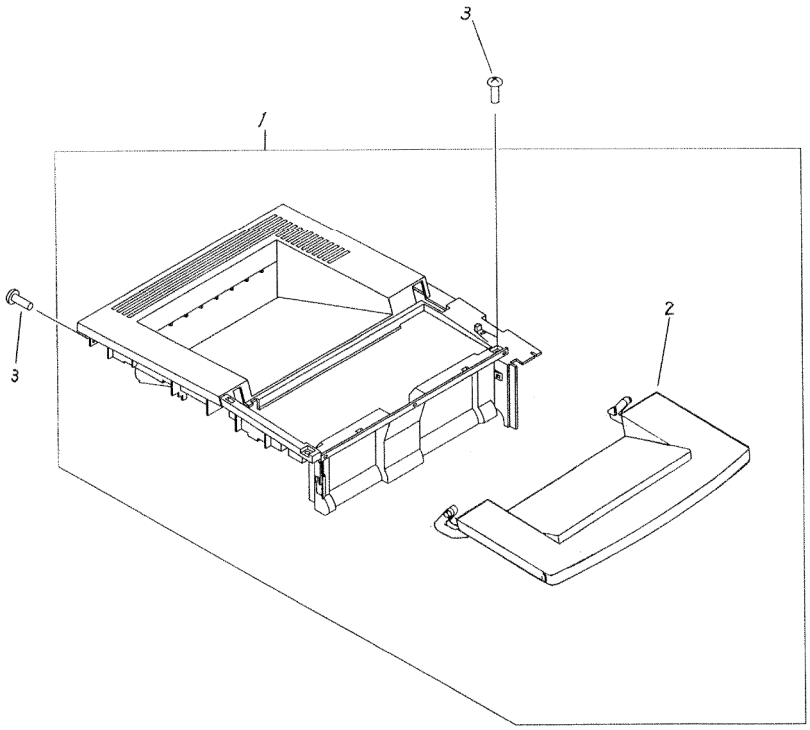

Table 8-2. Top Cover Assembly

Ref	Description	Part Number	Qty
1	TOP COVER ASSY	RG5-4122-000CN	1
2	COVER, CARTRIDGE	RB2-2856-000CN	1
3	SCREW, M4X10	XA9-0606-000CN	1

Internal Components

Figure 8-3 Internal Components (1 of 3)

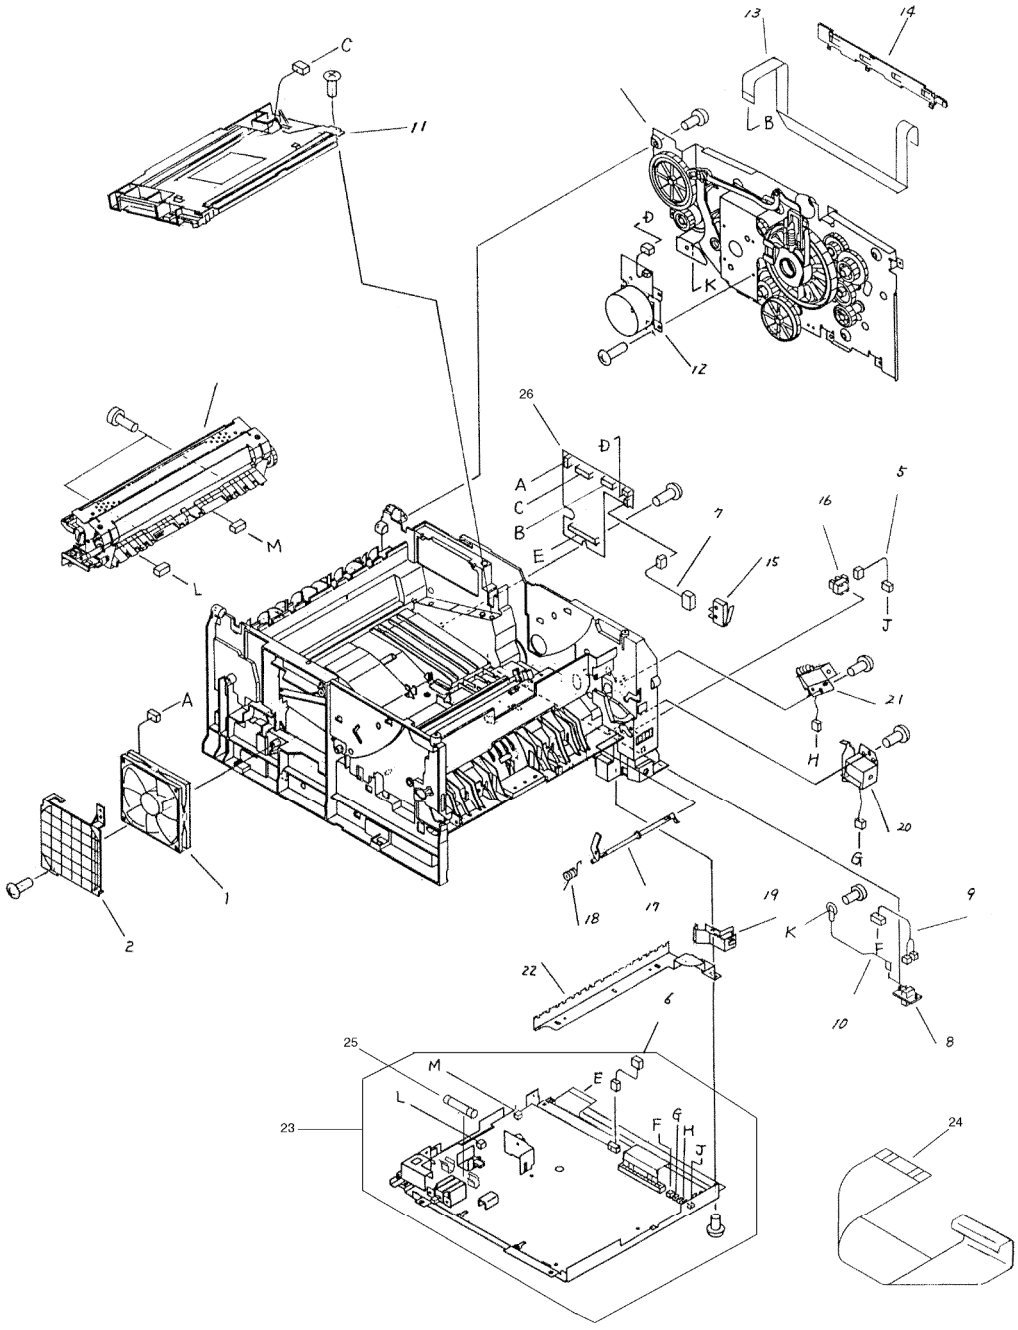

Table 8-3. Internal Components (1 of 3)

Ref	Description	Part Number	Qty
1	FAN	RH7-1382-000CN	1
2	FILTER, DUST	RB2-2817-000CN	1

Table 8-3. Internal Components (1 of 3) (continued)

Ref	Description	Part Number	Qty
5	MP SENSOR CABLE	RG5-4254-000CN	1
6	DC POWER CABLE	RG5-4255-000CN	1
7	INTERLOCK SWITCH CABLE	RG5-4256-000CN	1
8	CONNECTOR, 6P	VS1-6173-006	1
9	PAPER FEEDER CABLE	RG5-4262-000CN	1
10	FRAME GROUND CABLE	RG5-4263-000CN	1
11	LASER-SCANNER ASSY	RG5-4172-000CN	1
12	MAIN MOTOR ASSY	RH7-1380-000CN	1
13	CABLE, FLAT	RH2-5350-000CN	1
14	PLATE, GUIDE. FFC	RB2-2946-000CN	1
15	MICROSWITCH	RH7-6051-000CN	1
16	IC, TLP1242	WG8-5382-000CN	6
17	LEVER, SENSOR	RB2-2836-000CN	1
18	SPRING, TORSION	RB2-2837-000CN	1
19	SPRING, LEAF	RB2-2847-000CN	1
20	SOLENOID	RH7-5209-000CN	1
21	SOLENOID	RH7-5211-000CN	1
22	ELIMINATOR, STATIC CHARGE	RB2-2826-000CN	1
23	ENGINE CONTROLLER ASSY 100-127 V ENGINE CONTROLLER ASSY 220-240 V	RG5-4248 (4125) RG5-4249 (4150)	1
24	ECU CABLE	RH2-5348-000CN	1
25	FUSE 201	VD7-0211-002	1
26	INTERMEDIATE PCB ASSY	RG5-4250-000CN	1

Figure 8-4 Internal Components (2 of 3)

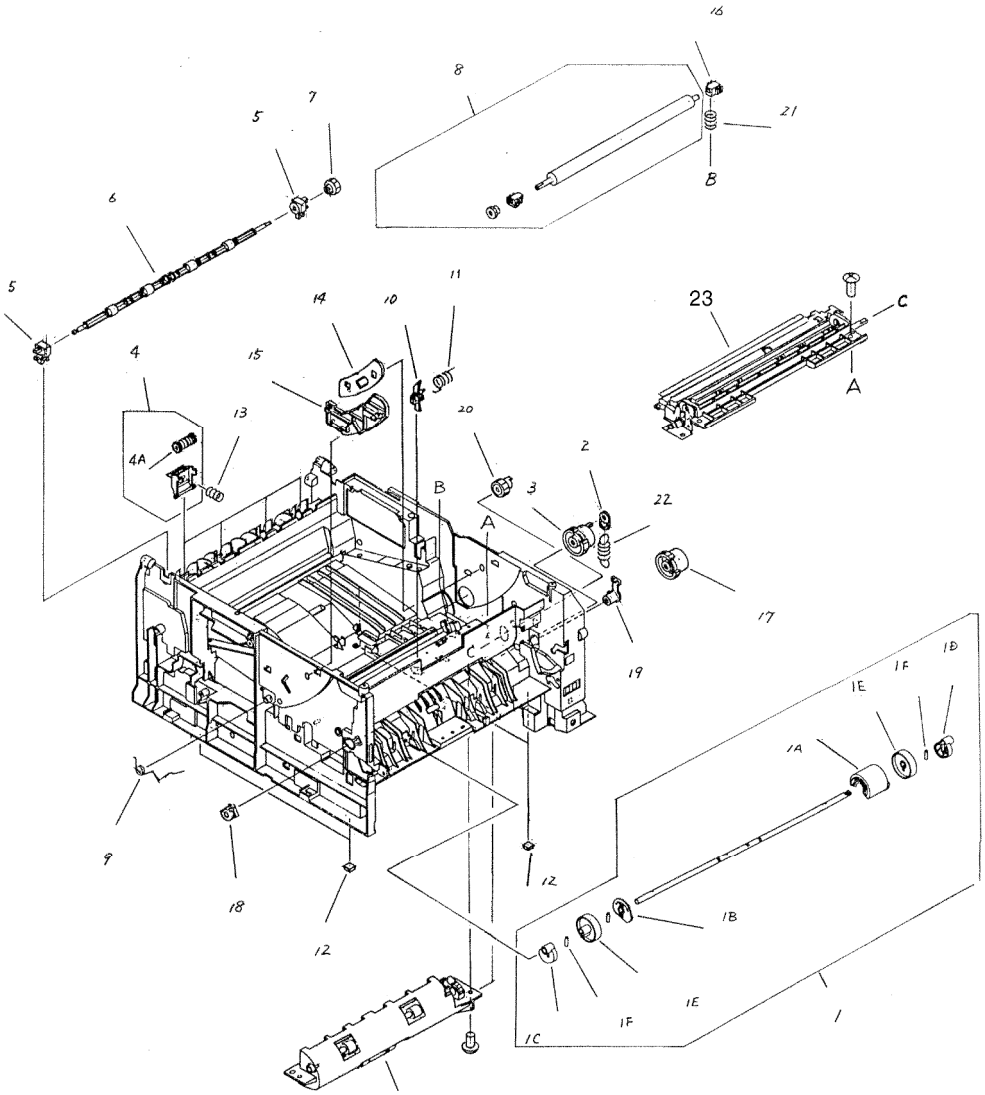

Table 8-4. Internal Components (2 of 3)

Ref	Description	Part Number	Qty
1	MP PICK-UP ASSY	RG5-4128-000CN	1
1A	ROLLER, PICK-UP	RB2-2900-000CN	1
1B	CAM, ROLLER	RB2-2901-000CN	1
1C	CAM, LFT	RB2-2902-000CN	1
1D	CAM, RT	RB2-2903-000CN	1
1E	ROLLER	RB2-2904-000CN	1
1F	PIN, DOWEL	XD9-0159-000CN	1
2	SPRING RETAINER	RB1-2190-000CN	1
3	GEAR, 26T	RS6-0444-000CN	1
4	FU DELIVERY ROLLER ASSY	RG5-4119-000CN	1
4A	ROLLER, FACE-DOWN LWR	RB2-2849-000CN	1
5	BUSHING	RB2-2850-000CN	1
6	ROLLER, FACE-DOWN, UPPR	RF5-2604-000CN	1
7	GEAR, 15T	RS6-0441-000CN	1
8	TRANSFER ROLLER ASSY	RG5-4130-000CN	1
8B	BUSHING, TRANSFER, LFT	RB2-2925-000CN	1
9	SPRING, COMPRESSION	RB2-2832-000CN	1
10	ARM, SENSOR	RB2-2842-000CN	1
11	SPRING, TORSION	RB2-2843-000CN	1
12	FOOT	RB2-2816-000CN	1
13	SPRING, COMPRESSION	RS6-2023-000CN	1
14	GUIDE, CARTRIDGE, RT	RB2-2830-000CN	1
15	GUIDE, CARTRIDGE, LFT	RB2-2831-000CN	1
16	BUSHING, TRANSFER, RT	RB2-2926-000CN	1
17	GEAR, 26T	RB2-3040-000CN	1
18	BUSHING, LFT	RB2-3043-000CN	1
19	BUSHING, RT	RB2-3044-000CN	1
20	GEAR, 14T	RS6-0445-000CN	1
21	SPRING, COMPRESSION	RS6-2022-000CN	1
22	SPRING, TENSION	RS6-2025-000CN	1
23	REGISTRATION ASSY	RG5-4129-000CN	1

Figure 8-5 Internal Components (3 of 3)

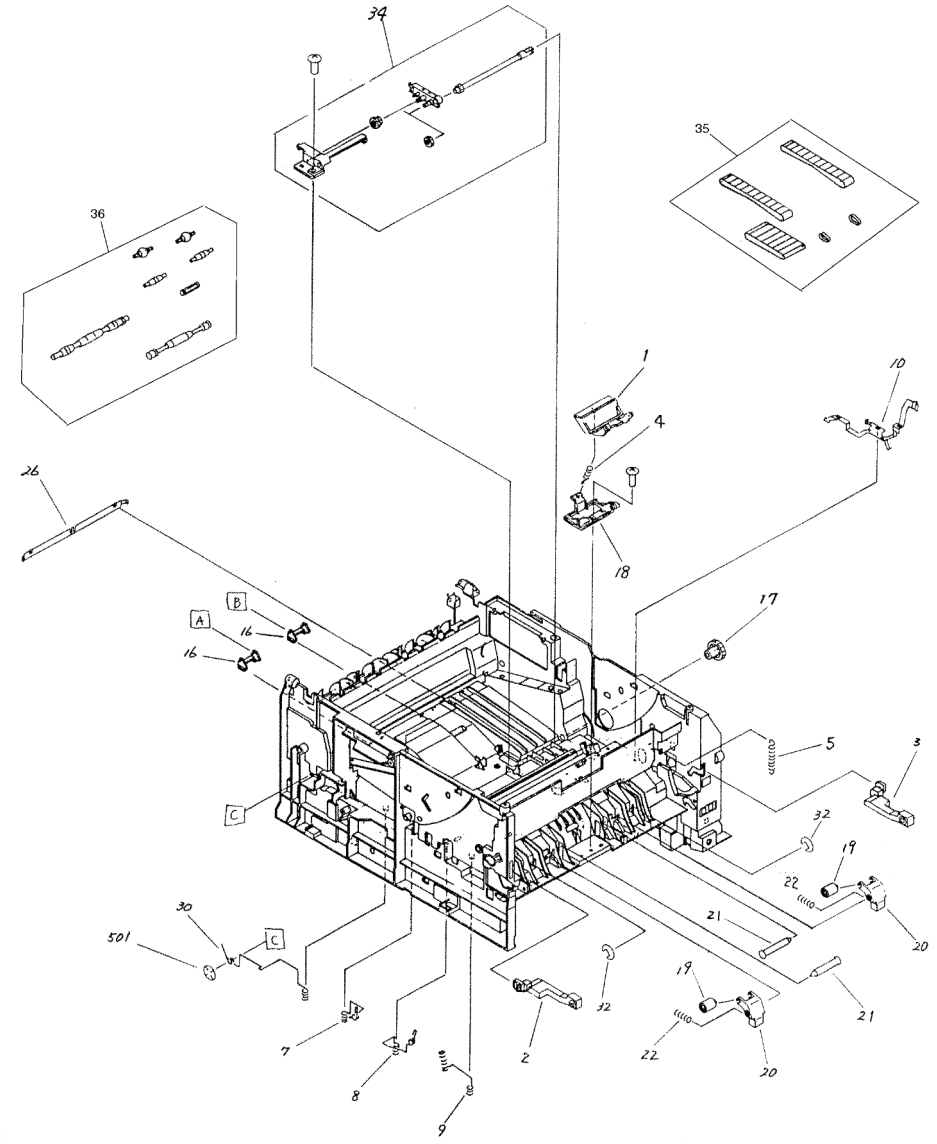

Table 8-5. Internal Components (3 of 3)

Ref	Description	Part Number	Qty
1	PAD, SEPARATION	RB2-2835-000CN	1
2	HINGE, LFT	RB2-3041-000CN	1
3	HINGE, RT	RB2-3042-000CN	1
4	SPRING, COMPRESSION	RS6-2024-000CN	1
5	SPRING, TENSION	RS6-2030-000CN	1
7	SPRING, COMPRESSION	RB2-2828-000CN	1
8	SPRING, COMPRESSION	RB2-2829-000CN	1
9	SPRING, COMPRESSION	RB2-2845-000CN	1

Table 8-5. Internal Components (3 of 3) (continued)

Ref	Description	Part Number	Qty
10	SPRING, LEAF, GROUNDING	RB2-3045-000CN	1
16	SHAFT, IDLER	RB2-3074-000CN	1
17	GEAR, 20T	RS6-0464-000CN	1
18	HOLDER, SEPARATION PAD	RB2-2838-000CN	1
19	ROLLER	RB2-3046-000CN	1
20	HOLDER, ROLLER	RB2-3047-000CN	1
21	SHAFT	RB2-3048-000CN	1
22	SPRING, COMPRESSION	RS6-2033-000CN	1
26	PLATE, GROUNDING	RB2-3080-000CN	1
30	SPRING, TORSION	RB2-3050-000CN	1
32	RING, E	XD9-0134-000CN	1
34	GEAR ASSY	RG5-4160-000CN	1
35	TRANSPORT BELT KIT	RY7-5053-000CN	1
36	TRANSPORT ROLLER KIT	RY7-5052-000CN	1

Fuser

Figure 8-6 Fuser

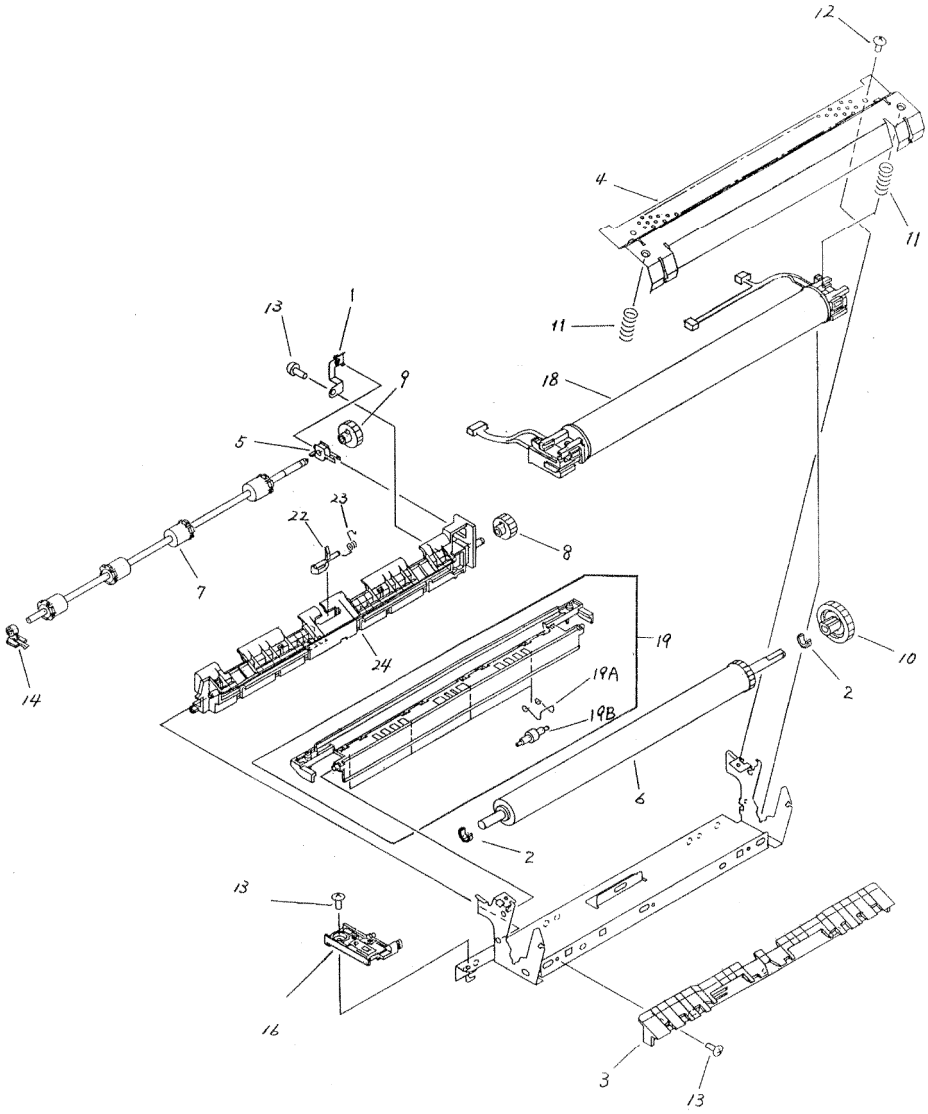

Table 8-6. Fuser

Ref	Description	Part Number	Qty
	FIXING/FUSING ASSY 110V	RG5-4132-000CN	1
	FIXING/FUSING ASSY 220V	RG5-4133-000CN	1
1	PLATE, GROUNDING	RB2-2990-000CN	1
2	BUSHING	RB2-2973-000CN	2
3	GUIDE, ENTRANCE	RB2-2974-000CN	1
4	PLATE, PRESSURE	RB2-2975-000CN	1
5	BUSHING	RB2-2985-000CN	1
6	ROLLER, PRESSURE	RF5-2601-000CN	1
7	ROLLER, DELIVERY	RF5-2603-000CN	1
8	GEAR, 14T	RS6-0442-000CN	1
9	GEAR, 15T	RS6-0443-000CN	1
10	GEAR, 26T	RS6-0458-000CN	1
11	SPRING, COMPRESSION	RS6-2029-000CN	2
14	BUSHING	RB2-2986-000CN	1
16	HOLDER, CONTACT	RF5-2609-000CN	1
18	FUSING FILM ASSY 110V	RG5-4134-000CN	1
18	FUSING FILM ASSY 220V	RG5-4135-000CN	1
19	UPPER DELIVERY GUIDE	RG5-4141-000CN	1
19A	SPRING, COMPRESSION	RB2-2978-000CN	1
19B	ROLLER, DELIVERY	RB2-2977-000CN	1
22	LEVER, SENSOR	RB2-2981-000CN	1
23	SPRING, TORSION	RB2-2982-000CN	1
24	EXIT ROLLER SUPPORT	RB2-2979-000CN	1

Printer Drive Assembly

Figure 8-7 Printer Drive Assembly

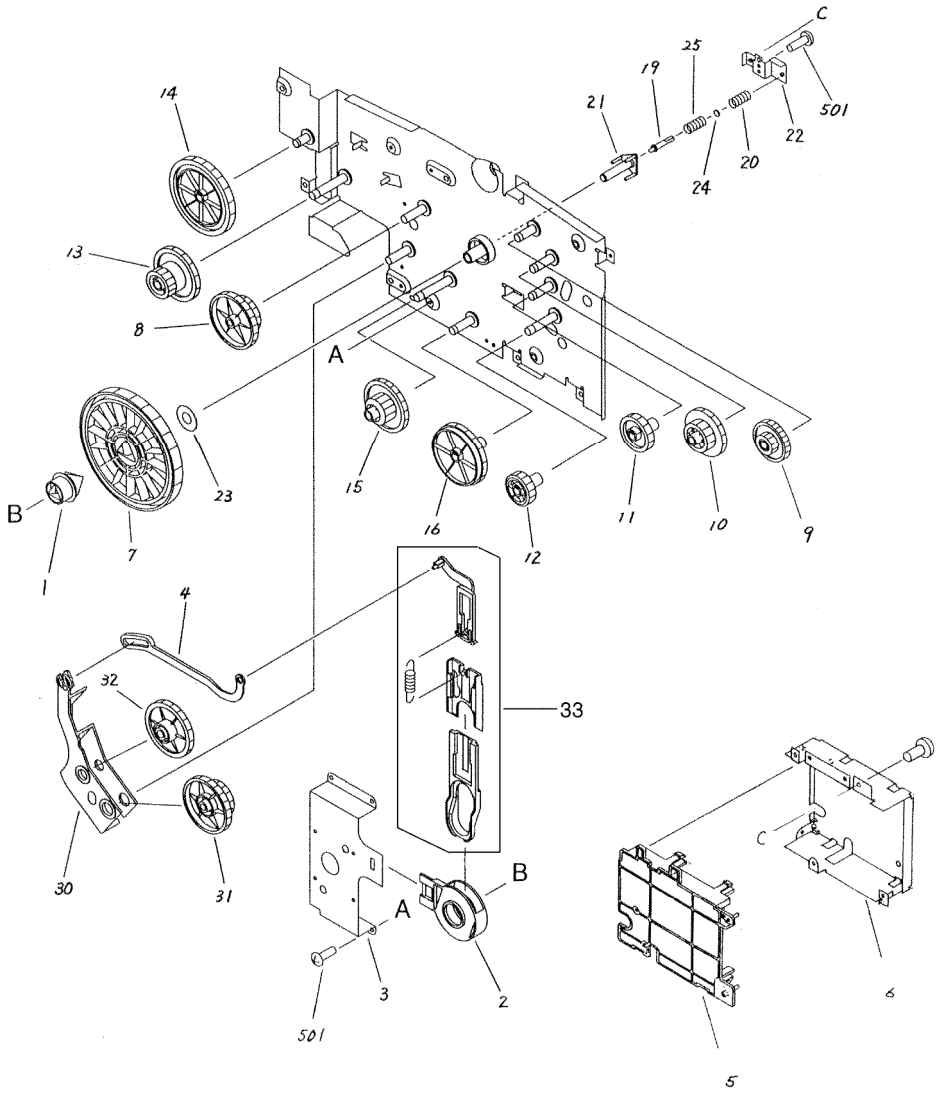

Table 8-7. Printer Drive Assembly

Ref	Description	Part Number	Qty
	PRINTER DRIVE ASSY	RG5-4131-000CN	1
1	SHAFT, COUPLING	RB2-2935-000CN	1
2	BUSHING	RB2-2936-000CN	1
3	PLATE, MOTOR	RB2-2937-000CN	1
4	LEVER, DRIVE RELEASE	RB2-2939-000CN	1
5	RAIL, GUIDE	RB2-2944-000CN	1
6	PLATE, MOUNT	RB2-2945-000CN	1
7	GEAR, 201T	RS6-0446-000CN	1

Table 8-7. Printer Drive Assembly (continued)

Ref	Description	Part Number	Qty
8	GEAR, 58T/92T	RS6-0447-000CN	1
9	GEAR, 17T/68T	RS6-0448-000CN	1
10	GEAR, 25T/41T	RS6-0449-000CN	1
11	GEAR, 31T	RS6-0450-000CN	1
12	GEAR, 26T	RS6-0451-000CN	1
14	GEAR, 67T	RS6-0455-000CN	1
13	GEAR, 23T/46T	RS6-0453-000CN	1
15	GEAR, 22T/86T	RS6-0456-000CN	1
16	GEAR, 53T	RS6-0457-000CN	1
19	PIN	RB2-2943-000CN	1
20	SPRING, COMPRESSION	RS6-2027-000CN	1
21	HOLDER, PIN	RB2-2947-000CN	1
22	PLATE, SPRING	RB2-2948-000CN	1
23	WASHER	RB2-2949-000CN	1
24	FLANGE, SPRING	RB2-2950-000CN	1
25	SPRING, COMPRESSION	RS6-2031-000CN	1
2X	COUPLING ASSEMBLY	RG5-4140-000CN	1
26	LEVER, COUPLING	RB2-2940-000CN	1
27	CAM, COUPLING	RB2-2941-000CN	1
28	SPACER, COUPLING	RB2-2942-000CN	1
29	SPRING, TENSION	RS6-2028-000CN	1
30	ARM, DRIVE	RB2-2938-000CN	1
31	GEAR, 22T/93T	RS6-0452-000CN	1
32	GEAR, 48T	RS6-0454-000CN	1
33	COUPLING ASSY	R6504140-000CN	1

Paper Feeder Drive Assembly

Figure 8-8 Paper Feeder Drive Assembly

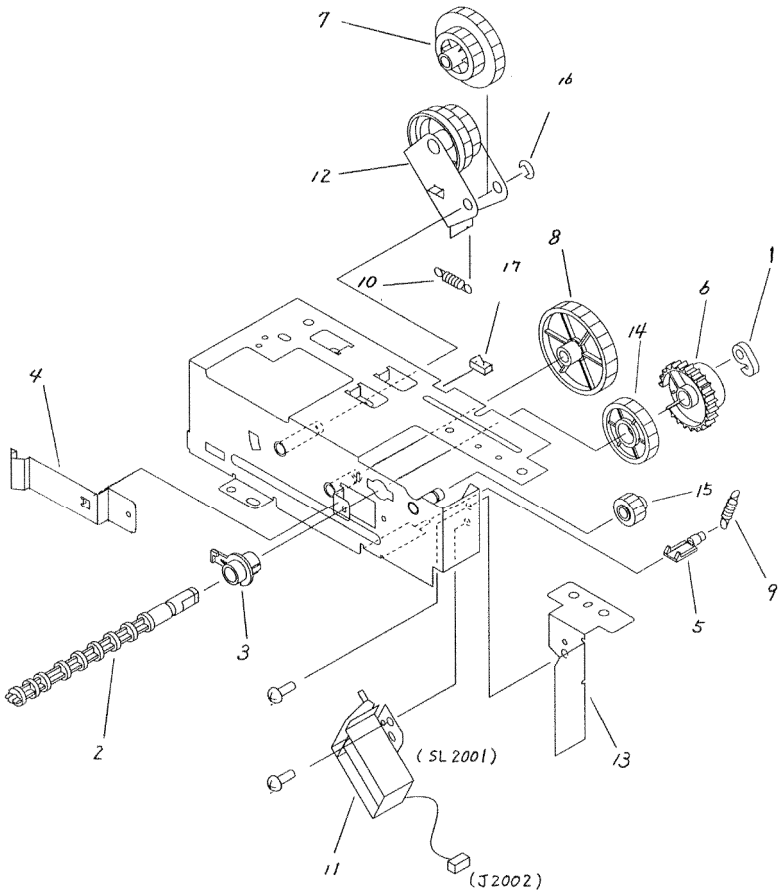

Table 8-8. Paper Feeder Drive Assembly

Ref	Description	Part Number	Qty
	PAPER FEED DRIVE ASSY	RG5-4391-000CN	1
1	COLLAR, SPRING	RB1-2190-000CN	1
2	SHAFT, DRIVE	RB2-2893-000CN	1
3	BUSHING	RB2-3475-000CN	1
4	SPRING, LEAF	RB2-3478-000CN	1
5	CAP, SPRING	RB1-6133-000CN	1
6	GEAR, 27T	RS6-0495-000CN	1
7	GEAR, 39T/34T	RS6-0497-000CN	1
8	GEAR, 45T	RS6-0498-000CN	1
9	SPRING, TENSION	RS6-2061-000CN	1
10	SPRING, TENSION	RS6-2062-000CN	1
11	SOLENOID	RH7-5213-000CN	1
12	SWING GEAR ASSY	RF5-2755-000CN	1
13	PLATE	RB2-3481-000CN	1
14	GEAR, 39T	RS6-0499-000CN	1
15	GEAR, 17T	RS6-0500-000CN	1
16	RETAINING CLIP	XD9-0136-000CN	1
17	NEED A NAME FOR THIS SWITCH	WT2-5300-000CN	1

Paper Tray

Figure 8-9 Paper Tray

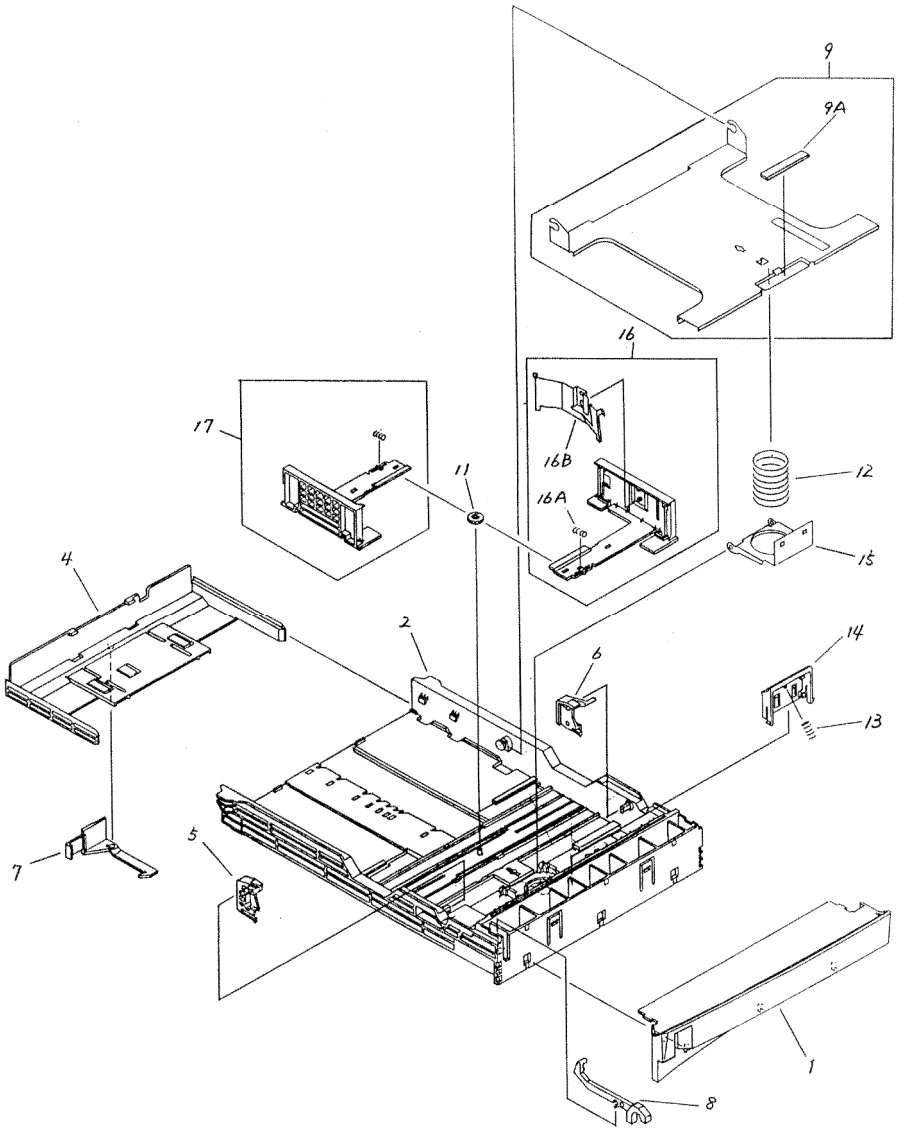

Table 8-9. Paper Tray

Ref	Description	Part Number	Qty
	PAPER CASSETTE ASSY	RG5-4138-000CN	1
1	COVER, FRONT	RB2-3000-000CN	1
2	BODY, CASSETTE	RB2-3001-000CN	1
4	PLATE, END	RB2-3003-000CN	1
5	ARM, RELEASE, LFT	RB2-3004-000CN	1
6	ARM, RELEASE, RT	RB2-3005-000CN	1
7	ARM, LOCK	RB2-3009-000CN	1
8	ARM, SENSOR	RB2-3010-000CN	1
9	PLATE, UPPER LIFTING	RF5-2599-000CN	1
9A	SHEET, SEPARATION	RB2-3007-000CN	1
11	GEAR, 10T	RS6-0440-000CN	1
12	SPRING, COMPRESSION	RS6-2020-000CN	1
13	SPRING, COMPRESSION	RS6-2021-000CN	1
14	PAD, SEPARATION	RB2-3008-000CN	1
15	HOLDER, SEPARATION PAD	RB2-3013-000CN	1
16	RT SIDE PLATE ASSY	RG5-4158-000CN	1
16A	SPRING, COMPRESSION	RS6-2035-000CN	2
16B	SPRING, LEAF	RB2-3012-000CN	1
17	LFT SIDE PLATE ASSY	RG5-4159-000CN	1

Paper Tray Pickup Assembly

Figure 8-10 Paper Tray Pickup Assembly

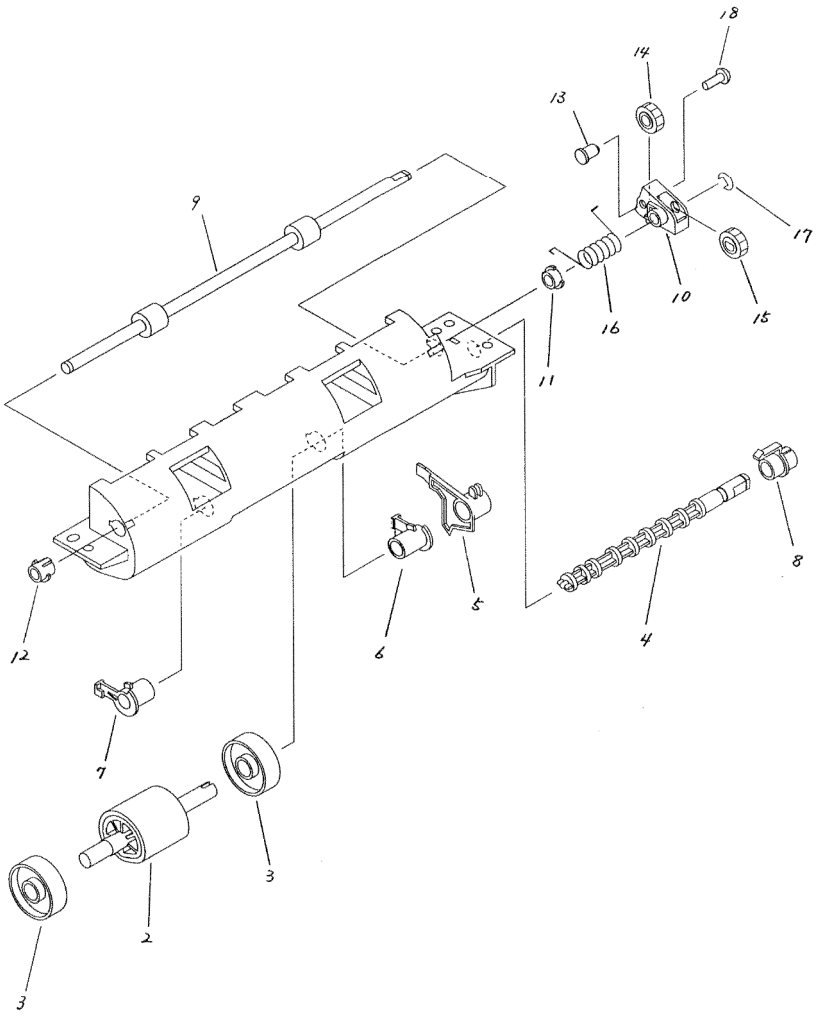

Table 8-10. Paper Tray Pickup Assembly

Ref	Description	Part Number	Qty
	PAPER PICK-UP ASSY	RG5-4127-000CN	1
2	ROLLER, PICK-UP	RB2-2891-000CN	1
3	ROLLER	RB2-2892-000CN	2
4	SHAFT, DRIVE	RB2-2893-000CN	1
5	LEVER, PAPER SENSOR	RB2-2894-000CN	1
6	BUSHING, RT	RB2-2895-000CN	1
7	BUSING, LFT	RB2-2896-000CN	1
8	BUSHING	RB2-2897-000CN	1
9	ROLLER	RB2-2898-000CN	1
10	HOLDER, GEAR	RB2-2899-000CN	1
11	BUSHING	RB2-3081-000CN	1
12	BUSHING	RB2-3082-000CN	1
13	SHAFT	RB2-3083-000CN	1
14	GEAR, 14T	RS6-0462-000CN	1
15	GEAR, 13T	RS6-0463-000CN	1
16	SPRING, TORSION	RS6-2034-000CN	1
17	RING, E	XD9-0135-000CN	1

Paper Tray External Covers

Figure 8-11 Paper Tray External Covers

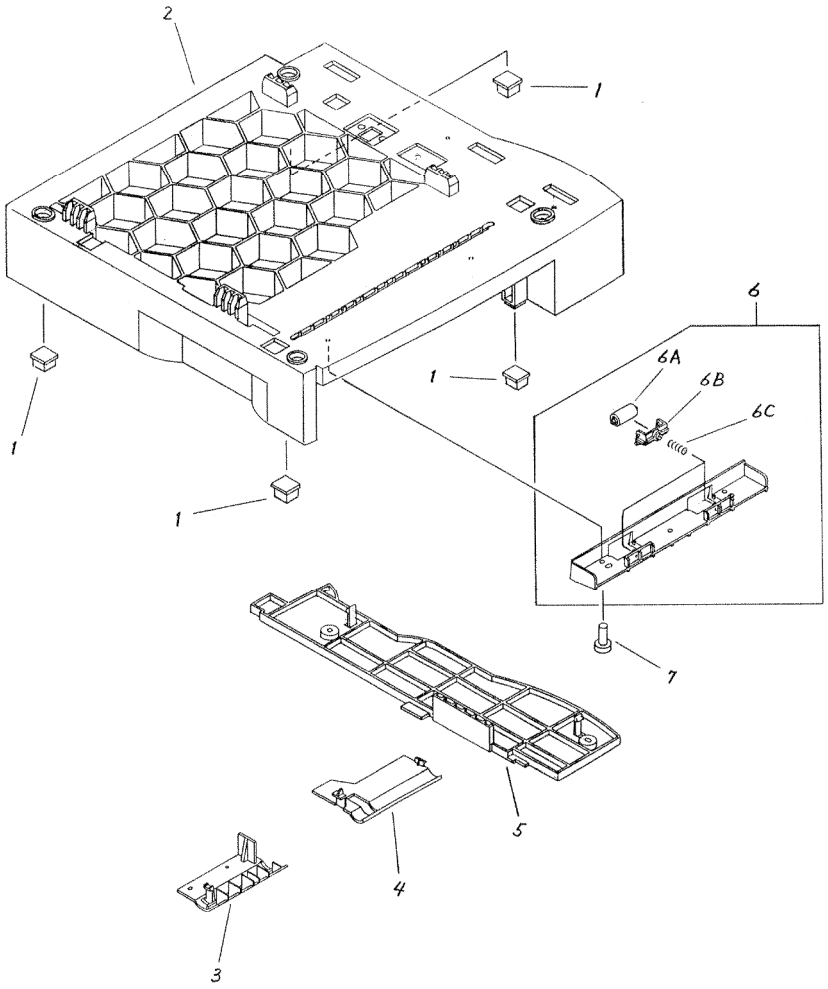

Table 8-11. Paper Tray External Covers

Ref	Description	Part Number	Qty
1	FOOT	RB2-2816-000CN	4
2	FRAME, FEEDER	RB2-3471-000CN	1
3	COVER, 3	RB2-3489-000CN	1
4	COVER, 1	RB2-3479-000CN	1
5	COVER, 2	RB2-3480-000CN	1
6	LOWER FEED ROLLER ASSY	RG5-4394-000CN	1
6A	ROLLER	RB2-3484-000CN	1
6B	HOLDER, ROLLER	RB2-3485-000CN	1
6C	SPRING, COMPRESSION	RS6-2063-000CN	1
7	SCREW, M4X8	XA9-0605-000CN	3

Paper Tray Internal Components

Figure 8-12Paper Tray Internal Components

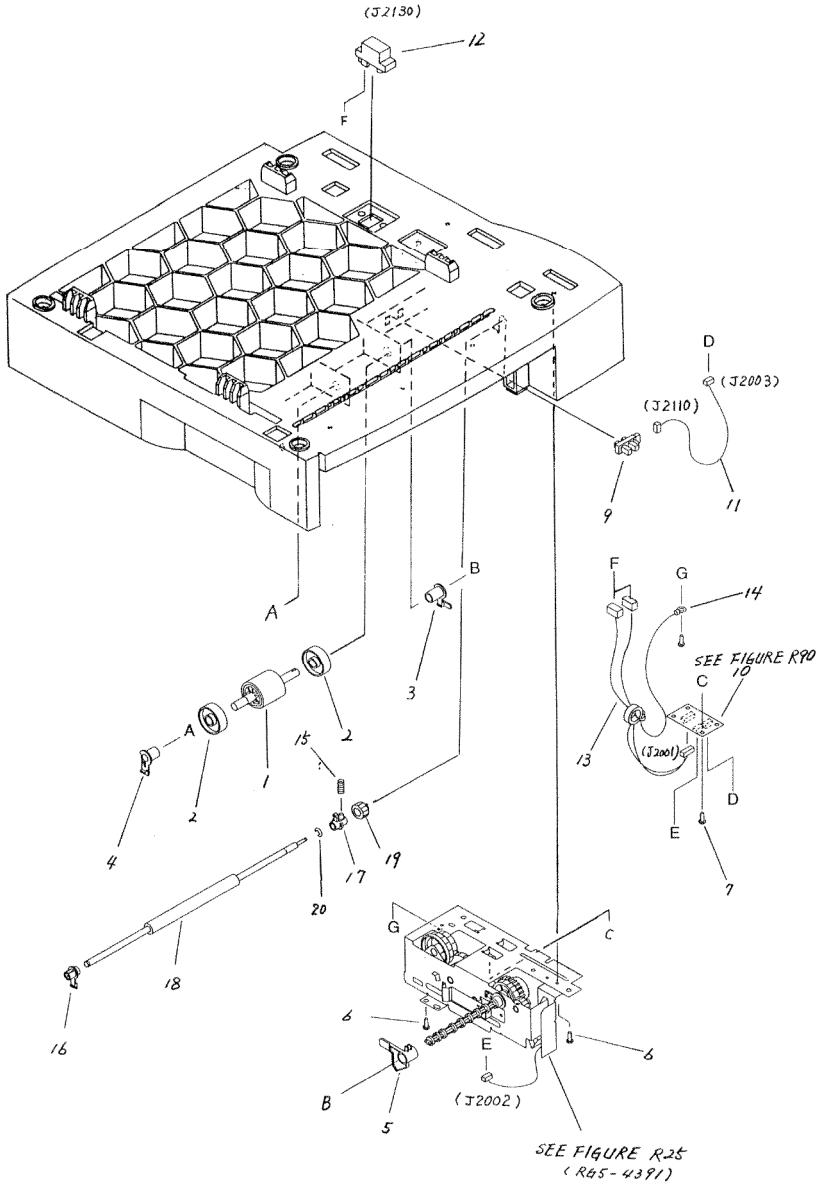

Table 8-12. Paper Tray Internal Components

Ref	Description	Part Number	Qty
1	ROLLER, PICK-UP	RB2-2891-000CN	1
2	ROLLER	RB2-2892-000CN	1
3	BUSHING, RT	RB2-2895-000CN	1
4	BUSHING, LFT	RB2-2896-000CN	1
5	LEVER, SENSOR	RB2-3474-000CN	1
7	SCREW, W/WASHER M3X8	XA9-0924-000CN	1
9	IC, TLP1242	WG8-5382-000CN	1
10	PAPER FEED DRIVE PCB ASSY	RG5-4277-000CN	1
11	SENSOR CABLE	RG5-4278-000CN	1
12	CONNECTOR	VS1-6174-006	1
13	RELAY CABLE	RG5-4280-000CN	1
14	FG CABLE	RG5-4281-000CN	1
15	SPRING, COMPRESSION	RS6-2064-000CN	1
16	BUSHING	RB2-3486-000CN	1
17	BUSHING	RB2-3487-000CN	1
18	ROLLER, FEED	RB2-3490-000CN	1
19	GEAR, 15T	RS6-0501-000CN	1
501	SCREW, MACHINE M4X8	XB6-7400-809	1

Hardware Table

Table 8-13. Hardware Table

Example	Description	Part Number
	?????	
	Screw, M4X10	XA9-0606
	?????	
	Screw, M3X6	XA9-0836
	Screw, tapping, pan head, M3X4	XB-7300-407
	Screw, M3X8	XB2-7300-607
	Screw, M3X8	XB2-7300-807 or XA9-0924?
	Screw, M3X8	XB2-7300-807 or XA9-0924?
	Screw, M4x12	XA9-0773

Table 8-13. Hardware Table (continued)

Example	Description	Part Number
	Screw, M4x12 (brass colored pan head)	?????

Alphabetical Parts List

Table 8-14. Alphabetical Parts List

Description	Part Number	Table and Page
ARM, DRIVE	RB2-2938-000CN	table 8-7 on page 265
ARM, LOCK	RB2-3009-000CN	table 8-9 on page 270
ARM, RELEASE, LFT	RB2-3004-000CN	table 8-9 on page 270
ARM, RELEASE, RT	RB2-3005-000CN	table 8-9 on page 270
ARM, SENSOR	RB2-2842-000CN	table 8-4 on page 260
ARM, SENSOR	RB2-3010-000CN	table 8-9 on page 270
BLOCK, LIGHT PIPE	RB2-2863-000CN	table 8-1 on page 255
BODY, CASSETTE	RB2-3001-000CN	table 8-9 on page 270
BUSHING	RB2-2850-000CN	table 8-4 on page 260
BUSHING	RB2-2897-000CN	table 8-10 on page 272
BUSHING	RB2-2936-000CN	table 8-7 on page 265
BUSHING	RB2-2973-000CN	table 8-6 on page 264
BUSHING	RB2-2985-000CN	table 8-6 on page 264
BUSHING	RB2-2986-000CN	table 8-6 on page 264
BUSHING	RB2-3081-000CN	table 8-10 on page 272
BUSHING	RB2-3082-000CN	table 8-10 on page 272
BUSHING	RB2-3475-000CN	table 8-8 on page 268
BUSHING	RB2-3486-000CN	table 8-12 on page 276
BUSHING	RB2-3487-000CN	table 8-12 on page 276
BUSHING, LFT	RB2-2896-000CN	table 8-12 on page 276
BUSHING, LFT	RB2-3043-000CN	table 8-4 on page 260
BUSHING, RT	RB2-2895-000CN	table 8-10 on page 272
BUSHING, RT	RB2-2895-000CN	table 8-12 on page 276
BUSHING, RT	RB2-3044-000CN	table 8-4 on page 260
BUSHING, TRANSFER, LFT	RB2-2925-000CN	table 8-4 on page 260
BUSHING, TRANSFER, RT	RB2-2926-000CN	table 8-4 on page 260
BUSING, LFT	RB2-2896-000CN	table 8-10 on page 272
BUTTON, POWERSWITCH	RB2-2859-000CN	table 8-1 on page 255
CABLE, FLAT	RH2-5348-000CN	table 8-1 on page 255
CABLE, FLAT	RH2-5350-000CN	table 8-3 on page 257
CAM, COUPLING	RB2-2941-000CN	table 8-7 on page 265
CAM, LFT	RB2-2902-000CN	table 8-4 on page 260
CAM, ROLLER	RB2-2901-000CN	table 8-4 on page 260
CAM, RT	RB2-2903-000CN	table 8-4 on page 260
CAP, SPRING	RB1-6133-000CN	table 8-8 on page 268

Table 8-14. Alphabetical Parts List (continued)

Description	Part Number	Table and Page
COLLAR, SPRING	RB1-2190-000CN	table 8-8 on page 268
CONNECTOR	VS1-6174-006	table 8-12 on page 276
CONNECTOR, 6P	VS1-6173-006	table 8-3 on page 257
COUPLING ASSEMBLY	RG5-4140-000CN	table 8-7 on page 265
COUPLING ASSY	R6504140-000CN	table 8-7 on page 265
COVER, 1	RB2-3479-000CN	table 8-11 on page 274
COVER, 2	RB2-3480-000CN	table 8-11 on page 274
COVER, 3	RB2-3489-000CN	table 8-11 on page 274
COVER, CARTRIDGE	RB2-2856-000CN	table 8-2 on page 256
COVER, DIMM	RB2-2861-000CN	table 8-1 on page 255
COVER, FRONT	RB2-3000-000CN	table 8-9 on page 270
COVER, GEAR	RB2-3072-000CN	table 8-1 on page 255
COVER, I/O	RB2-2862-000CN	table 8-1 on page 255
COVER, REAR	RB2-2857-000CN	table 8-1 on page 255
DC POWER CABLE	RG5-4255-000CN	table 8-3 on page 257
DIMM COVER ASSY	RG5-4123-000CN	table 8-1 on page 255
ECU CABLE	RH2-5348-000CN	table 8-3 on page 257
ELIMINATOR, STATIC CHARGE	RB2-2826-000CN	table 8-3 on page 257
ENGINE CONTROLLER ASSY 100-127 V ENGINE CONTROLLER ASSY 220-240 V	RG5-4248 (4125) RG5-4249 (4150)	table 8-3 on page 257
EXIT ROLLER SUPPORT	RB2-2979-000CN	table 8-6 on page 264
FACE-UP TRAY ASSY	RG5-4124-000CN	table 8-1 on page 255
FAN	RH7-1382-000CN	table 8-3 on page 257
FG CABLE	RG5-4281-000CN	table 8-12 on page 276
FILTER, DUST	RB2-2817-000CN	table 8-3 on page 257
FUSING FILM ASSY 110V	RG5-4134-000CN	table 8-6 on page 264
FUSING FILM ASSY 220V	RG5-4135-000CN	table 8-6 on page 264
FIXING/FUSING ASSY 110V	RG5-4132-000CN	table 8-6 on page 264
FIXING/FUSING ASSY 220V	RG5-4133-000CN	table 8-6 on page 264
FLANGE, SPRING	RB2-2950-000CN	table 8-7 on page 265
FOOT	RB2-2816-000CN	table 8-4 on page 260
FOOT	RB2-2816-000CN	table 8-11 on page 274
FORMATTER PCB	C4132-67901	table 8-1 on page 255
FRAME GROUND CABLE	RG5-4263-000CN	table 8-3 on page 257
FRAME, FEEDER	RB2-3471-000CN	table 8-11 on page 274
FU DELIVERY ROLLER ASSY	RG5-4119-000CN	table 8-4 on page 260
FUSE 201	VD7-0211-002	table 8-3 on page 257
GEAR ASSY	RG5-4160-000CN	table 8-5 on page 261

Table 8-14. Alphabetical Parts List (continued)

Description	Part Number	Table and Page
GEAR, 10T	RS6-0440-000CN	table 8-9 on page 270
GEAR, 13T	RS6-0463-000CN	table 8-10 on page 272
GEAR, 14T	RS6-0442-000CN	table 8-6 on page 264
GEAR, 14T	RS6-0445-000CN	table 8-4 on page 260
GEAR, 14T	RS6-0462-000CN	table 8-10 on page 272
GEAR, 15T	RS6-0441-000CN	table 8-4 on page 260
GEAR, 15T	RS6-0443-000CN	table 8-6 on page 264
GEAR, 15T	RS6-0501-000CN	table 8-12 on page 276
GEAR, 17T	RS6-0500-000CN	table 8-8 on page 268
GEAR, 17T/68T	RS6-0448-000CN	table 8-7 on page 265
GEAR, 18T	RB2-2885-000CN	table 8-1 on page 255
GEAR, 201T	RS6-0446-000CN	table 8-7 on page 265
GEAR, 20T	RS6-0464-000CN	table 8-5 on page 261
GEAR, 22T/86T	RS6-0456-000CN	table 8-7 on page 265
GEAR, 22T/93T	RS6-0452-000CN	table 8-7 on page 265
GEAR, 23T/46T	RS6-0453-000CN	table 8-1 on page 255
GEAR, 23T/46T	RS6-0453-000CN	table 8-7 on page 265
GEAR, 25T/41T	RS6-0449-000CN	table 8-7 on page 265
GEAR, 26T	RB2-3040-000CN	table 8-4 on page 260
GEAR, 26T	RS6-0451-000CN	table 8-7 on page 265
GEAR, 26T	RS6-0458-000CN	table 8-6 on page 264
GEAR, 27T	RS6-0495-000CN	table 8-8 on page 268
GEAR, 31T	RS6-0450-000CN	table 8-7 on page 265
GEAR, 39T	RS6-0499-000CN	table 8-8 on page 268
GEAR, 39T/34T	RS6-0497-000CN	table 8-8 on page 268
GEAR, 45T	RS6-0498-000CN	table 8-8 on page 268
GEAR, 48T	RS6-0454-000CN	table 8-7 on page 265
GEAR, 53T	RS6-0457-000CN	table 8-7 on page 265
GEAR, 58T/92T	RS6-0447-000CN	table 8-7 on page 265
GEAR, 67T	RS6-0455-000CN	table 8-7 on page 265
GEAR, 17T	RS6-0459-000CN	table 8-1 on page 255
GEAR, 26T	RS6-0444-000CN	table 8-4 on page 260
GUIDE, CABLE	RB2-2818-000CN	table 8-1 on page 255
GUIDE, CARTRIDGE, LFT	RB2-2831-000CN	table 8-4 on page 260
GUIDE, CARTRIDGE, RT	RB2-2830-000CN	table 8-4 on page 260
GUIDE, DELIVERY, LOWER	RF5-2602-000CN	table 8-1 on page 255
GUIDE, DELIVERY, UPPER	RB2-2976-000CN	table 8-1 on page 255
GUIDE, ENTRANCE	RB2-2974-000CN	table 8-6 on page 264

Table 8-14. Alphabetical Parts List (continued)

Description	Part Number	Table and Page
HINGE, LFT	RB2-3041-000CN	table 8-5 on page 261
HINGE, RT	RB2-3042-000CN	table 8-5 on page 261
HOLDER, CONTACT	RF5-2609-000CN	table 8-6 on page 264
HOLDER, GEAR	RB2-2899-000CN	table 8-10 on page 272
HOLDER, PIN	RB2-2947-000CN	table 8-7 on page 265
HOLDER, ROLLER	RB2-3047-000CN	table 8-5 on page 261
HOLDER, ROLLER	RB2-3485-000CN	table 8-11 on page 274
HOLDER, SEPARATION PAD	RB2-2838-000CN	table 8-5 on page 261
HOLDER, SEPARATION PAD	RB2-3013-000CN	table 8-9 on page 270
IC, TLP1242	WG8-5382-000CN	table 8-3 on page 257
IC, TLP1242	WG8-5382-000CN	table 8-12 on page 276
INTERLOCK SWITCH CABLE	RG5-4256-000CN	table 8-3 on page 257
INTERMEDIATE PCB ASSY	RG5-4250-000CN	table 8-3 on page 257
IR WINDOW`	RB2-2866-000CN	table 8-1 on page 255
LASER-SCANNER ASSY	RG5-4172-000CN	table 8-3 on page 257
LEFT COVER ASSY	RG5-4139-000CN	table 8-1 on page 255
LEVER, COUPLING	RB2-2940-000CN	table 8-7 on page 265
LEVER, DRIVE RELEASE	RB2-2939-000CN	table 8-7 on page 265
LEVER, PAPER SENSOR	RB2-2894-000CN	table 8-10 on page 272
LEVER, SENSOR	RB2-2836-000CN	table 8-3 on page 257
LEVER, SENSOR	RB2-2981-000CN	table 8-6 on page 264
LEVER, SENSOR	RB2-3474-000CN	table 8-12 on page 276
LFT SIDE PLATE ASSY	RG5-4159-000CN	table 8-9 on page 270
LIGHT PIPE ASSY	RG5-4152-000CN	table 8-1 on page 255
LOWER FEED ROLLER ASSY	RG5-4394-000CN	table 8-11 on page 274
MAIN MOTOR ASSY	RH7-1380-000CN	table 8-3 on page 257
MICROSWITCH	RH7-6051-000CN	table 8-3 on page 257
MP COVER ASSY	RG5-4121-000CN	table 8-1 on page 255
MP PICK-UP ASSY	RG5-4128-000CN	table 8-4 on page 260
MP SENSOR CABLE	RG5-4254-000CN	table 8-3 on page 257
MP TRAY ASSY	RG5-4126-000CN	table 8-1 on page 255
NEED A NAME FOR THIS SWITCH	WT2-5300-000CN	table 8-8 on page 268
PAD, SEPARATION	RB2-2835-000CN	table 8-5 on page 261
PAD, SEPARATION	RB2-3008-000CN	table 8-9 on page 270
PAPER CASSETTE ASSY	RG5-4138-000CN	table 8-9 on page 270
PAPER FEED DRIVE ASSY	RG5-4391-000CN	table 8-8 on page 268
PAPER FEED DRIVE PCB ASSY	RG5-4277-000CN	table 8-12 on page 276
PAPER FEEDER CABLE	RG5-4262-000CN	table 8-3 on page 257

Table 8-14. Alphabetical Parts List (continued)

Description	Part Number	Table and Page
PAPER PICK-UP ASSY	RG5-4127-000CN	table 8-10 on page 272
PIN	RB2-2943-000CN	table 8-7 on page 265
PIN, DOWEL	XD9-0159-000CN	table 8-4 on page 260
PIPE	RB2-2867-000CN	table 8-1 on page 255
PLATE	RB2-3481-000CN	table 8-8 on page 268
PLATE, END	RB2-3003-000CN	table 8-9 on page 270
PLATE, GROUNDING	RB2-2990-000CN	table 8-6 on page 264
PLATE, GROUNDING	RB2-3051-000CN	table 8-1 on page 255
PLATE, GROUNDING	RB2-3080-000CN	table 8-5 on page 261
PLATE, GUIDE. FFC	RB2-2946-000CN	table 8-3 on page 257
PLATE, MOTOR	RB2-2937-000CN	table 8-7 on page 265
PLATE, MOUNT	RB2-2945-000CN	table 8-7 on page 265
PLATE, PRESSURE	RB2-2975-000CN	table 8-6 on page 264
PLATE, SPRING	RB2-2948-000CN	table 8-7 on page 265
PLATE, UPPER LIFTING	RF5-2599-000CN	table 8-9 on page 270
PLATE, GROUNDING	RB2-2812-000CN	table 8-1 on page 255
PRINTER DRIVE ASSY	RG5-4131-000CN	table 8-7 on page 265
RAIL, GUIDE	RB2-2944-000CN	table 8-7 on page 265
REGISTRATION ASSY	RG5-4129-000CN	table 8-4 on page 260
RELAY CABLE	RG5-4280-000CN	table 8-12 on page 276
RETAINING CLIP	XD9-0136-000CN	table 8-8 on page 268
RING, E	XD9-0134-000CN	table 8-5 on page 261
RING, E	XD9-0135-000CN	table 8-10 on page 272
ROLLER	RB2-2892-000CN	table 8-10 on page 272
ROLLER	RB2-2898-000CN	table 8-10 on page 272
ROLLER	RB2-2904-000CN	table 8-4 on page 260
ROLLER	RB2-3484-000CN	table 8-11 on page 274
ROLLER	RB2-2892-000CN	table 8-12 on page 276
ROLLER	RB2-3046-000CN	table 8-5 on page 261
ROLLER, DELIVERY	RB2-2977-000CN	table 8-6 on page 264
ROLLER, DELIVERY	RF5-2603-000CN	table 8-6 on page 264
ROLLER, FACE-DOWN LWR	RB2-2849-000CN	table 8-4 on page 260
ROLLER, FACE-DOWN, UPPR	RF5-2604-000CN	table 8-4 on page 260
ROLLER, FEED	RB2-3490-000CN	table 8-12 on page 276
ROLLER, PICK-UP	RB2-2891-000CN	table 8-10 on page 272
ROLLER, PICK-UP	RB2-2891-000CN	table 8-12 on page 276
ROLLER, PICK-UP	RB2-2900-000CN	table 8-4 on page 260
ROLLER, PRESSURE	RF5-2601-000CN	table 8-6 on page 264

Table 8-14. Alphabetical Parts List (continued)

Description	Part Number	Table and Page
RT SIDE PLATE ASSY	RG5-4158-000CN	table 8-9 on page 270
SCREW, M4X10	XA9-0606-000CN	table 8-2 on page 256
SCREW, M4X8	XA9-0605-000CN	table 8-11 on page 274
SCREW, MACHINE M4X8	XB6-7400-809	table 8-12 on page 276
SCREW, W/WASHER M3X8	XA9-0924-000CN	table 8-12 on page 276
SENSOR CABLE	RG5-4278-000CN	table 8-12 on page 276
SHAFT	RB2-3048-000CN	table 8-5 on page 261
SHAFT	RB2-3083-000CN	table 8-10 on page 272
SHAFT, COUPLING	RB2-2935-000CN	table 8-7 on page 265
SHAFT, DRIVE	RB2-2893-000CN	table 8-8 on page 268
SHAFT, DRIVE	RB2-2893-000CN	table 8-10 on page 272
SHAFT, IDLER	RB2-3074-000CN	table 8-5 on page 261
SHEET, SEPARATION	RB2-3007-000CN	table 8-9 on page 270
SHEET, SEPARATION MP	RB2-2886-000CN	table 8-1 on page 255
SOLENOID	RH7-5209-000CN	table 8-3 on page 257
SOLENOID	RH7-5211-000CN	table 8-3 on page 257
SOLENOID	RH7-5213-000CN	table 8-8 on page 268
SPACER, COUPLING	RB2-2942-000CN	table 8-7 on page 265
SPRING RETAINER	RB1-2190-000CN	table 8-4 on page 260
SPRING, COMPRESSION	RB2-2828-000CN	table 8-5 on page 261
SPRING, COMPRESSION	RB2-2829-000CN	table 8-5 on page 261
SPRING, COMPRESSION	RB2-2832-000CN	table 8-4 on page 260
SPRING, COMPRESSION	RB2-2845-000CN	table 8-5 on page 261
SPRING, COMPRESSION	RB2-2860-000CN	table 8-1 on page 255
SPRING, COMPRESSION	RB2-2978-000CN	table 8-6 on page 264
SPRING, COMPRESSION	RS6-2020-000CN	table 8-9 on page 270
SPRING, COMPRESSION	RS6-2021-000CN	table 8-9 on page 270
SPRING, COMPRESSION	RS6-2022-000CN	table 8-4 on page 260
SPRING, COMPRESSION	RS6-2023-000CN	table 8-4 on page 260
SPRING, COMPRESSION	RS6-2024-000CN	table 8-5 on page 261
SPRING, COMPRESSION	RS6-2027-000CN	table 8-7 on page 265
SPRING, COMPRESSION	RS6-2029-000CN	table 8-6 on page 264
SPRING, COMPRESSION	RS6-2031-000CN	table 8-7 on page 265
SPRING, COMPRESSION	RS6-2033-000CN	table 8-5 on page 261
SPRING, COMPRESSION	RS6-2035-000CN	table 8-9 on page 270
SPRING, COMPRESSION	RS6-2063-000CN	table 8-11 on page 274
SPRING, COMPRESSION	RS6-2064-000CN	table 8-12 on page 276
SPRING, LEAF	RB2-2847-000CN	table 8-3 on page 257

Table 8-14. Alphabetical Parts List (continued)

Description	Part Number	Table and Page
SPRING, LEAF	RB2-3012-000CN	table 8-9 on page 270
SPRING, LEAF	RB2-3478-000CN	table 8-8 on page 268
SPRING, LEAF, GROUNDING	RB2-3045-000CN	table 8-5 on page 261
SPRING, TENSION	RS6-2025-000CN	table 8-4 on page 260
SPRING, TENSION	RS6-2028-000CN	table 8-7 on page 265
SPRING, TENSION	RS6-2030-000CN	table 8-5 on page 261
SPRING, TENSION	RS6-2061-000CN	table 8-8 on page 268
SPRING, TENSION	RS6-2062-000CN	table 8-8 on page 268
SPRING, TORSION	RB2-2843-000CN	table 8-4 on page 260
SPRING, TORSION	RB2-2982-000CN	table 8-6 on page 264
SPRING, TORSION	RB2-3050-000CN	table 8-5 on page 261
SPRING, TORSION	RS6-2034-000CN	table 8-10 on page 272
SPRING, TORSION	RB2-2837-000CN	table 8-3 on page 257
SWING GEAR ASSY	RF5-2755-000CN	table 8-8 on page 268
TOP COVER ASSY	RG5-4122-000CN	table 8-2 on page 256
TRANSFER ROLLER ASSY	RG5-4130-000CN	table 8-4 on page 260
TRANSPORT BELT KIT	RY7-5053-000CN	table 8-5 on page 261
TRANSPORT ROLLER KIT	RY7-5052-000CN	table 8-5 on page 261
TRAY, EXPANSION 1	RB2-3036-000CN	table 8-1 on page 255
TRAY, EXPANSION 1	RB2-3037-000CN	table 8-1 on page 255
TRAY, FACE-UP	RB2-2876-000CN	table 8-1 on page 255
UPPER DELIVERY GUIDE	RG5-4141-000CN	table 8-6 on page 264
WASHER	RB2-2949-000CN	table 8-7 on page 265

Numerical Parts List

Table 8-15. Numerical Parts List

Part Number	Description	Table and Page
C4132-67901	FORMATTER PCB	table 8-1 on page 255
R6504140-000CN	COUPLING ASSY	table 8-7 on page 265
RB1-2190-000CN	COLLAR, SPRING	table 8-8 on page 268
RB1-2190-000CN	SPRING RETAINER	table 8-4 on page 260
RB1-6133-000CN	CAP, SPRING	table 8-8 on page 268
RB2-2812-000CN	PLATE, GROUNDING	table 8-1 on page 255
RB2-2816-000CN	FOOT	table 8-4 on page 260
RB2-2816-000CN	FOOT	table 8-11 on page 274
RB2-2817-000CN	FILTER, DUST	table 8-3 on page 257
RB2-2818-000CN	GUIDE, CABLE	table 8-1 on page 255
RB2-2826-000CN	ELIMINATOR, STATIC CHARGE	table 8-3 on page 257
RB2-2828-000CN	SPRING, COMPRESSION	table 8-5 on page 261
RB2-2829-000CN	SPRING, COMPRESSION	table 8-5 on page 261
RB2-2830-000CN	GUIDE, CARTRIDGE, RT	table 8-4 on page 260
RB2-2831-000CN	GUIDE, CARTRIDGE, LFT	table 8-4 on page 260
RB2-2832-000CN	SPRING, COMPRESSION	table 8-4 on page 260
RB2-2835-000CN	PAD, SEPARATION	table 8-5 on page 261
RB2-2836-000CN	LEVER, SENSOR	table 8-3 on page 257
RB2-2837-000CN	SPRING, TORSION	table 8-3 on page 257
RB2-2838-000CN	HOLDER, SEPARATION PAD	table 8-5 on page 261
RB2-2842-000CN	ARM, SENSOR	table 8-4 on page 260
RB2-2843-000CN	SPRING, TORSION	table 8-4 on page 260
RB2-2845-000CN	SPRING, COMPRESSION	table 8-5 on page 261
RB2-2847-000CN	SPRING, LEAF	table 8-3 on page 257
RB2-2849-000CN	ROLLER, FACE-DOWN LWR	table 8-4 on page 260
RB2-2850-000CN	BUSHING	table 8-4 on page 260
RB2-2856-000CN	COVER, CARTRIDGE	table 8-2 on page 256
RB2-2857-000CN	COVER, REAR	table 8-1 on page 255
RB2-2859-000CN	BUTTON, POWERSWITCH	table 8-1 on page 255
RB2-2860-000CN	SPRING, COMPRESSION	table 8-1 on page 255
RB2-2861-000CN	COVER, DIMM	table 8-1 on page 255
RB2-2862-000CN	COVER, I/O	table 8-1 on page 255
RB2-2863-000CN	BLOCK, LIGHT PIPE	table 8-1 on page 255
RB2-2866-000CN	IR WINDOW`	table 8-1 on page 255
RB2-2867-000CN	PIPE	table 8-1 on page 255

Table 8-15. Numerical Parts List (continued)

Part Number	Description	Table and Page
RB2-2876-000CN	TRAY, FACE-UP	table 8-1 on page 255
RB2-2885-000CN	GEAR, 18T	table 8-1 on page 255
RB2-2886-000CN	SHEET, SEPARATION MP	table 8-1 on page 255
RB2-2891-000CN	ROLLER, PICK-UP	table 8-10 on page 272
RB2-2891-000CN	ROLLER, PICK-UP	table 8-12 on page 276
RB2-2892-000CN	ROLLER	table 8-10 on page 272
RB2-2892-000CN	ROLLER	table 8-12 on page 276
RB2-2893-000CN	SHAFT, DRIVE	table 8-8 on page 268
RB2-2893-000CN	SHAFT, DRIVE	table 8-10 on page 272
RB2-2894-000CN	LEVER, PAPER SENSOR	table 8-10 on page 272
RB2-2895-000CN	BUSHING, RT	table 8-10 on page 272
RB2-2895-000CN	BUSHING, RT	table 8-12 on page 276
RB2-2896-000CN	BUSHING, LFT	table 8-12 on page 276
RB2-2896-000CN	BUSING, LFT	table 8-10 on page 272
RB2-2897-000CN	BUSHING	table 8-10 on page 272
RB2-2898-000CN	ROLLER	table 8-10 on page 272
RB2-2899-000CN	HOLDER, GEAR	table 8-10 on page 272
RB2-2900-000CN	ROLLER, PICK-UP	table 8-4 on page 260
RB2-2901-000CN	CAM, ROLLER	table 8-4 on page 260
RB2-2902-000CN	CAM, LFT	table 8-4 on page 260
RB2-2903-000CN	CAM, RT	table 8-4 on page 260
RB2-2904-000CN	ROLLER	table 8-4 on page 260
RB2-2925-000CN	BUSHING, TRANSFER, LFT	table 8-4 on page 260
RB2-2926-000CN	BUSHING, TRANSFER, RT	table 8-4 on page 260
RB2-2935-000CN	SHAFT, COUPLING	table 8-7 on page 265
RB2-2936-000CN	BUSHING	table 8-7 on page 265
RB2-2937-000CN	PLATE, MOTOR	table 8-7 on page 265
RB2-2938-000CN	ARM, DRIVE	table 8-7 on page 265
RB2-2939-000CN	LEVER, DRIVE RELEASE	table 8-7 on page 265
RB2-2940-000CN	LEVER, COUPLING	table 8-7 on page 265
RB2-2941-000CN	CAM, COUPLING	table 8-7 on page 265
RB2-2942-000CN	SPACER, COUPLING	table 8-7 on page 265
RB2-2943-000CN	PIN	table 8-7 on page 265
RB2-2944-000CN	RAIL, GUIDE	table 8-7 on page 265
RB2-2945-000CN	PLATE, MOUNT	table 8-7 on page 265
RB2-2946-000CN	PLATE, GUIDE. FFC	table 8-3 on page 257
RB2-2947-000CN	HOLDER, PIN	table 8-7 on page 265
RB2-2948-000CN	PLATE, SPRING	table 8-7 on page 265

Table 8-15. Numerical Parts List (continued)

Part Number	Description	Table and Page
RB2-2949-000CN	WASHER	table 8-7 on page 265
RB2-2950-000CN	FLANGE, SPRING	table 8-7 on page 265
RB2-2973-000CN	BUSHING	table 8-6 on page 264
RB2-2974-000CN	GUIDE, ENTRANCE	table 8-6 on page 264
RB2-2975-000CN	PLATE, PRESSURE	table 8-6 on page 264
RB2-2976-000CN	GUIDE, DELIVERY, UPPER	table 8-1 on page 255
RB2-2977-000CN	ROLLER, DELIVERY	table 8-6 on page 264
RB2-2978-000CN	SPRING, COMPRESSION	table 8-6 on page 264
RB2-2979-000CN	EXIT ROLLER SUPPORT	table 8-6 on page 264
RB2-2981-000CN	LEVER, SENSOR	table 8-6 on page 264
RB2-2982-000CN	SPRING, TORSION	table 8-6 on page 264
RB2-2985-000CN	BUSHING	table 8-6 on page 264
RB2-2986-000CN	BUSHING	table 8-6 on page 264
RB2-2990-000CN	PLATE, GROUNDING	table 8-6 on page 264
RB2-3000-000CN	COVER, FRONT	table 8-9 on page 270
RB2-3001-000CN	BODY, CASSETTE	table 8-9 on page 270
RB2-3003-000CN	PLATE, END	table 8-9 on page 270
RB2-3004-000CN	ARM, RELEASE, LFT	table 8-9 on page 270
RB2-3005-000CN	ARM, RELEASE, RT	table 8-9 on page 270
RB2-3007-000CN	SHEET, SEPARATION	table 8-9 on page 270
RB2-3008-000CN	PAD, SEPARATION	table 8-9 on page 270
RB2-3009-000CN	ARM, LOCK	table 8-9 on page 270
RB2-3010-000CN	ARM, SENSOR	table 8-9 on page 270
RB2-3012-000CN	SPRING, LEAF	table 8-9 on page 270
RB2-3013-000CN	HOLDER, SEPARATION PAD	table 8-9 on page 270
RB2-3036-000CN	TRAY, EXPANSION 1	table 8-1 on page 255
RB2-3037-000CN	TRAY, EXPANSION 1	table 8-1 on page 255
RB2-3040-000CN	GEAR, 26T	table 8-4 on page 260
RB2-3041-000CN	HINGE, LFT	table 8-5 on page 261
RB2-3042-000CN	HINGE, RT	table 8-5 on page 261
RB2-3043-000CN	BUSHING, LFT	table 8-4 on page 260
RB2-3044-000CN	BUSHING, RT	table 8-4 on page 260
RB2-3045-000CN	SPRING, LEAF, GROUNDING	table 8-5 on page 261
RB2-3046-000CN	ROLLER	table 8-5 on page 261
RB2-3047-000CN	HOLDER, ROLLER	table 8-5 on page 261
RB2-3048-000CN	SHAFT	table 8-5 on page 261
RB2-3050-000CN	SPRING, TORSION	table 8-5 on page 261
RB2-3051-000CN	PLATE, GROUNDING	table 8-1 on page 255

Table 8-15. Numerical Parts List (continued)

Part Number	Description	Table and Page
RB2-3072-000CN	COVER, GEAR	table 8-1 on page 255
RB2-3074-000CN	SHAFT, IDLER	table 8-5 on page 261
RB2-3080-000CN	PLATE, GROUNDING	table 8-5 on page 261
RB2-3081-000CN	BUSHING	table 8-10 on page 272
RB2-3082-000CN	BUSHING	table 8-10 on page 272
RB2-3083-000CN	SHAFT	table 8-10 on page 272
RB2-3471-000CN	FRAME, FEEDER	table 8-11 on page 274
RB2-3474-000CN	LEVER, SENSOR	table 8-12 on page 276
RB2-3475-000CN	BUSHING	table 8-8 on page 268
RB2-3478-000CN	SPRING, LEAF	table 8-8 on page 268
RB2-3479-000CN	COVER, 1	table 8-11 on page 274
RB2-3480-000CN	COVER, 2	table 8-11 on page 274
RB2-3481-000CN	PLATE	table 8-8 on page 268
RB2-3484-000CN	ROLLER	table 8-11 on page 274
RB2-3485-000CN	HOLDER, ROLLER	table 8-11 on page 274
RB2-3486-000CN	BUSHING	table 8-12 on page 276
RB2-3487-000CN	BUSHING	table 8-12 on page 276
RB2-3489-000CN	COVER, 3	table 8-11 on page 274
RB2-3490-000CN	ROLLER, FEED	table 8-12 on page 276
RF5-2599-000CN	PLATE, UPPER LIFTING	table 8-9 on page 270
RF5-2601-000CN	ROLLER, PRESSURE	table 8-6 on page 264
RF5-2602-000CN	GUIDE, DELIVERY, LOWER	table 8-1 on page 255
RF5-2603-000CN	ROLLER, DELIVERY	table 8-6 on page 264
RF5-2604-000CN	ROLLER, FACE-DOWN, UPPR	table 8-4 on page 260
RF5-2609-000CN	HOLDER, CONTACT	table 8-6 on page 264
RF5-2755-000CN	SWING GEAR ASSY	table 8-8 on page 268
RG5-4119-000CN	FU DELIVERY ROLLER ASSY	table 8-4 on page 260
RG5-4121-000CN	MP COVER ASSY	table 8-1 on page 255
RG5-4122-000CN	TOP COVER ASSY	table 8-2 on page 256
RG5-4123-000CN	DIMM COVER ASSY	table 8-1 on page 255
RG5-4124-000CN	FACE-UP TRAY ASSY	table 8-1 on page 255
RG5-4126-000CN	MP TRAY ASSY	table 8-1 on page 255
RG5-4127-000CN	PAPER PICK-UP ASSY	table 8-10 on page 272
RG5-4128-000CN	MP PICK-UP ASSY	table 8-4 on page 260
RG5-4129-000CN	REGISTRATION ASSY	table 8-4 on page 260
RG5-4130-000CN	TRANSFER ROLLER ASSY	table 8-4 on page 260
RG5-4131-000CN	PRINTER DRIVE ASSY	table 8-7 on page 265
RG5-4132-000CN	FIXING/FUSING ASSY 110V	table 8-6 on page 264

Table 8-15. Numerical Parts List (continued)

Part Number	Description	Table and Page
RG5-4133-000CN	FIXING/FUSING ASSY 220V	table 8-6 on page 264
RG5-4134-000CN	FUSING FILM ASSY 110V	table 8-6 on page 264
RG5-4135-000CN	FUSING FILM ASSY 220V	table 8-6 on page 264
RG5-4138-000CN	PAPER CASSETTE ASSY	table 8-9 on page 270
RG5-4139-000CN	LEFT COVER ASSY	table 8-1 on page 255
RG5-4140-000CN	COUPLING ASSEMBLY	table 8-7 on page 265
RG5-4141-000CN	UPPER DELIVERY GUIDE	table 8-6 on page 264
RG5-4152-000CN	LIGHT PIPE ASSY	table 8-1 on page 255
RG5-4158-000CN	RT SIDE PLATE ASSY	table 8-9 on page 270
RG5-4159-000CN	LFT SIDE PLATE ASSY	table 8-9 on page 270
RG5-4160-000CN	GEAR ASSY	table 8-5 on page 261
RG5-4172-000CN	LASER-SCANNER ASSY	table 8-3 on page 257
RG5-4248 (4125) RG5-4249 (4150)	ENGINE CONTROLLER ASSY 100-127 V ENGINE CONTROLLER ASSY 220-240 V	table 8-3 on page 257
RG5-4250-000CN	INTERMEDIATE PCB ASSY	table 8-3 on page 257
RG5-4254-000CN	MP SENSOR CABLE	table 8-3 on page 257
RG5-4255-000CN	DC POWER CABLE	table 8-3 on page 257
RG5-4256-000CN	INTERLOCK SWITCH CABLE	table 8-3 on page 257
RG5-4262-000CN	PAPER FEEDER CABLE	table 8-3 on page 257
RG5-4263-000CN	FRAME GROUND CABLE	table 8-3 on page 257
RG5-4277-000CN	PAPER FEED DRIVE PCB ASSY	table 8-12 on page 276
RG5-4278-000CN	SENSOR CABLE	table 8-12 on page 276
RG5-4280-000CN	RELAY CABLE	table 8-12 on page 276
RG5-4281-000CN	FG CABLE	table 8-12 on page 276
RG5-4391-000CN	PAPER FEED DRIVE ASSY	table 8-8 on page 268
RG5-4394-000CN	LOWER FEED ROLLER ASSY	table 8-11 on page 274
RH2-5348-000CN	CABLE, FLAT	table 8-1 on page 255
RH2-5348-000CN	ECU CABLE	table 8-3 on page 257
RH2-5350-000CN	CABLE, FLAT	table 8-3 on page 257
RH7-1380-000CN	MAIN MOTOR ASSY	table 8-3 on page 257
RH7-1382-000CN	FAN	table 8-3 on page 257
RH7-5209-000CN	SOLENOID	table 8-3 on page 257
RH7-5211-000CN	SOLENOID	table 8-3 on page 257
RH7-5213-000CN	SOLENOID	table 8-8 on page 268
RH7-6051-000CN	MICROSWITCH	table 8-3 on page 257
RS6-0440-000CN	GEAR, 10T	table 8-9 on page 270
RS6-0441-000CN	GEAR, 15T	table 8-4 on page 260
RS6-0442-000CN	GEAR, 14T	table 8-6 on page 264

Table 8-15. Numerical Parts List (continued)

Part Number	Description	Table and Page
RS6-0443-000CN	GEAR, 15T	table 8-6 on page 264
RS6-0444-000CN	GEAR, 26T	table 8-4 on page 260
RS6-0445-000CN	GEAR, 14T	table 8-4 on page 260
RS6-0446-000CN	GEAR, 201T	table 8-7 on page 265
RS6-0447-000CN	GEAR, 58T/92T	table 8-7 on page 265
RS6-0448-000CN	GEAR, 17T/68T	table 8-7 on page 265
RS6-0449-000CN	GEAR, 25T/41T	table 8-7 on page 265
RS6-0450-000CN	GEAR, 31T	table 8-7 on page 265
RS6-0451-000CN	GEAR, 26T	table 8-7 on page 265
RS6-0452-000CN	GEAR, 22T/93T	table 8-7 on page 265
RS6-0453-000CN	GEAR, 23T/46T	table 8-1 on page 255
RS6-0453-000CN	GEAR, 23T/46T	table 8-7 on page 265
RS6-0454-000CN	GEAR, 48T	table 8-7 on page 265
RS6-0455-000CN	GEAR, 67T	table 8-7 on page 265
RS6-0456-000CN	GEAR, 22T/86T	table 8-7 on page 265
RS6-0457-000CN	GEAR, 53T	table 8-7 on page 265
RS6-0458-000CN	GEAR, 26T	table 8-6 on page 264
RS6-0459-000CN	GEAR, 17T	table 8-1 on page 255
RS6-0462-000CN	GEAR, 14T	table 8-10 on page 272
RS6-0463-000CN	GEAR, 13T	table 8-10 on page 272
RS6-0464-000CN	GEAR, 20T	table 8-5 on page 261
RS6-0495-000CN	GEAR, 27T	table 8-8 on page 268
RS6-0497-000CN	GEAR, 39T/34T	table 8-8 on page 268
RS6-0498-000CN	GEAR, 45T	table 8-8 on page 268
RS6-0499-000CN	GEAR, 39T	table 8-8 on page 268
RS6-0500-000CN	GEAR, 17T	table 8-8 on page 268
RS6-0501-000CN	GEAR, 15T	table 8-12 on page 276
RS6-2020-000CN	SPRING, COMPRESSION	table 8-9 on page 270
RS6-2021-000CN	SPRING, COMPRESSION	table 8-9 on page 270
RS6-2022-000CN	SPRING, COMPRESSION	table 8-4 on page 260
RS6-2023-000CN	SPRING, COMPRESSION	table 8-4 on page 260
RS6-2024-000CN	SPRING, COMPRESSION	table 8-5 on page 261
RS6-2025-000CN	SPRING, TENSION	table 8-4 on page 260
RS6-2027-000CN	SPRING, COMPRESSION	table 8-7 on page 265
RS6-2028-000CN	SPRING, TENSION	table 8-7 on page 265
RS6-2029-000CN	SPRING, COMPRESSION	table 8-6 on page 264
RS6-2030-000CN	SPRING, TENSION	table 8-5 on page 261
RS6-2031-000CN	SPRING, COMPRESSION	table 8-7 on page 265

Table 8-15. Numerical Parts List (continued)

Part Number	Description	Table and Page
RS6-2033-000CN	SPRING, COMPRESSION	table 8-5 on page 261
RS6-2034-000CN	SPRING, TORSION	table 8-10 on page 272
RS6-2035-000CN	SPRING, COMPRESSION	table 8-9 on page 270
RS6-2061-000CN	SPRING, TENSION	table 8-8 on page 268
RS6-2062-000CN	SPRING, TENSION	table 8-8 on page 268
RS6-2063-000CN	SPRING, COMPRESSION	table 8-11 on page 274
RS6-2064-000CN	SPRING, COMPRESSION	table 8-12 on page 276
RY7-5052-000CN	TRANSPORT ROLLER KIT	table 8-5 on page 261
RY7-5053-000CN	TRANSPORT BELT KIT	table 8-5 on page 261
VD7-0211-002	FUSE 201	table 8-3 on page 257
VS1-6173-006	CONNECTOR, 6P	table 8-3 on page 257
VS1-6174-006	CONNECTOR	table 8-12 on page 276
WG8-5382-000CN	IC, TLP1242	table 8-3 on page 257
WG8-5382-000CN	IC, TLP1242	table 8-12 on page 276
WT2-5300-000CN	NEED A NAME FOR THIS SWITCH	table 8-8 on page 268
XA9-0605-000CN	SCREW, M4X8	table 8-11 on page 274
XA9-0606-000CN	SCREW, M4X10	table 8-2 on page 256
XA9-0924-000CN	SCREW, W/WASHER M3X8	table 8-12 on page 276
XB6-7400-809	SCREW, MACHINE M4X8	table 8-12 on page 276
XD9-0134-000CN	RING, E	table 8-5 on page 261
XD9-0135-000CN	RING, E	table 8-10 on page 272
XD9-0136-000CN	RETAINING CLIP	table 8-8 on page 268
XD9-0159-000CN	PIN, DOWEL	table 8-4 on page 260