

# OKI

OKI Systèmes (France) S.A.  
44-50, Avenue du Général de Gaulle  
94246 L'Haÿ Les Roses Cedex

10/11/95

|                     |
|---------------------|
| <b>PIECES ML380</b> |
|---------------------|

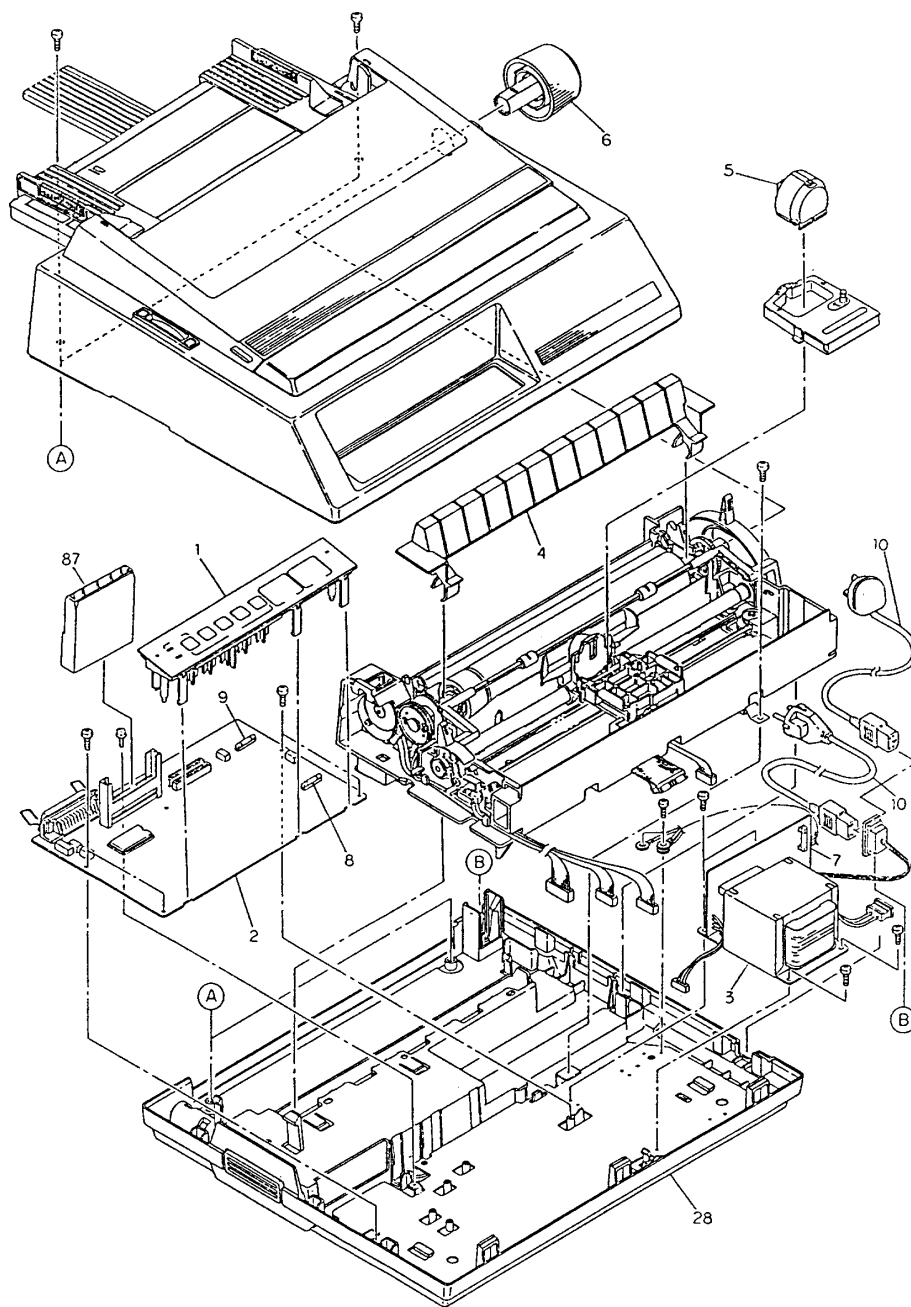


Figure D-1 Printer unit (1/1)

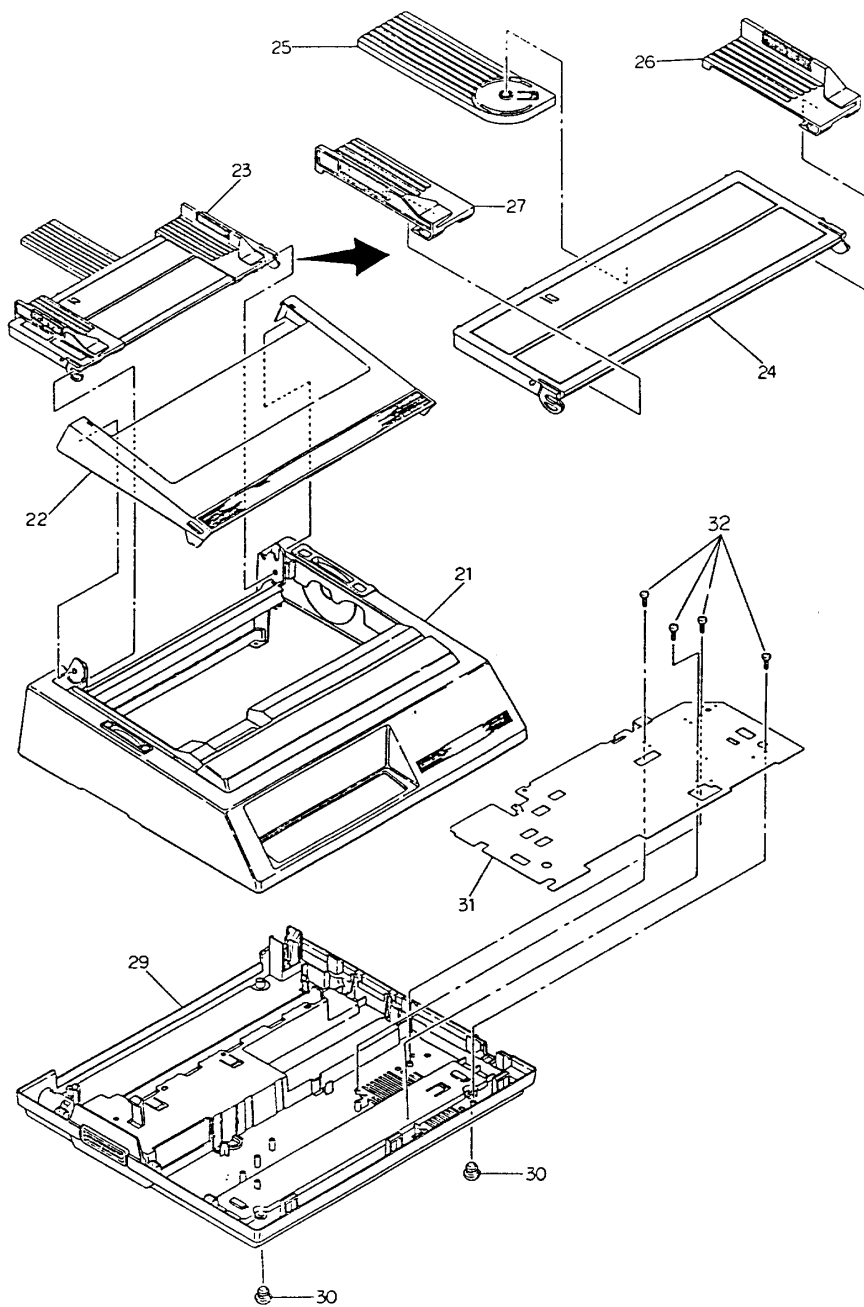


Figure D-2 Cover Part (1/1)

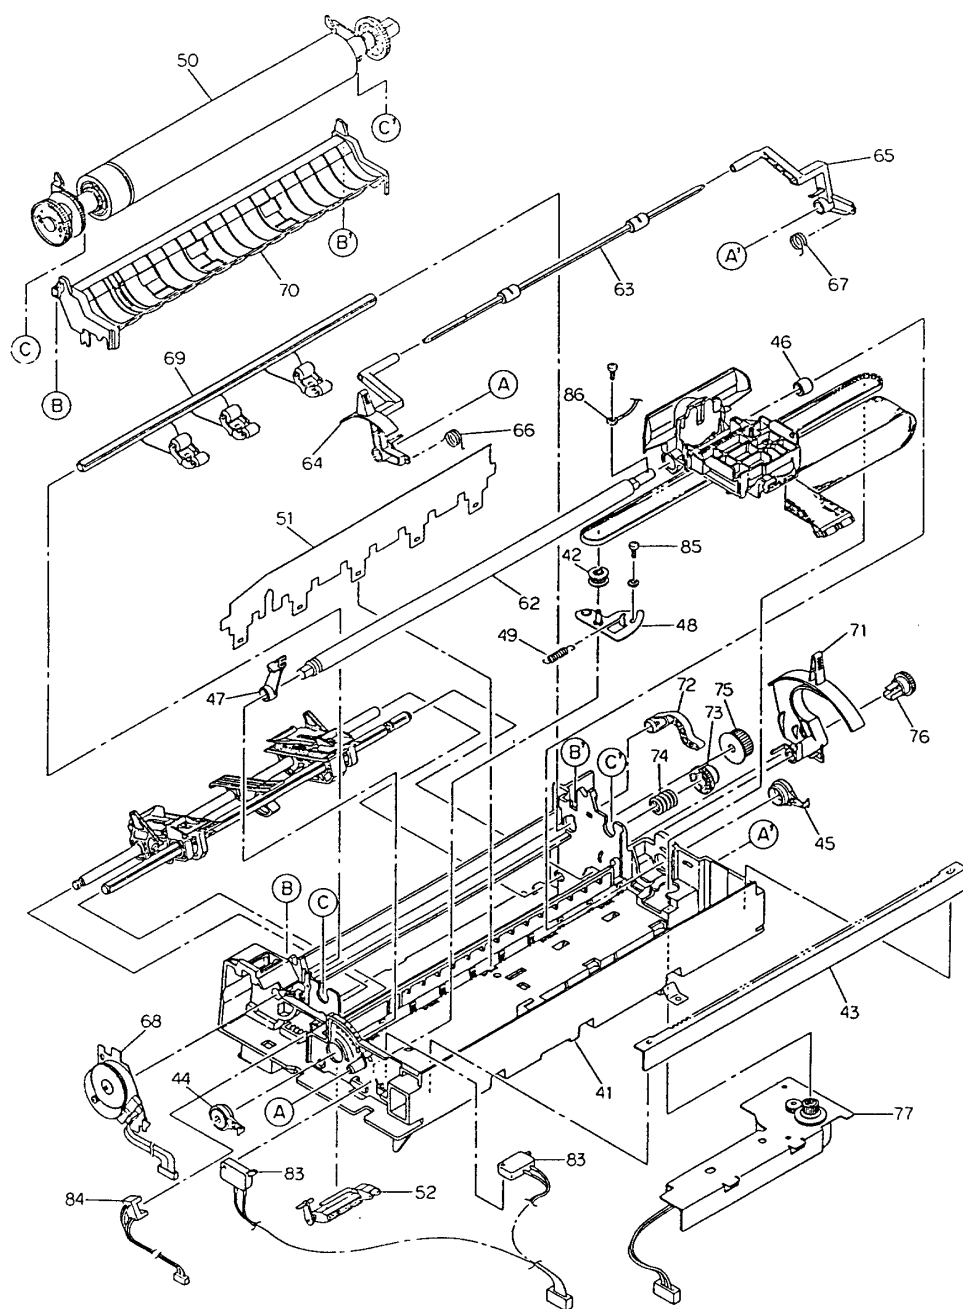


Figure D-3 Printer mechanism (1/2)

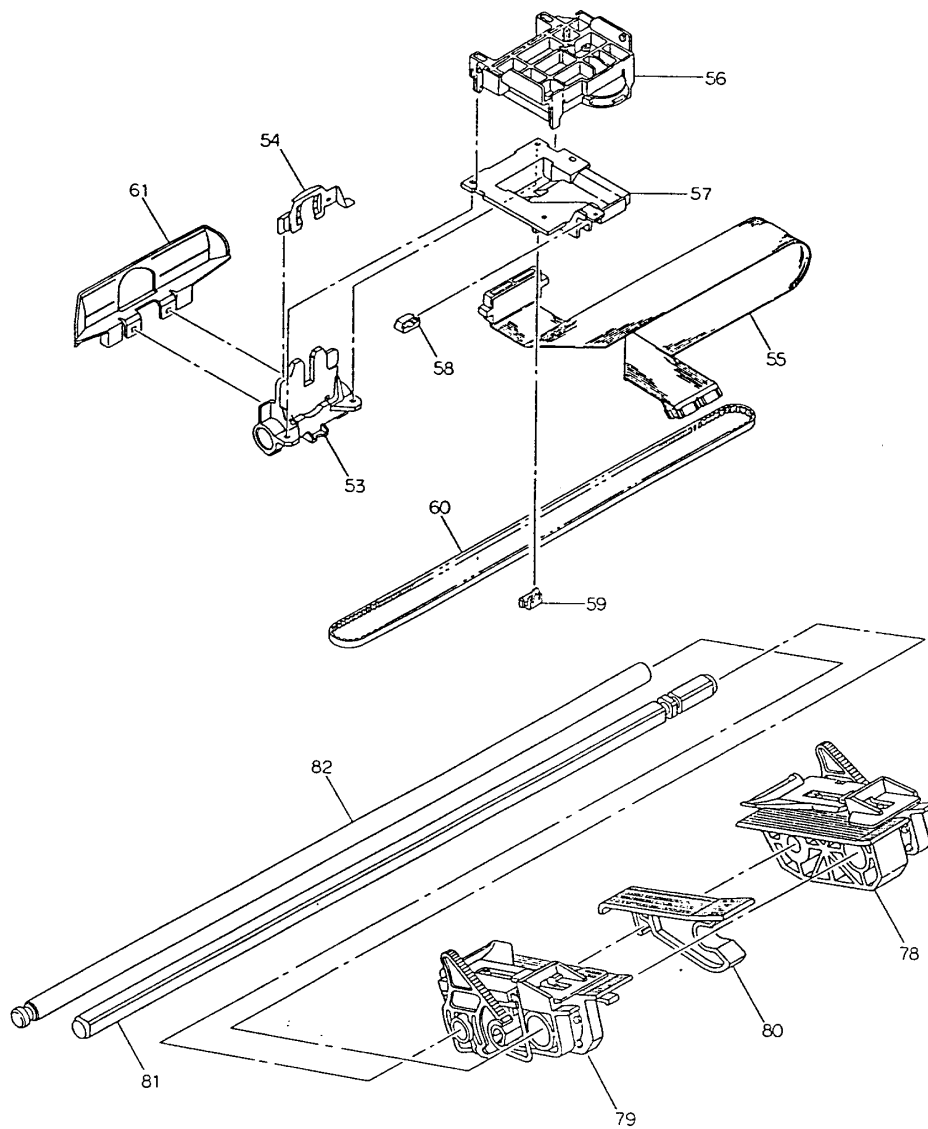


Figure D-3 Printer mechanism (2/2)

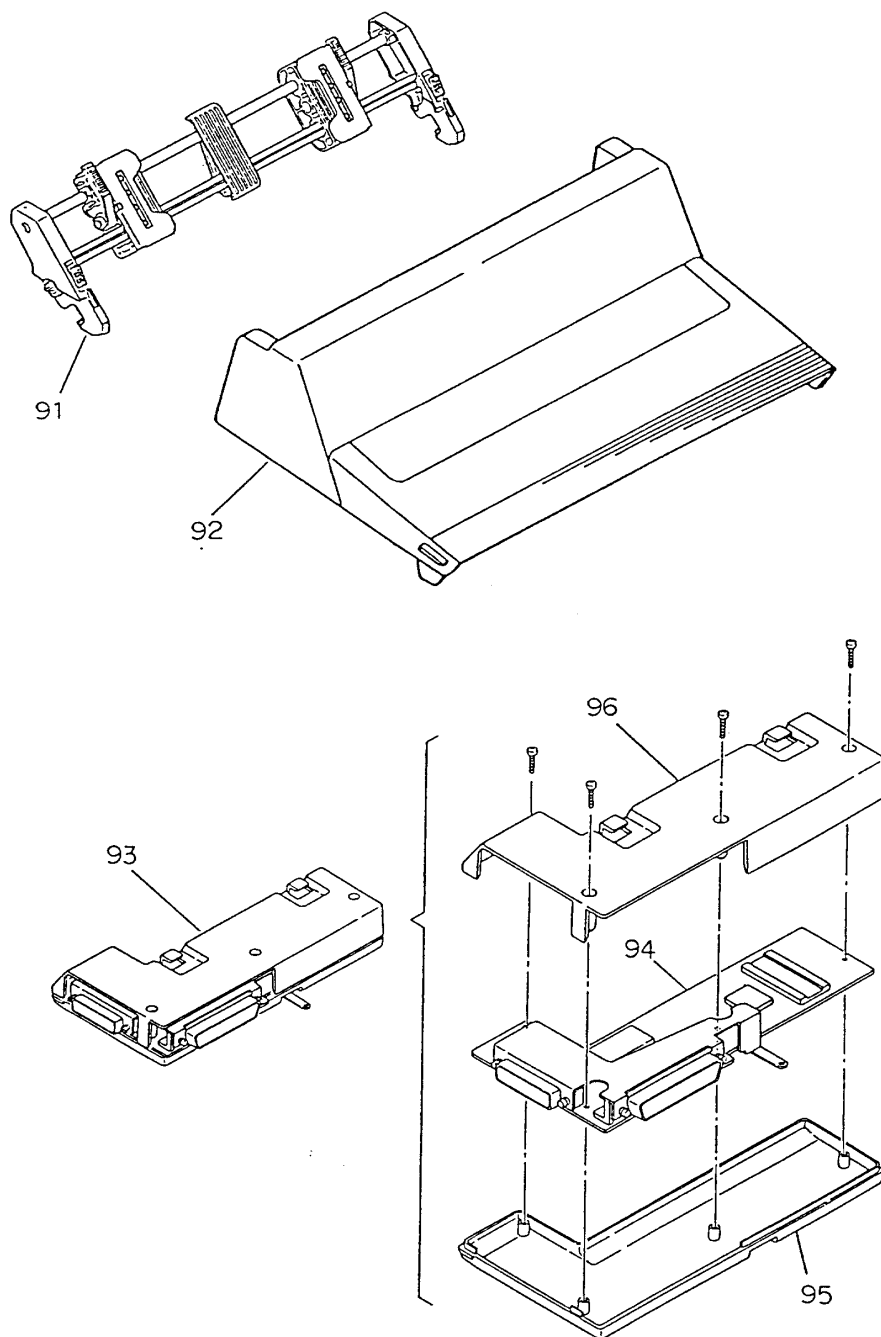


Figure D-4 Option part (1/1)

## Spare parts list (1/3)

| No. | Item No.        | Item name                   | Q'ty | Q'ty of<br>parts for<br>maintenance<br>/year | Remarks                      |
|-----|-----------------|-----------------------------|------|----------------------------------------------|------------------------------|
|     |                 |                             |      | Unit:500                                     |                              |
|     | (Printer unit)  |                             |      |                                              |                              |
| 1   | 3PP4043-3783G2  | Operation panel             | 1    | 3                                            | Without ROM<br>For 220/240 V |
| 2   | 4YA4042-1450G2  | Control board               | 1    | 3                                            |                              |
| 2   | 4YA4042-1450G12 | Control board               | 1    | 3                                            |                              |
| 3   | 4YB4049-1498P1  | Power supply unit           | 1    | 3                                            |                              |
| 4   | 2PP4043-3688P1  | Paper separator             | 1    | 3                                            |                              |
| 5   | 4YA4023-2011G2  | Printhead                   | 1    | 9                                            | For 220/240 V                |
| 6   | 3PP4025-2871P1  | Platen knob                 | 1    | 3                                            |                              |
| 7   | 540A2058T2132   | Fuse,250 V,1.25 A           | 1    | 10                                           |                              |
| 8   | 540A2046M1162   | Fuse,125 V,1.6 A            | 1    | 10                                           |                              |
| 9   | 540A2046M1252   | Fuse,125 V,2.5 A            | 1    | 10                                           |                              |
| 10  | 3YS4011-1187P1  | AC cable                    | 1    | 1                                            | 220V                         |
| 10  | 3YS4011-1213P1  | AC cable                    | 1    | 1                                            | 240V                         |
|     | (Cover parts)   |                             |      |                                              |                              |
| 21  | 1PP4094-1076P2  | Middle cover                | 1    | 3                                            |                              |
| 22  | 1PP4094-1077P1  | Access cover                | 1    | 3                                            |                              |
| 23  | 2PA4094-1078G1  | Sheet separator<br>assembly | 1    | 3                                            |                              |
| 24  | 1PP4094-1079P1  | Sheet separator             | 1    | 3                                            |                              |
| 25  | 1PP4094-1080P1  | Sheet support               | 1    | 3                                            |                              |
| 26  | 2PP4094-1081P1  | Sheet guide(R)              | 1    | 3                                            |                              |
| 27  | 2PP4094-1082P1  | Sheet guide(L)              | 1    | 3                                            |                              |
| 28  | 1PA4094-1073G1  | Lower cover<br>assembly     | 1    | 3                                            |                              |
| 29  | 1PP4094-1074P1  | Lower cover                 | 1    | 3                                            |                              |
| 30  | 4PB4025-1137P1  | Rubber foot                 | 2    | 5                                            |                              |
| 31  | 2PP4094-1085P1  | Shield plate                | 1    | 3                                            |                              |
| 32  | ⊕T2P3-8-HHC     | Self tapping screw          | 4    | 20                                           |                              |

## Spare parts list (2/3)

| No. | Item No.               | Item name                    | Q'ty | Q'ty of<br>parts for<br>maintenance<br>/year | Remarks |
|-----|------------------------|------------------------------|------|----------------------------------------------|---------|
|     |                        |                              |      | Unit:500                                     |         |
|     | (Printer<br>mechanism) |                              |      |                                              |         |
| 41  | 2PA4043-3751G1         | Main chassis                 | 1    | 3                                            |         |
| 42  | 3PP4043-3683P1         | Idle pulley                  | 1    | 3                                            |         |
| 43  | 3PP4043-3755P1         | Space rack                   | 1    | 1                                            |         |
| 44  | 4PP4043-3684P1         | Adjusting bush (L)           | 1    | 3                                            |         |
| 45  | 4PP4043-3685P1         | Adjusting bush (R)           | 1    | 3                                            |         |
| 46  | 4PP4043-3686P1         | Eccentric collar             | 1    | 3                                            |         |
| 47  | 3PP4043-3687P1         | Adjusting lever              | 1    | 3                                            |         |
| 48  | 4PP4043-3756G1         | Idle pulley bracket          | 1    | 1                                            |         |
| 49  | 4LB-193000-1           | Coil spring                  | 1    | 5                                            |         |
| 50  | 3PA4025-2811G5         | Platen assembly              | 1    | 3                                            |         |
| 51  | 3PP4025-2819P1         | Paper pressure<br>guide      | 1    | 3                                            |         |
| 52  | 3PP4043-3690P1         | Bottom paper end<br>lever    | 1    | 3                                            |         |
| 53  | 4PP4043-3764G1         | Carriage frame               | 1    | 3                                            |         |
| 54  | 4PP4025-1048P1         | Head clamp                   | 1    | 3                                            |         |
| 55  | 3PB4043-3766P1         | Head cable                   | 1    | 10                                           |         |
| 56  | 4PA4043-3767G1         | Ribbon feed gear<br>assembly | 1    | 3                                            |         |
| 57  | 2PP4043-3801P1         | Carriage plate               | 1    | 3                                            |         |
| 58  | 4PP4043-3768P1         | Slider                       | 1    | 5                                            |         |
| 59  | 4PP4043-3802P1         | Belt clamp                   | 1    | 3                                            |         |
| 60  | 4PB4043-3759P1         | Space belt                   | 1    | 3                                            |         |
| 61  | 3PP4025-2836P1         | Ribbon protector             | 1    | 5                                            |         |
| 62  | 4PP4043-3769P1         | Carriage shaft               | 1    | 3                                            |         |
| 63  | 4PB4043-3809P1         | Bail bar assembly            | 1    | 3                                            |         |
| 64  | 2PP4043-3696P1         | Bail arm (L)                 | 1    | 3                                            |         |
| 65  | 3PP4043-3697P1         | Bail arm (R)                 | 1    | 3                                            |         |
| 66  | 4PB4025-2843P1         | Bail arm spring (L)          | 1    | 5                                            |         |
| 67  | 4PB4025-2842P1         | Bail arm spring (R)          | 1    | 5                                            |         |
| 68  | 3PB4043-3772P1         | LF motor                     | 1    | 5                                            |         |
| 69  | 3PB4043-3964P1         | Pressure roller<br>assembly  | 1    | 3                                            |         |
| 70  | 3PA4043-3777G1         | Paper chute<br>assembly      | 1    | 3                                            |         |
| 71  | 3PP4043-3703P1         | Release lever                | 1    | 3                                            |         |
| 72  | 3PP4043-3704P1         | Release link                 | 1    | 3                                            |         |
| 73  | 4PP4043-3705P1         | Change gear                  | 1    | 3                                            |         |
| 74  | 4PP4043-3782P1         | Change gear spring           | 1    | 3                                            |         |
| 75  | 4PP4025-2868P1         | Idler gear                   | 1    | 3                                            |         |
| 76  | 4PP4025-2869P1         | Tractor gear                 | 1    | 3                                            |         |
| 77  | 3PB4043-3762P1         | Space motor<br>assembly      | 1    | 5                                            |         |

## Spare parts list (3/3)

| No. | Item No.        | Item name                      | Q'ty | Q'ty of parts for maintenance /year | Remarks            |
|-----|-----------------|--------------------------------|------|-------------------------------------|--------------------|
|     |                 |                                |      | Unit:500                            |                    |
| 78  | 4PA4043-3778G1  | Pin tractor assembly (R)       | 1    | 3                                   |                    |
| 79  | 4PA4043-3779G1  | Pin tractor assembly (L)       | 1    | 3                                   |                    |
| 80  | 4PP4043-3741P1  | Center guide                   | 1    | 3                                   |                    |
| 81  | 4PB4043-3865P1  | Drive shaft                    | 1    | 1                                   |                    |
| 82  | 4PP4043-3784P1  | Lock shaft                     | 1    | 1                                   |                    |
| 83  | 4YX4043-3780G1  | Microswitch assembly           | 1    | 3                                   |                    |
| 84  | 4YX4043-3781G1  | Paper end sensor               | 1    | 3                                   |                    |
| 85  | 4PP4050-2621P1  | Self tapping screw             | 1    | 3                                   |                    |
| 86  | 4YS4011-1607G2  | Earth code                     | 1    | 3                                   |                    |
| 87  | 3PP4043-3742P1  | IC card guide                  | 1    | 3                                   |                    |
|     | (Option parts)  |                                |      |                                     |                    |
| 91  | 3PA4025-2971G1  | Tractor unit                   | 1    | 3                                   |                    |
| 92  | 1PP4094-1084P1  | Tractor cover                  | 1    | 3                                   |                    |
| 93  | 4YA4042-1451G2  | RS-232C interface module       | 1    | 3                                   |                    |
| 94  | 4YA4042-1451G11 | RS-232C interface board        | 1    | 3                                   | Without ROM, cover |
| 95  | 2PP4043-3717P1  | Serial interface cover (lower) | 1    | 3                                   |                    |
| 96  | 2PP4043-3718P1  | Serial interface cover (upper) | 1    | 3                                   |                    |